规格：210x285mm 颜色：黑色 材料：157克铜版纸

DJ0502BK

IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

ELECTRIC FIREPLACE

SSDQ-DBL-36A

NO VENTING REQUIRED

WARNING Read and understand this entire owner's manual, including all safety information before plugging in or using this appliance. Failure to do so could result in fire, electric shock, or serious personal injury.

CERTIFIED UNDER CANADIAN AND AMERICAN NATIONAL STANDARDS. ETL

1

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS 4
1.0 PACKING LIST 6
1.1 DIMENSIONS 8
2.0 ELECTRICAL INSTALLATION NOTES 10
2.1 GENERAL INSTRUCTIONS 10
3.0 INSTALLATION INSTRUCTIONS 11
3.1 UNPACKING AND TESTING APPLIANCE WALL 11
3.2 GROUNDING APPLIANCE 11
3.3 ASSEMBLY 12
Wall Hanging 13
Built-in Construction 17
4.0 FINISHING 20
5.0 OPERATING INSTRUCTIONS 20
5.1 MAIN POWER BUTTON 20
5.2 CONTROL PANEL / REMOTE CONTROL OPERATION 20
5.3 REMOTE CONTROL 22
6.0 TROUBLE SHOOTING GUIDE 23
7.0 MAINTENANCE 25
7.1 PARTIALLY REFLECTIVE GLASS CLEANING 25
7.2 SCHEMATIC DIAGRAM 26
8.0 LIMITED WARRANTY 29
9.0 Q&A AND CONTACT INFORMATION 27

2

IMPORTANT SAFETY INSTRUCTION

WARNING

These instructions should be carefully read before installation. The booklet must be kept and delivered to the new user. The Manufacturer reserves the right to vary the features of the product without prior notice. The technical data are indicative only.

1. **THIS APPLIANCE IS NOT WHEN OPERATED AND CAN CAUSE SEVERE BURNS IF TOUCHED.**
2. Do not operate appliance before reading and understanding instructions. Failure to operate appliance could cause fire or injury.
3. Keep this product away from combustible materials at least 2 feet (0.9 m), such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 m). **WARNING:** In order to avoid overheating, do not cover the heater. The heater may be inadequate when installed it in a Recreational Vehicle.
4. Risk of burns. Please do not touch the appliance directly after use and cooling it for a while. Please turn off the control and then remove plug if you want discovered power of appliance.
5. Do not install damaged or incomplete components.
6. Young children should be carefully supervised when they are in the same room with the appliance. They may be susceptible to accidental contact burns.
7. Do not install damaged, incomplete or substitute components.
8. To prevent accidental swallowing, small kits should be kept away from children and infants.
9. There is small batteries in the remote. Please keep away from children.
10. Do not install battery in the wrong direction, put it close to fire or into other type of batteries.
11. Ensure you have adequate safety measures to protect infants/toddlers from touching hot surfaces.
12. It is imperative that the control compartments, circulating blower and ventilation channel in the appliance are kept clean. The appliance should be inspected before use and examined by a qualified service person once a year.
13. Under no circumstances should this appliance be modified.
14. Do not use this appliance if any part has been in contact with water. Please call a qualified service technician to inspect the appliance immediately and to replace the parts which has been in contact with water.
15. Do not operate the appliance when the glass door was removed, cracked or broken. Replacement of the glass service should be done by a qualified service person.
16. Do not strike the glass door of appliance.
18. Keep the packaging material away from children and dispose of the materials in a safe manner.

4

18. Always unplug appliance when not in use.
19. Do not operate this appliance with a damaged cord or plug after the appliance malfunctions, please return appliance to authorized service facility for electrical or mechanical adjustment or repair.
20. Do not use appliance outdoors.
21. Never place appliance where it may fall into a bathtub or other water container.
22. Do not run cord under carpet. Do not cover cord with throw rugs, furnitures etc. Place cord away from clutered area and where it will not be tripped over.
23. Connect to properly grounded outlets only.
24. Do not insert or allow foreign objects to enter any ventilation or exhaust valve as this may cause an electric shock or fire, or damage the appliance.
25. To prevent fire cases, do not block the air intake or exhaust valve in any way. Do not use appliance on soft surfaces, such as carpet, where exhaust valve may become blocked.
26. Always plug appliance directly into a wall outlet/receptacle. Do not use extension cord or relocatable power tap (outlet/power strip).

SAVE THESE INSTRUCTIONS

5

1.0 PACKING LIST

No.	Description	Quantity
1	Front Frame	1 pc
2	Electric Fireplace	1 pc
3	Mounting Bracket (Pre-attached)	1 pc
4	Manual	1 pc
5	Decorative Stuff	Varies
6	Remote Control(Battery set included)	1 pc



6



HARDWARE INCLUDED



Part	Description	
A	Anchor Screw	6
B	Wall Anchor	6
C	M4×12 screw	2

7

1.1 DIMENSIONS

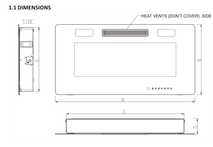

Model	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)	A (in.)	B (in.)	C (in.)	D (in.)	E (in.)
DSQ-DBL-36A	762	480	550	98	420	30	18.11	21.65	3.86	16.54
DSQ-DBL-36B	914	480	702	98	420	36	18.11	27.64	3.86	16.54
DSQ-DBL-40A	1066	480	854	98	420	42	18.11	33.62	3.86	16.54
DSQ-DBL-50A	1270	480	1058	98	420	50	18.11	41.65	3.86	16.54
DSQ-DBL-60A	1524	480	1312	98	420	60	18.11	51.65	3.86	16.54

8

19. Keep this product away from combustible materials at least 2 feet (0.9 m), such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 m). **WARNING:** In order to avoid overheating, do not cover the heater. The heater may be inadequate when installed it in a Recreational Vehicle.
20. Do not use appliance outdoors.
21. Never place appliance where it may fall into a bathtub or other water container.
22. Do not run cord under carpet. Do not cover cord with throw rugs, furnitures etc. Place cord away from clutered area and where it will not be tripped over.
23. Connect to properly grounded outlets only.
24. Do not insert or allow foreign objects to enter any ventilation or exhaust valve as this may cause an electric shock or fire, or damage the appliance.
25. To prevent fire cases, do not block the air intake or exhaust valve in any way. Do not use appliance on soft surfaces, such as carpet, where exhaust valve may become blocked.
26. Always plug appliance directly into a wall outlet/receptacle. Do not use extension cord or relocatable power tap (outlet/power strip).

SAVE THESE INSTRUCTIONS

9

NOTE:
1. The size of column B left some space for the main power switch on the top, you can also choose 1.5# inch for full embedding, since the touch screen also has a main power switch.
2. Please leave enough space to pace the power cord on the right side of the fireplace.

LISTING APPROVALS

This appliance has quilfied with the ETL Standards for fixed and location-dedicated electric room appliances in the United States and Canada. If you need assistance during installation, please contact your local dealer.

NOTE: This appliance must be electrically wired and grounded in accordance with the local codes or, in the absence of local, with National Electric Code ANSI/NFPA 70-latest edition in the United States or the Canadian Electric Code, ETL in Canada.

Model No.	
Description	Wall-mount, Recessed or free standing Appliance
Voltage	120VAC
Watts	Max 1200W
Amps	12.5AMP
Hz	110/60Hz

Model	A(mm)	B(mm)	C(mm)	A(in.)	B(in.)	C(in.)
SSDQ-DBL-36A	670-680	91-100	430-450	26.37-26.77	3.58-3.94	16.93-17.7
SSDQ-DBL-36A	717-727	91-100	430-450	28.23-28.62	3.58-3.94	16.93-17.7
SSDQ-DBL-40A	869-879	91-100	430-450	34.21-34.61	3.58-3.94	16.93-17.7
SSDQ-DBL-50A	1073-1083	91-100	430-450	42.24-42.64	3.58-3.94	16.93-17.7
SSDQ-DBL-60A	1327-1337	91-100	430-450	52.24-52.64	3.58-3.94	16.93-17.7

10

A FIRE RESULT MAY CAUSING PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH IF THE CUSTOMER DOES NOT FOLLOW THE INSTALLATION, OPERATION, AND MAINTENANCE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS IN THE VICINITY OF THIS APPLIANCE.
THIS APPLIANCE IS HEAVY. THUS THERE NEED TWO PEOPLE FOR INSTALLING.
IN ANY WAY, HEATER VENTS ON THE ELECTRIC APPLIANCE CAN NOT BE COVERED. AS IT MAY LEADE A FIRE HAZARD.
THE FIRE HAZARD RESULT.
Follow all national and local electrical codes.

1. The heater should be installed only using the mounting brackets we provided.
2. The heater can not be recessed in the ceiling. There must be enough space around the top of the heater to ensure adequate ventilation.
3. The heater should be placed at least 60cm away from surrounding walls.
4. At least 90 cm should always be left in front of the heaters to ensure safety.
5. The Heater can not be located either directly below, or in front of a socket outlet.
6. The heater must be installed to prevent any control switches from being able to be touched by anyone who is in the shower or bath.
7. Make sure that there is no possibility of inflammable material, combustible material, or curtains coming into contact with the heater.
8. DO NOT USE THE HEATER WITHOUT SUPERVISION.

3.0 INSTALLATION INSTRUCTIONS

3.1 UNPACKING AND TESTING APPLIANCE WALL

Carefully remove the appliance from the box. Before installing the appliance, make sure the appliance operates properly by plugging the power supply cord into a conveniently located 120 Volt grounded outlet.

3.2 GROUNDING APPLIANCE

This appliance is for use on 120 Volts. The cord has a plug as shown in (A). An adapter as shown in (C) is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.
To disconnect the appliance, turn the controls off, then remove the plug from the outlet.

GROUNDING METHODS
GOOD
NO GROUND
GROUNDING PIN
GROUNDED
GROUNDED
GROUNDED