




ASSEMBLY INSTRUCTIONS

DJ0703

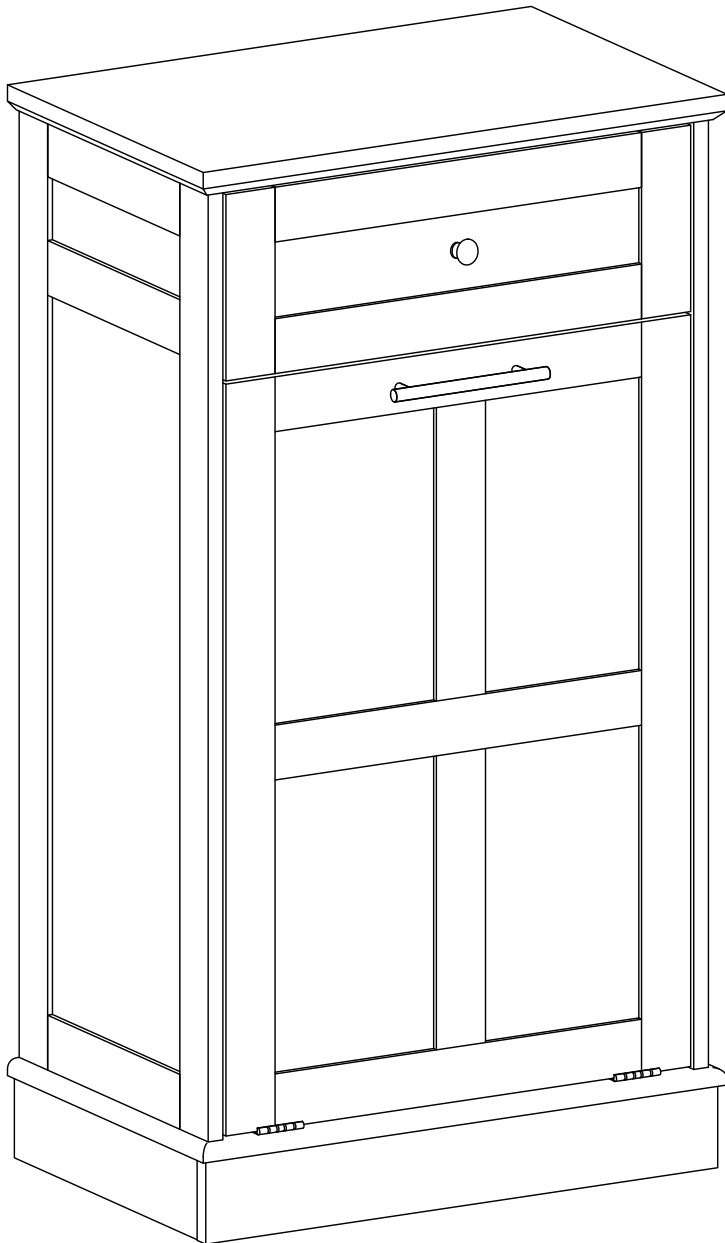

"SAFETY TIPS: Static charge may cause dust on foam – clean with a dry or damp cloth. Small foam strands may be present – handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines."

Installation Video QR



DJ0703

<https://vimeo.com/1069520017>


VERSION-01

Notice:

1. Please unbox the item from the side with an open label and put a carpet on the floor to avoid scratching it.
2. Follow the installation instructions carefully. before installation, please ensure that all accessories are present. For large items, we advise you to install them with 2 or more people for faster and safer installation.
3. Do not fully tighten the screws during initial assembly. Fully tighten the screws only once all pieces are correctly assembled. Do not use power tools.
4. Do not stand, climb, or swing on the product.
5. If you encounter any problems during installation, please contact our customer service.





Recommended installers:2




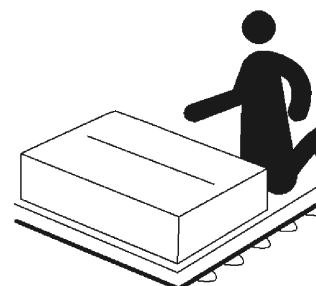


Put a carpet on the floor before unpcking

Parts and Operation Elements


			
① 1pc	② 1pc	③ 1pc	④ 1pc
			
⑤ 1pc	⑥ 1pc	⑦ 1pc	⑧ 1pc

Parts and Operation Elements

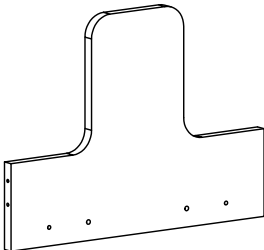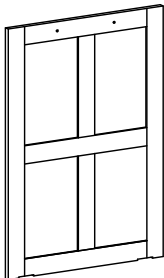
			
9 1pc	10 1pc	11 1pc	12 1pc
			
13 1pc	14 1pc	15 1pc	16 1pc
			
17 1pc	18 1pc	19 1pc	20 1pc
			
21 1pc	22 1pc		




Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size




A x 32+2



ø15x9mm

B x 44+2




ø8x30mm

C x 22+2



ø3.5x12mm


D x 10+2



E x 2



F x 1



M4x10mm

G x 1




ø4x30mm

H x 14+2



W x 2




ø3x14mm











J x 10+2




K x 1

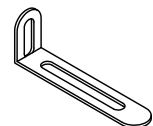


L x 1

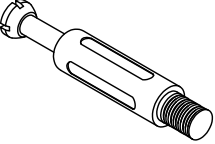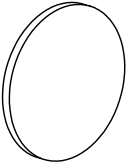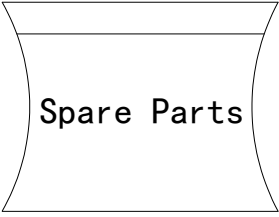 CL x 1	 CR x 1	 DL x 1	 DR x 1
 $\phi 4 \times 35 \text{mm}$ M x 1	 N x 1	 $\phi 4 \times 12 \text{mm}$ Y x 1	 $\phi 5 \times 38 \text{mm}$ P x 4
 $\phi 3.5 \times 14 \text{mm}$ Q x 8+2	 $\phi 6 \times 30 \text{mm}$ R x 12+2	 M4x22mm S x 2	 $\phi 3 \times 12 \text{mm}$ T x 20+2
 U x 12+2	 V x 44+2	 Spare Parts	

Explosion Diagram

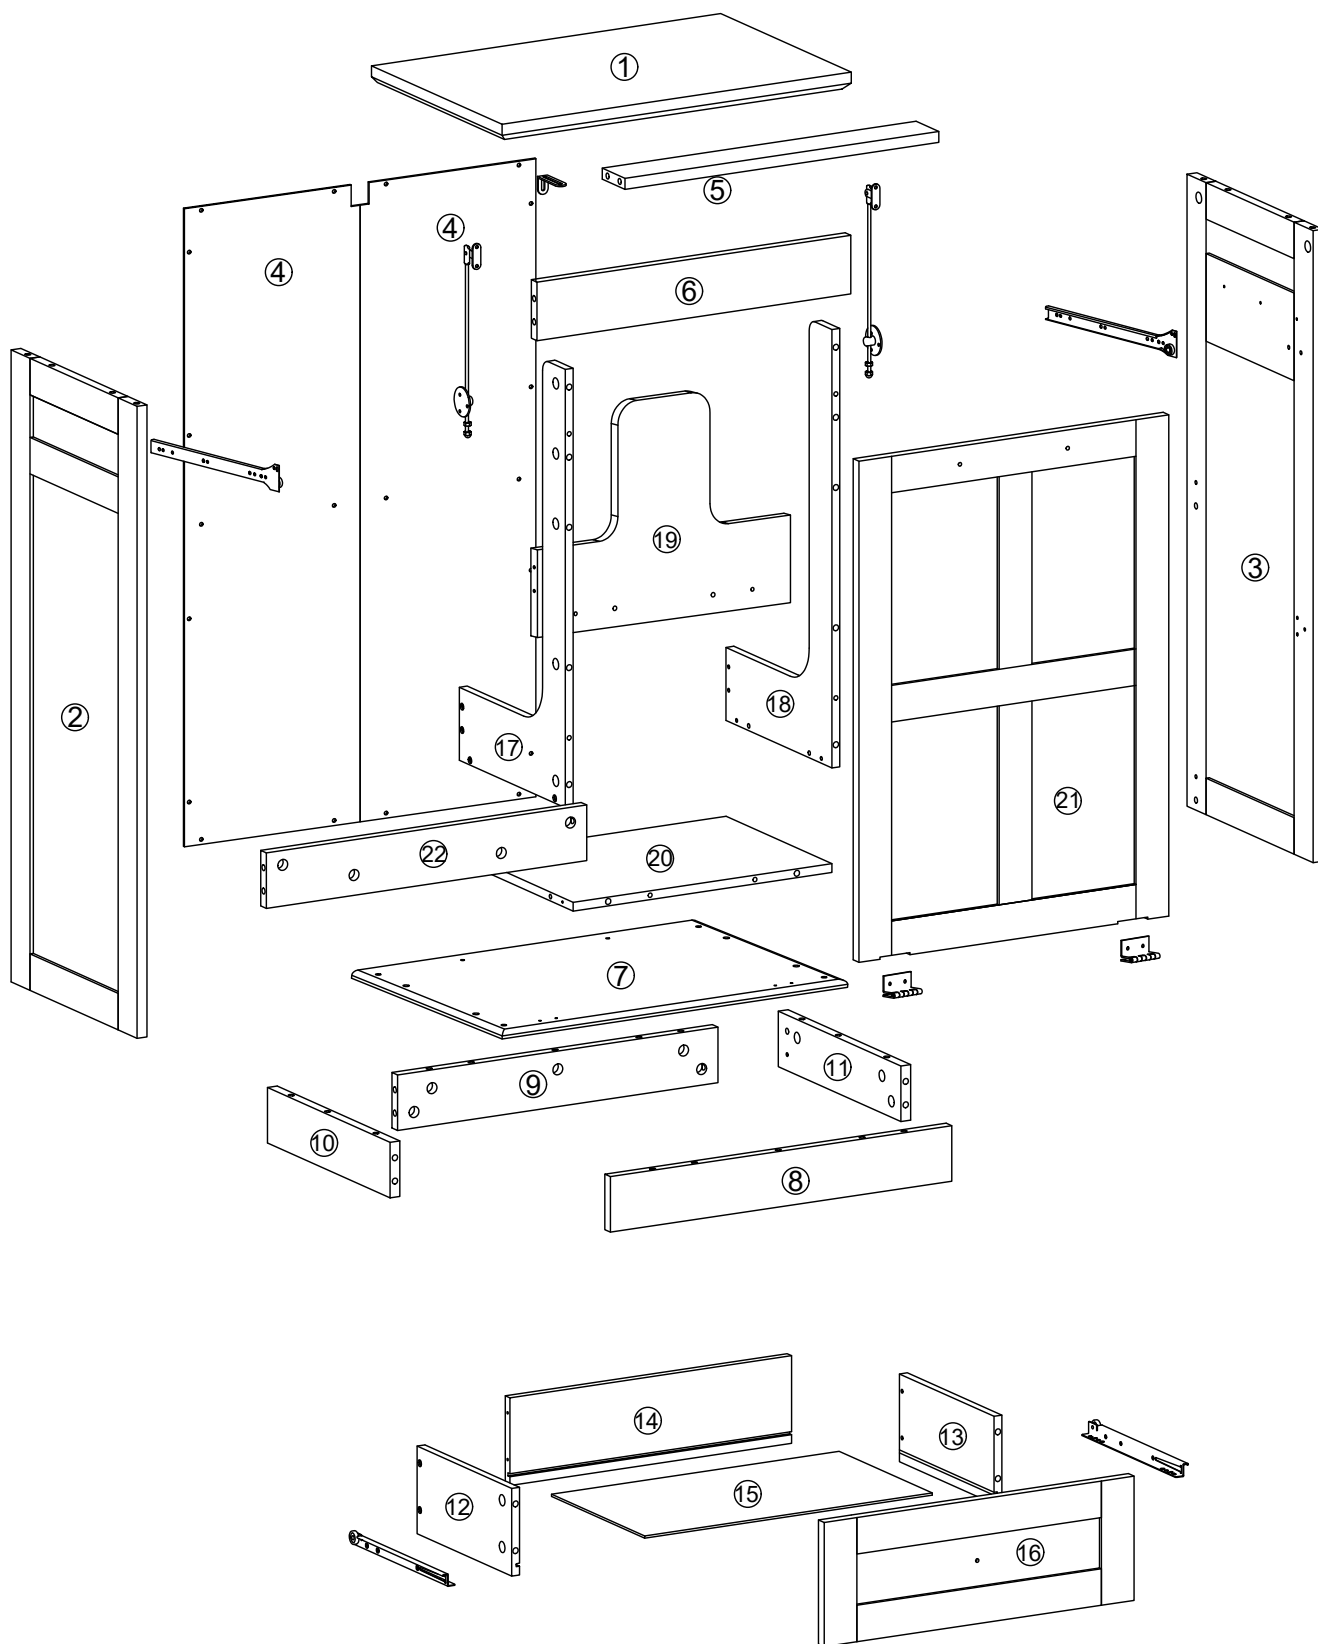

1






CLx1





CRx1




Dx6

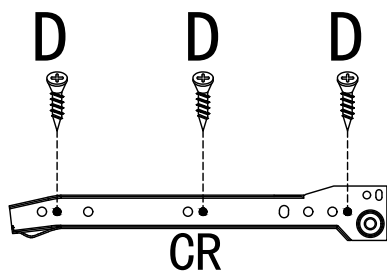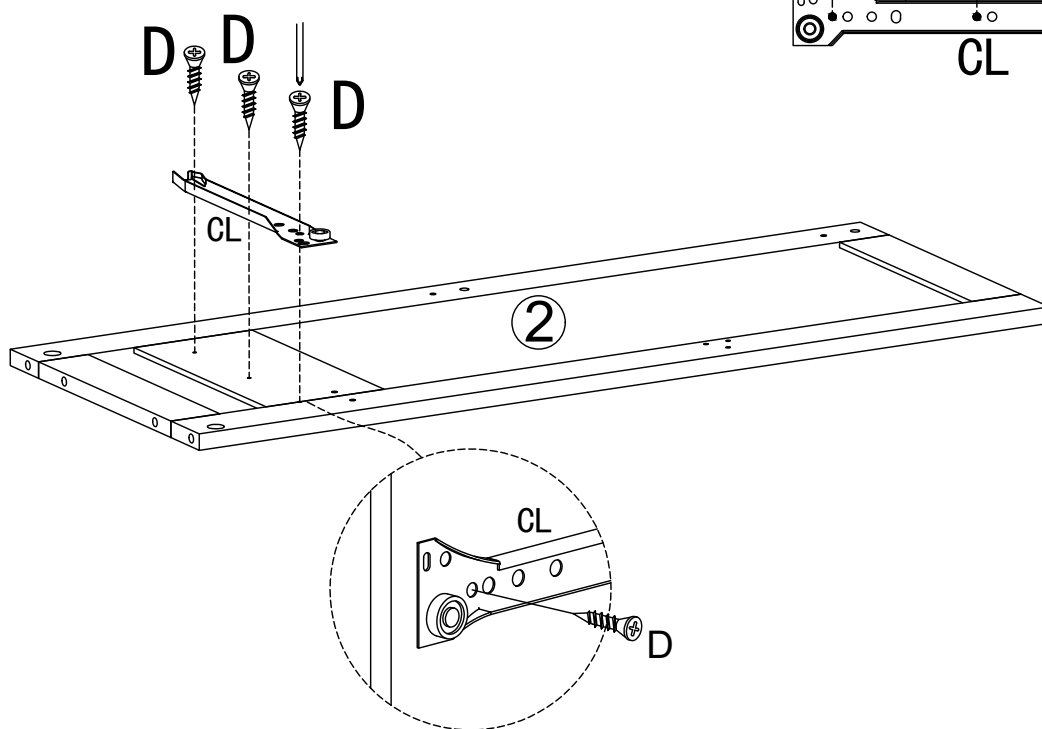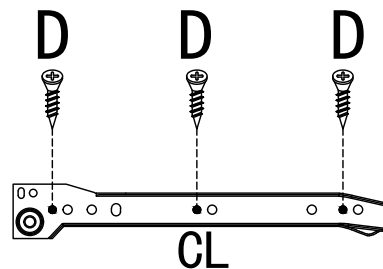





CR

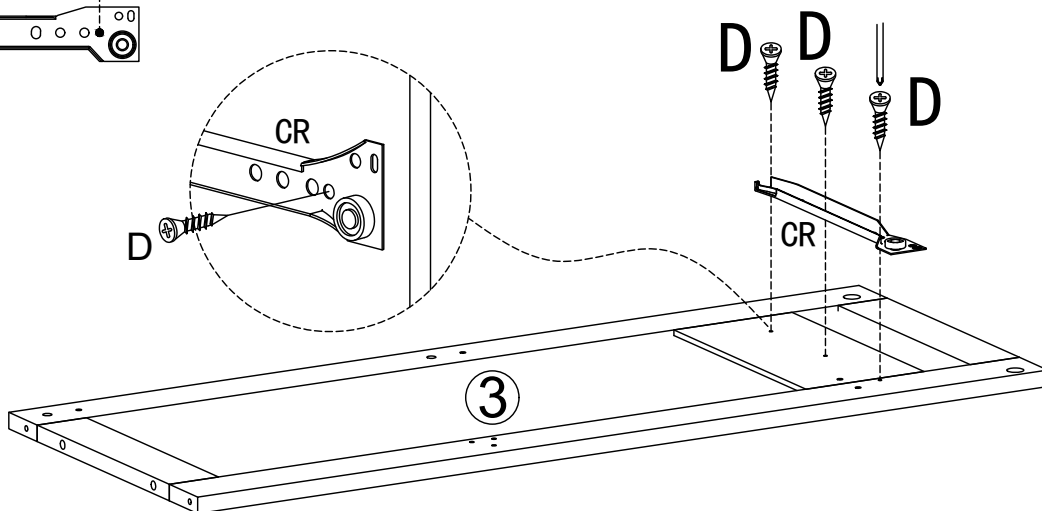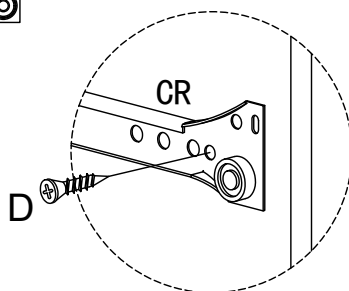


2



Ax20

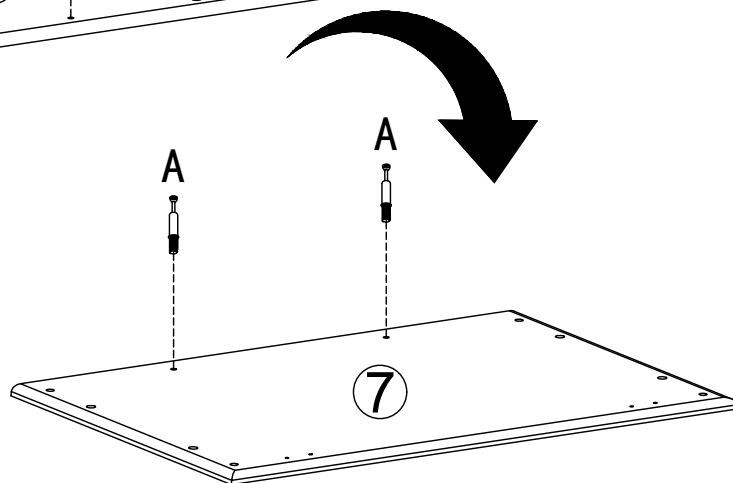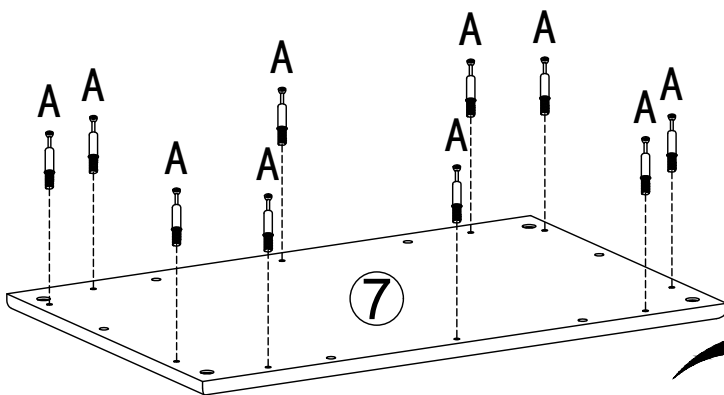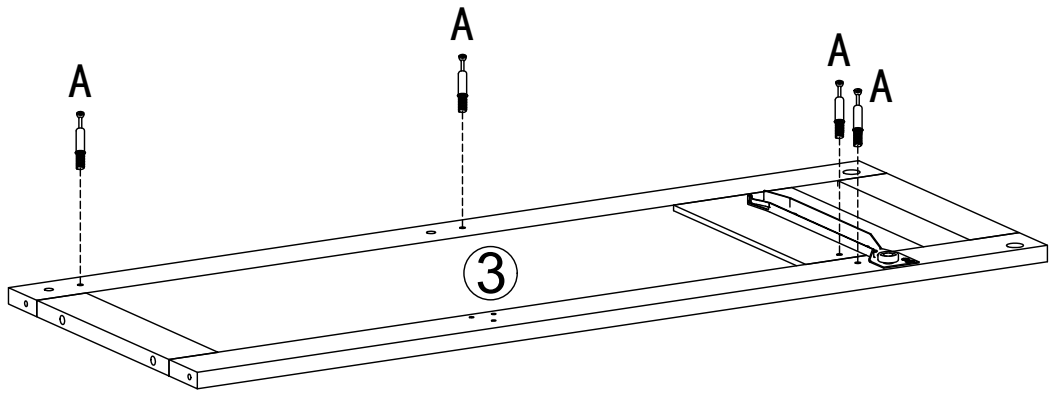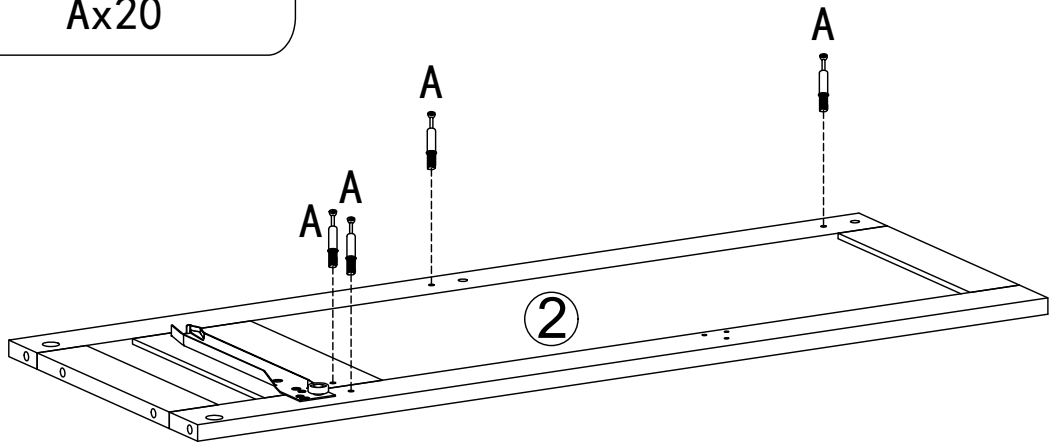

3




Ax4





Lx1



Yx1



Ux12

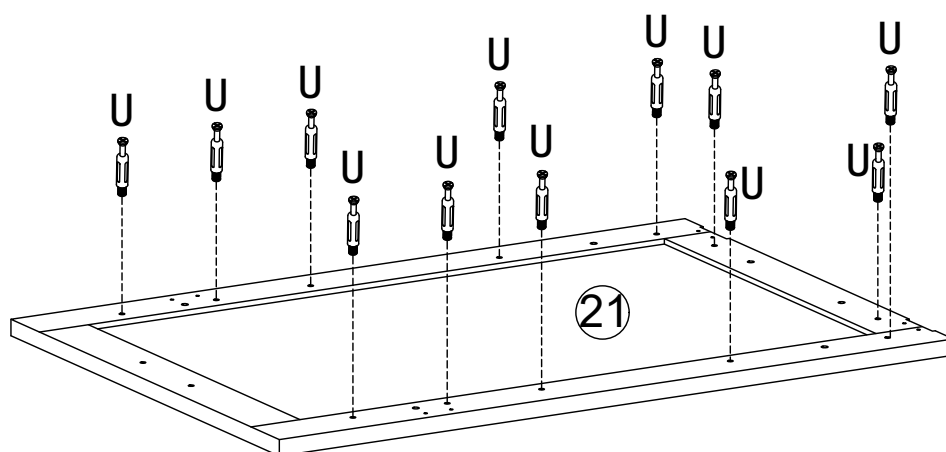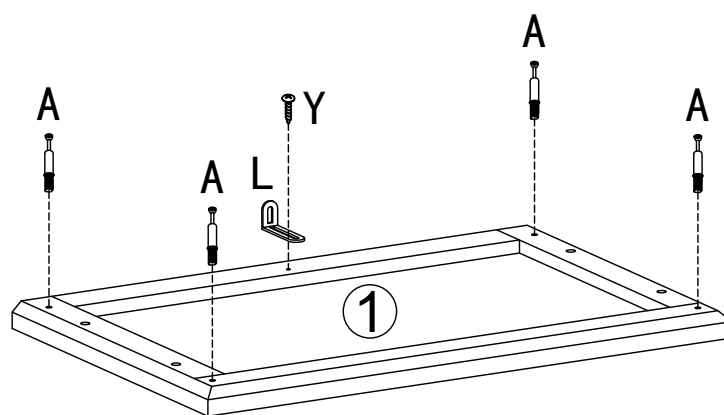

4



Cx4



Bx8




Vx8

Cam Lock/Dowel Placement Supplement

CORRECT


1

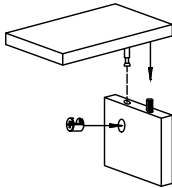

When inserting the Cam lock, make sure that the open End of the cam Lock faces the Cam Screw Entry. The Dowel will be inserted in the hole NEXT to the Cam Lock/Cam Screw hole.


INCORRECT

2

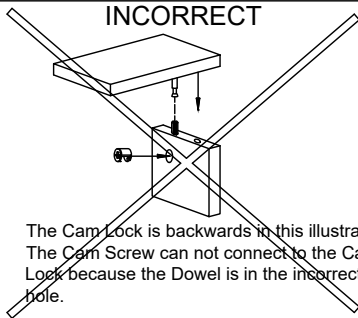



The Cam Lock is backwards in this illustration. The Cam Screw can not connect to the Cam Lock because the Dowel is in the incorrect hole.

3



To tighten, turn the Cam Lock CLOCKWISE until the arrow or "Δ" signs point AWAY from the connected Panel.

***NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.**

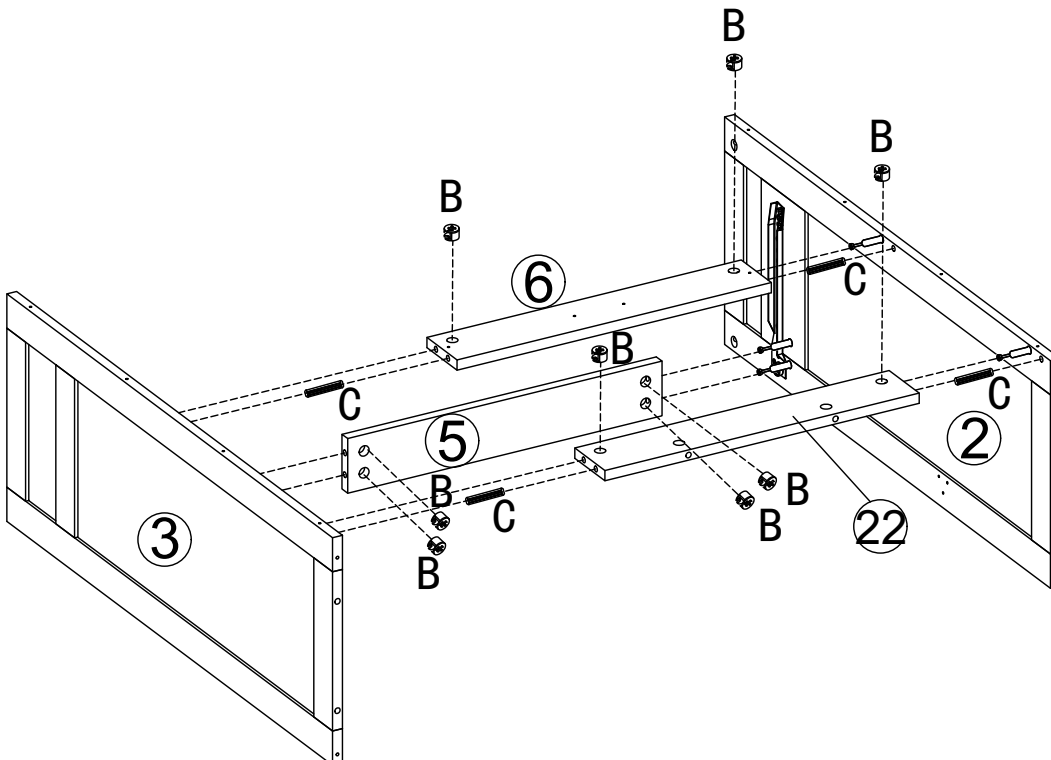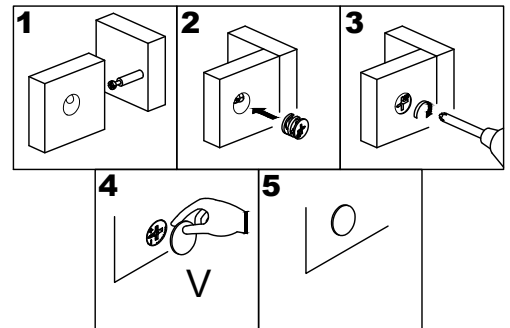


5



Bx2





Cx4




Px4



Vx2

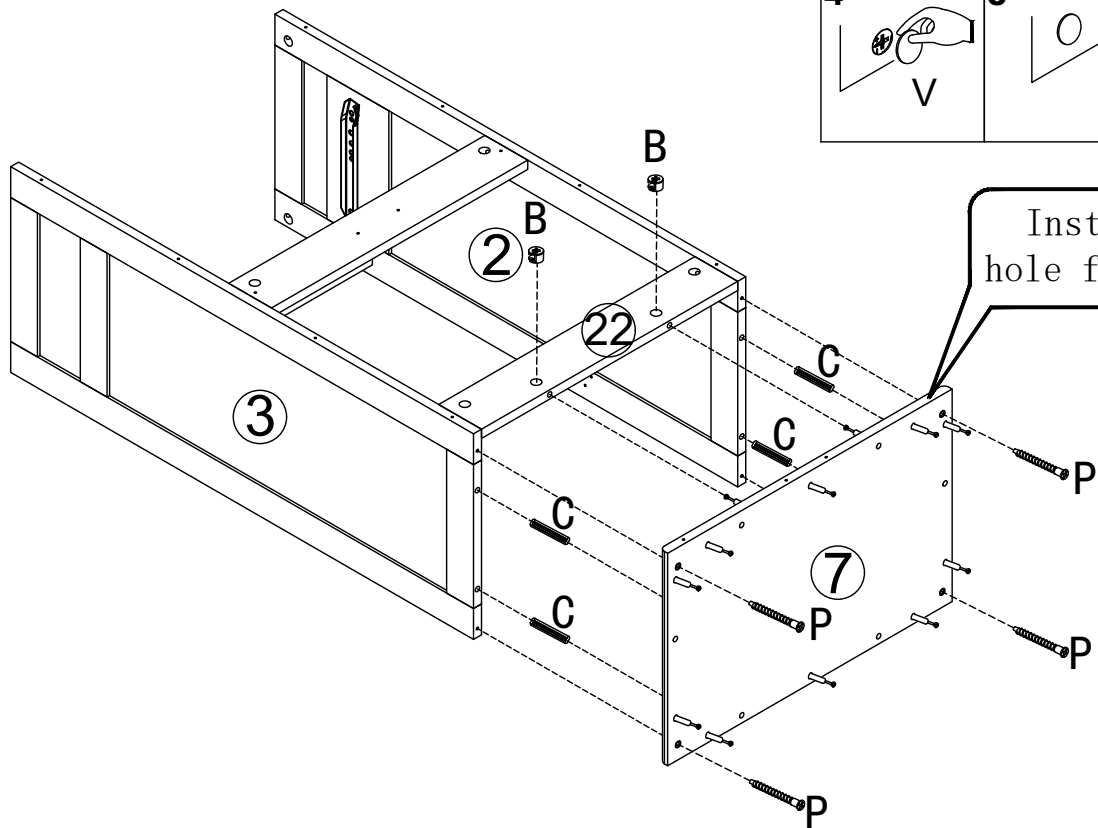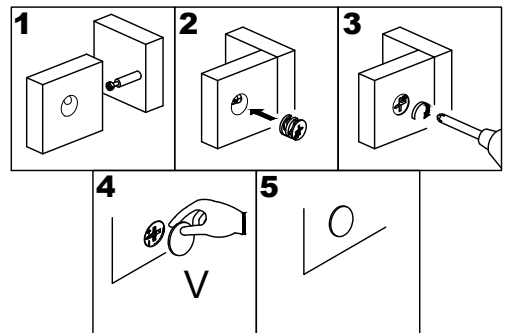

6



Ax4









Bx4



Cx4




Vx4

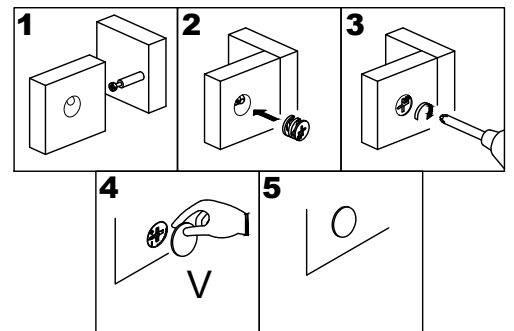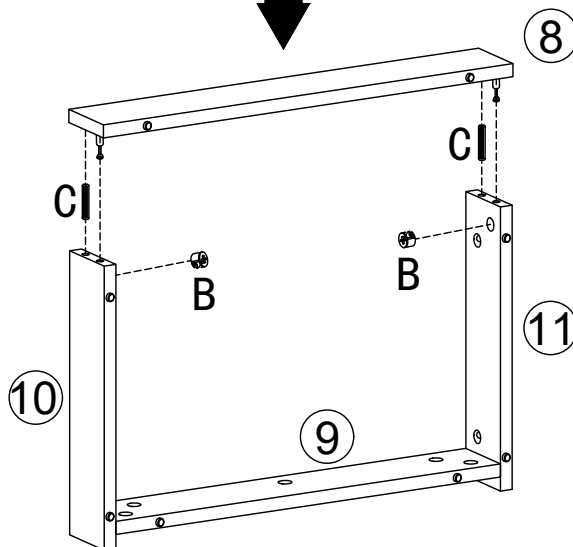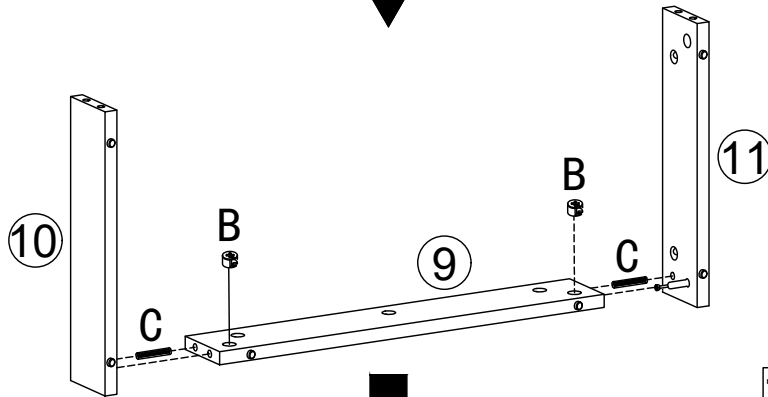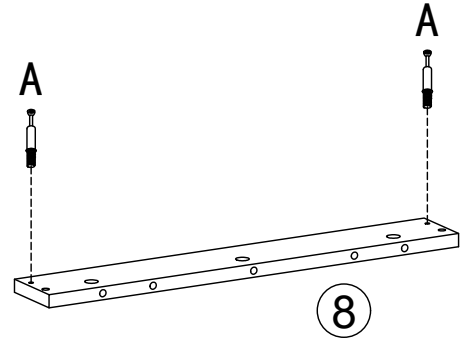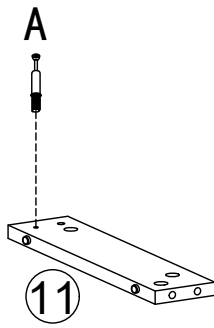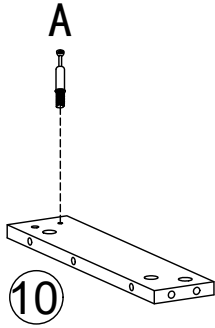

7





Bx10



Cx6




Vx10

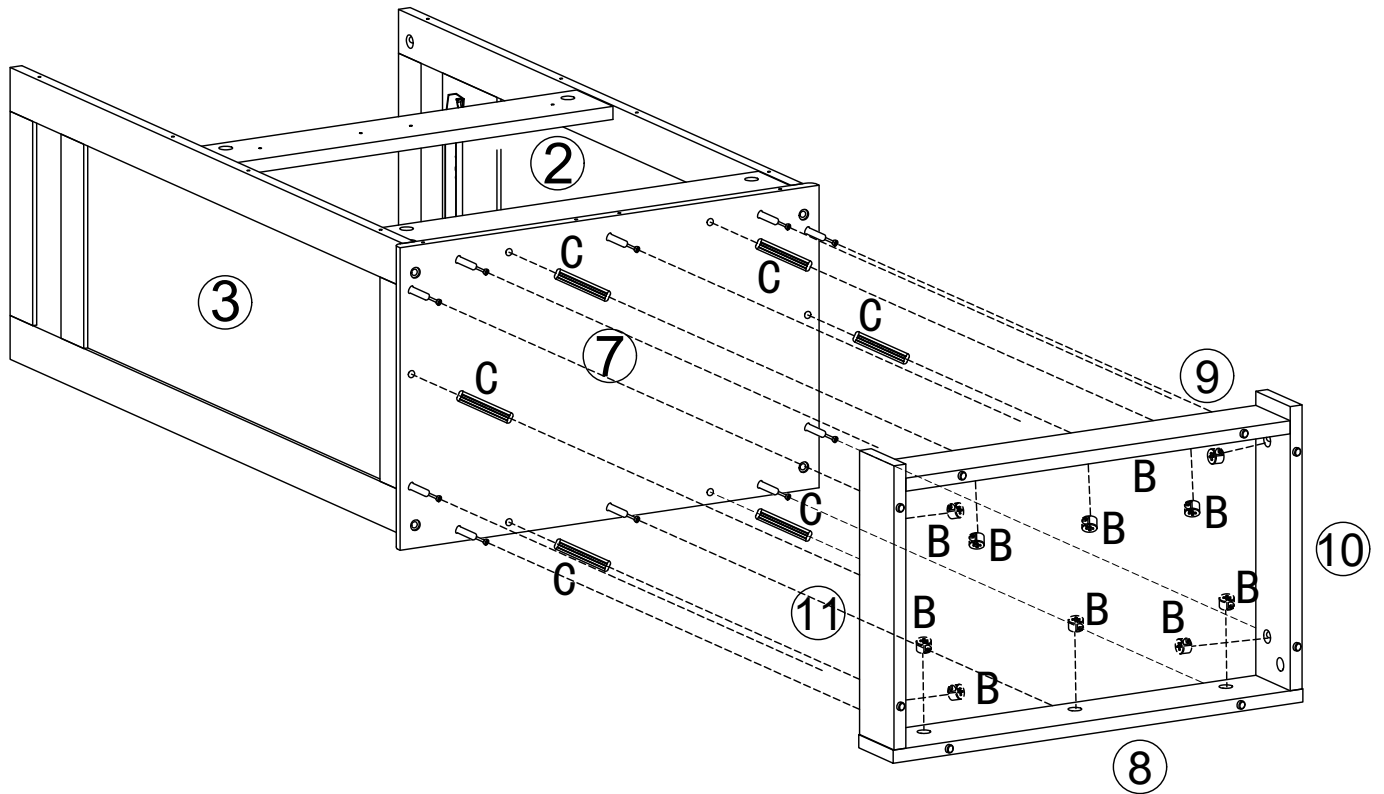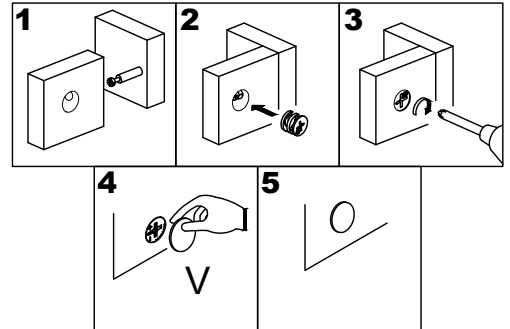

8





Bx4




Cx4




Vx4

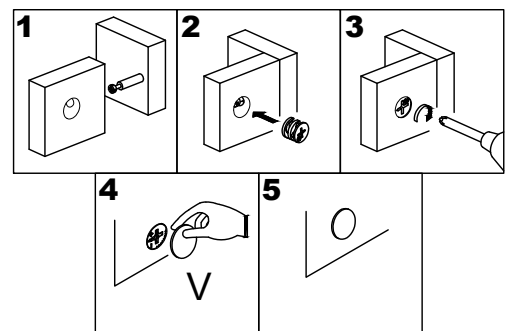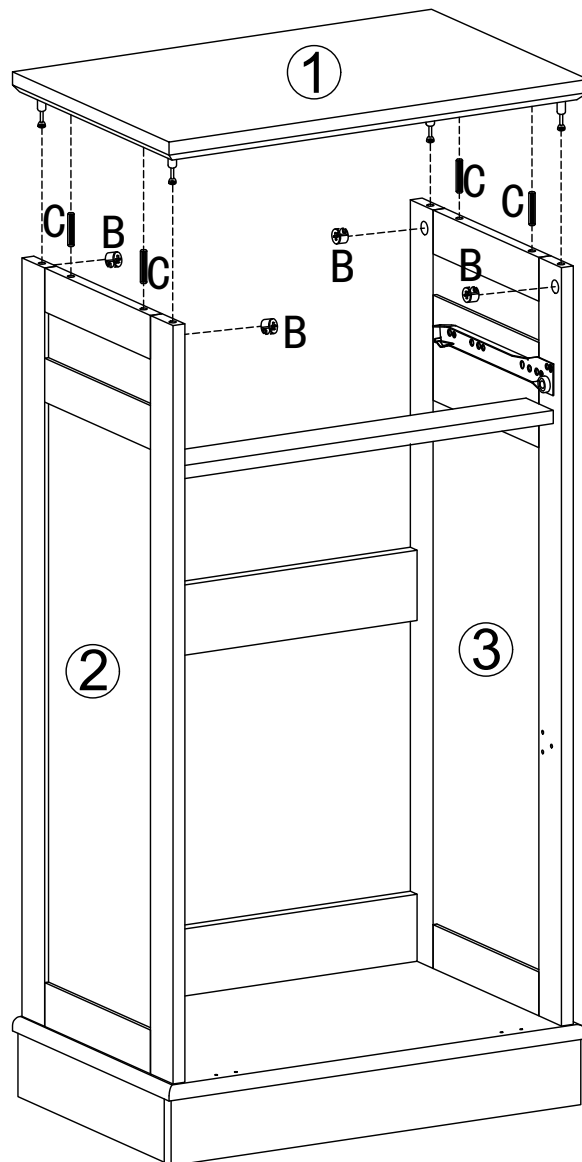



9



Hx10




Rx6

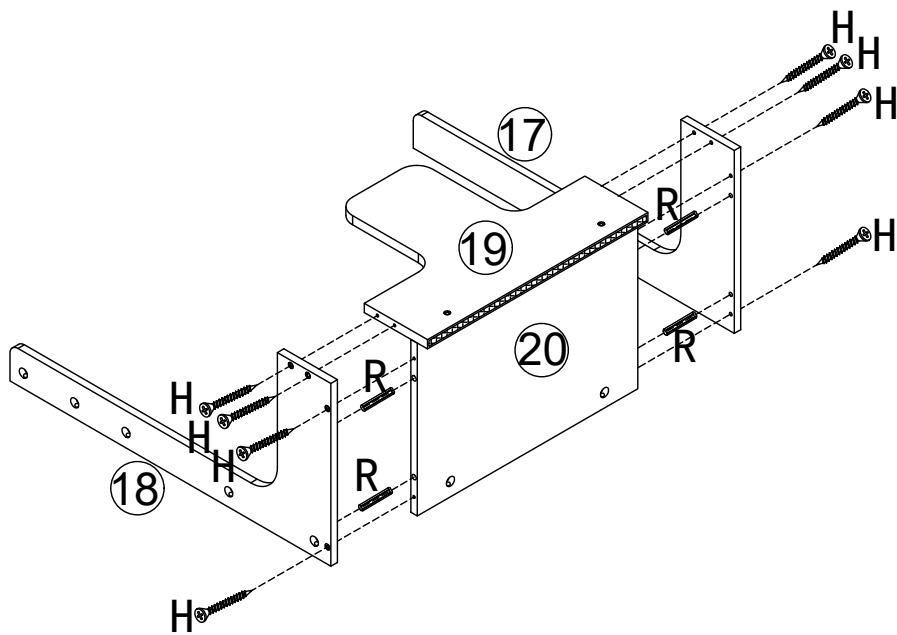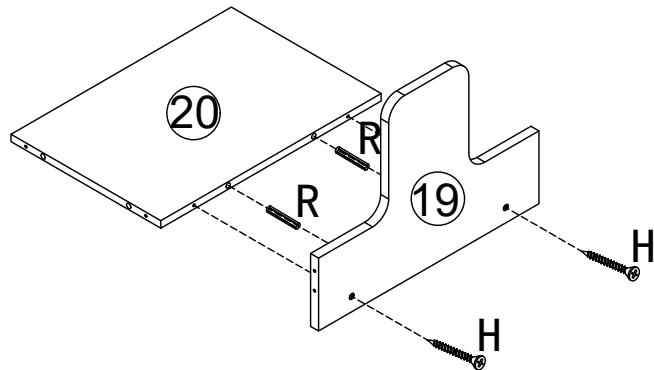

10




Bx12



Rx6



Qx4



Ex2







Vx12






Wx2



Jx4

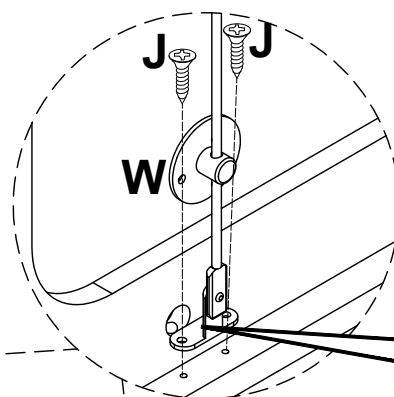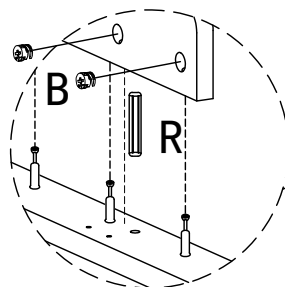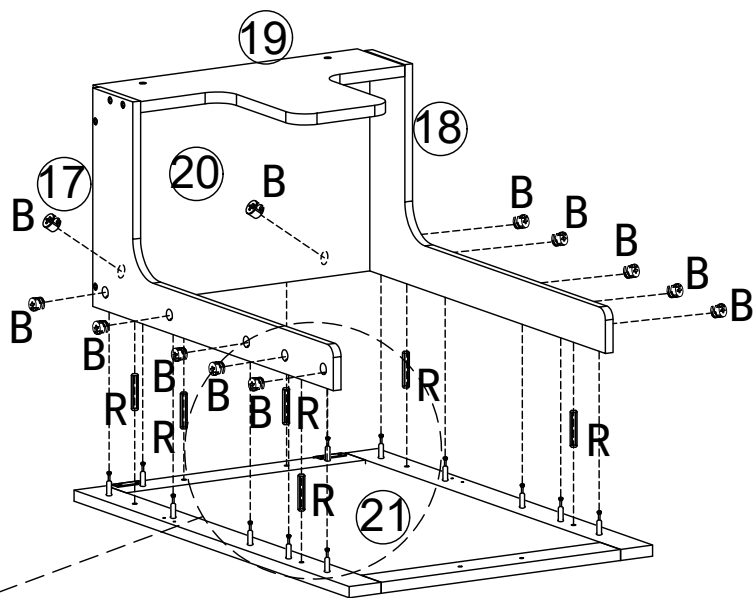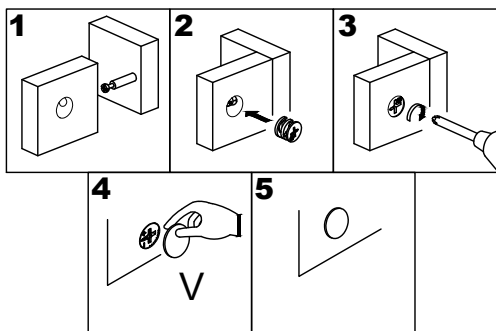


Pay attention to the direction when installing

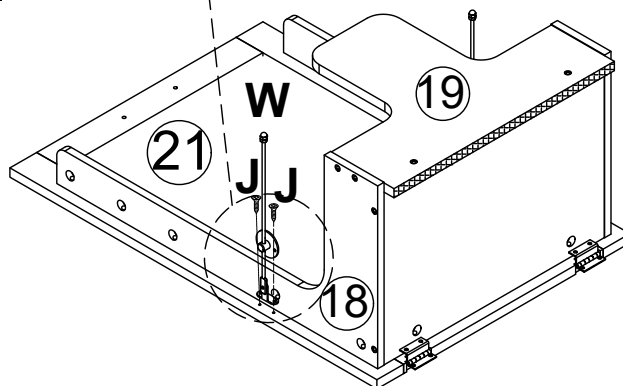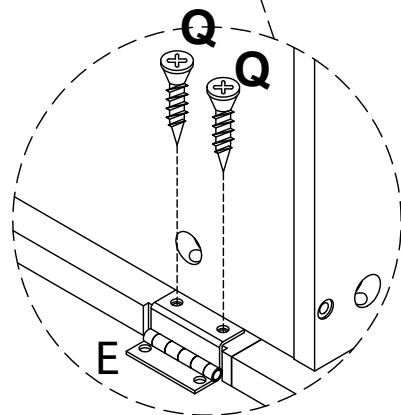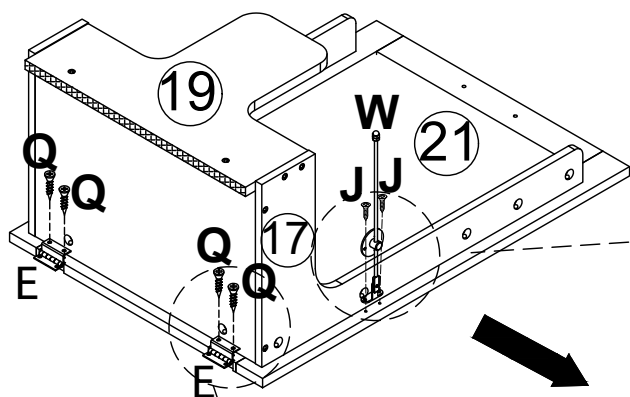

Kx1

Sx2

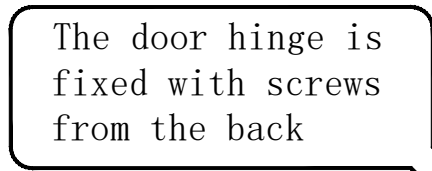


install the
auxiliary board

12



Jx6

Hold the door panel in place with your body, then fix the pull rods on both side panels with screws

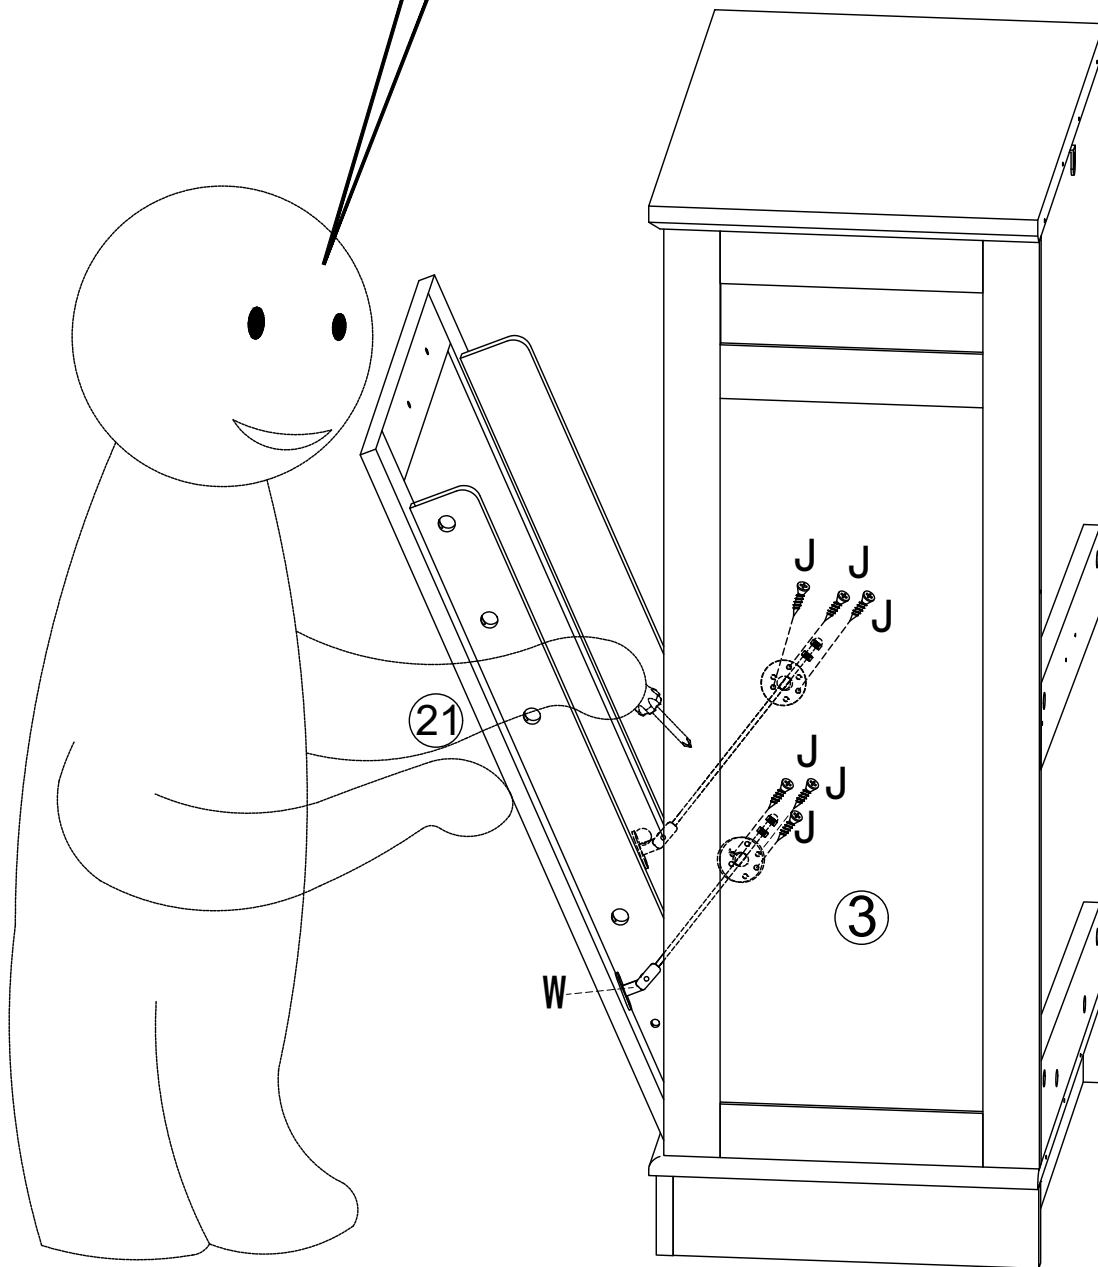


13





Tx20

Before Installing the back plane, Please have an assistant to check the door gap to be even and then lock all screws for the back plane.

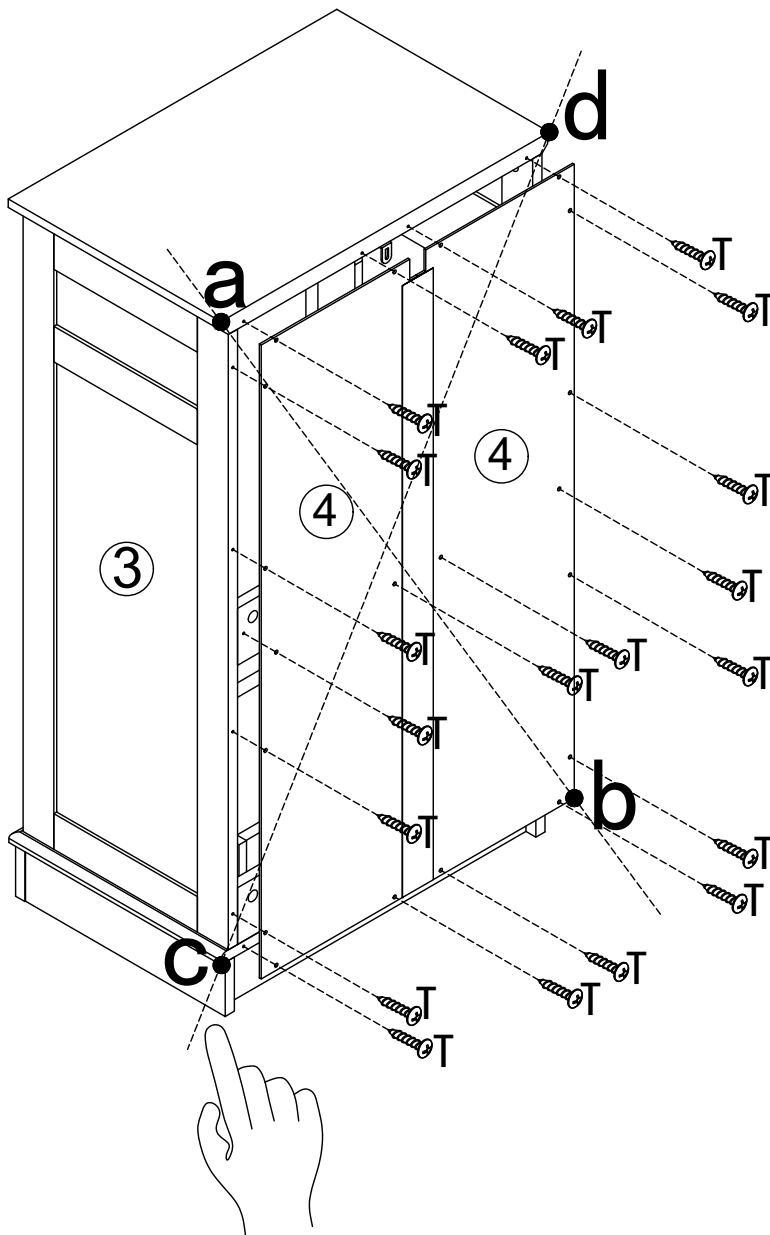

$$ab=cd$$

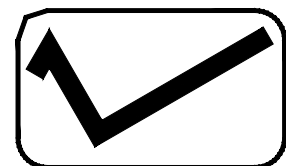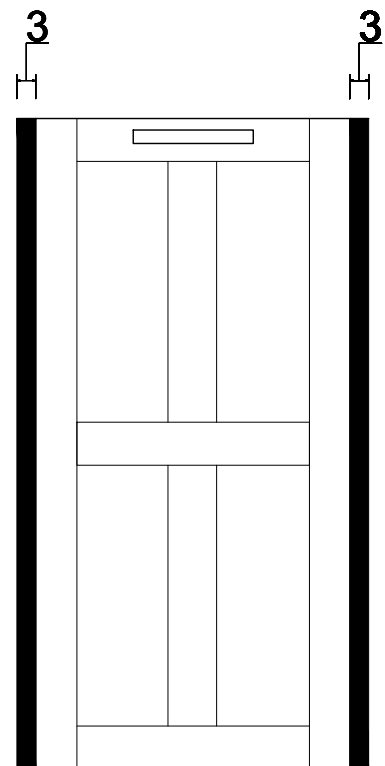

14







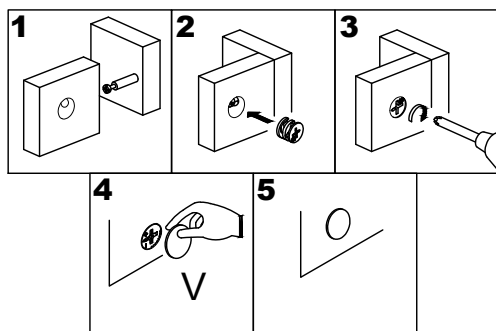


Diagram illustrating two types of fasteners:

- N x 1**: A bolt with a hexagonal head and a threaded shaft.
- M x 1**: A screw with a flat head and a threaded shaft.

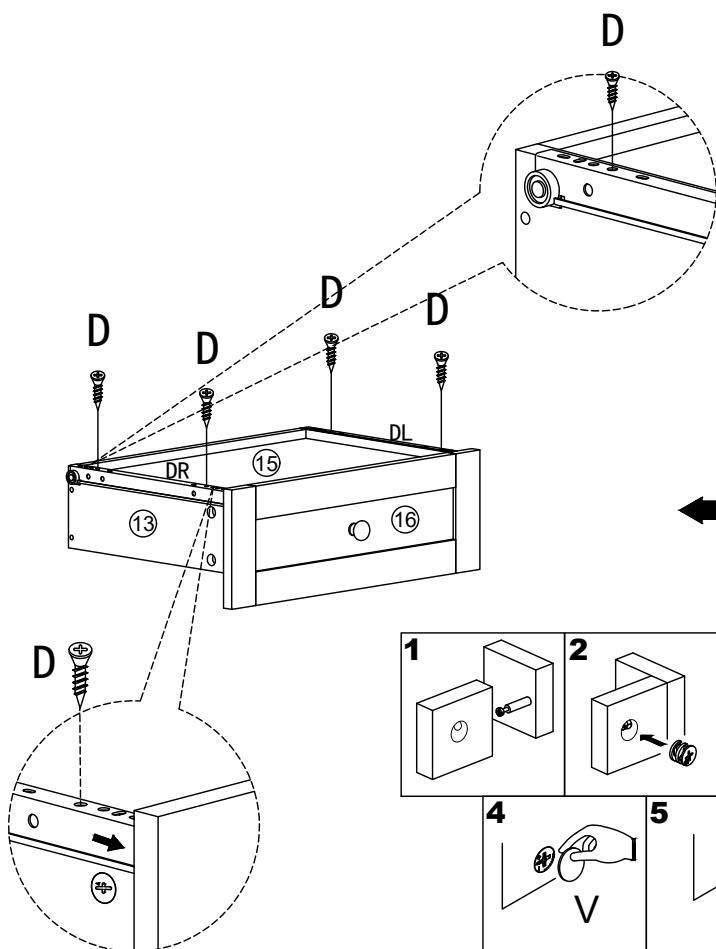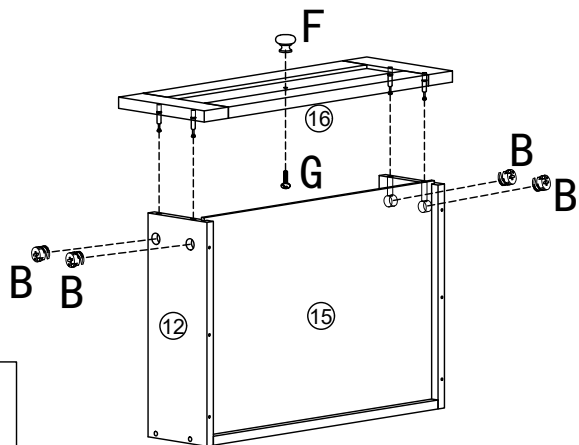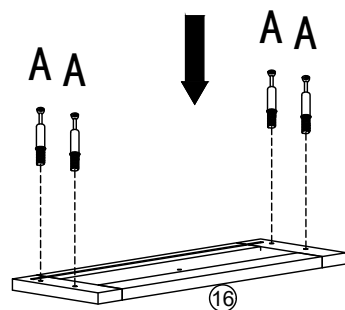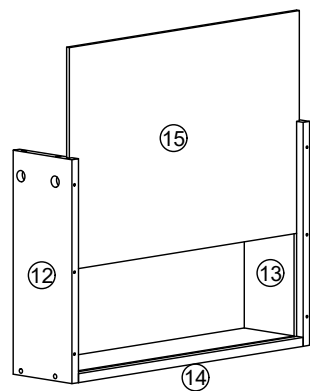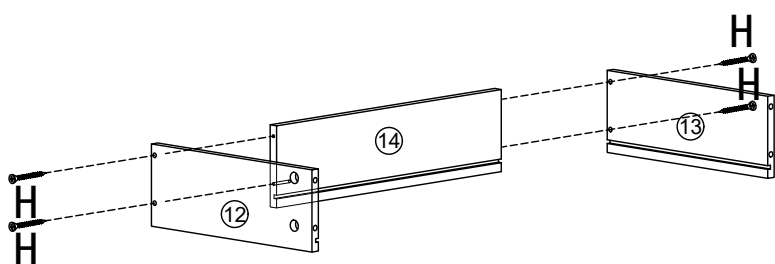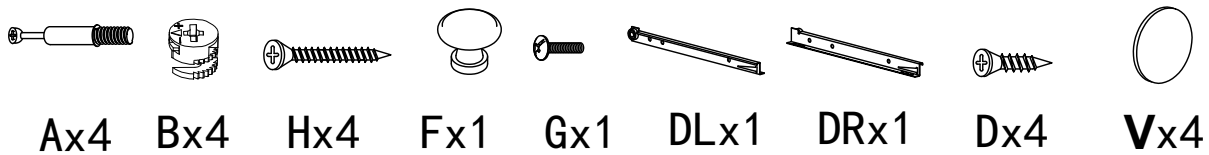

We have a wall connection device attached, please use it to hold the furniture following these instructions.

- [illegible]

Installation Completed