


DJ0738

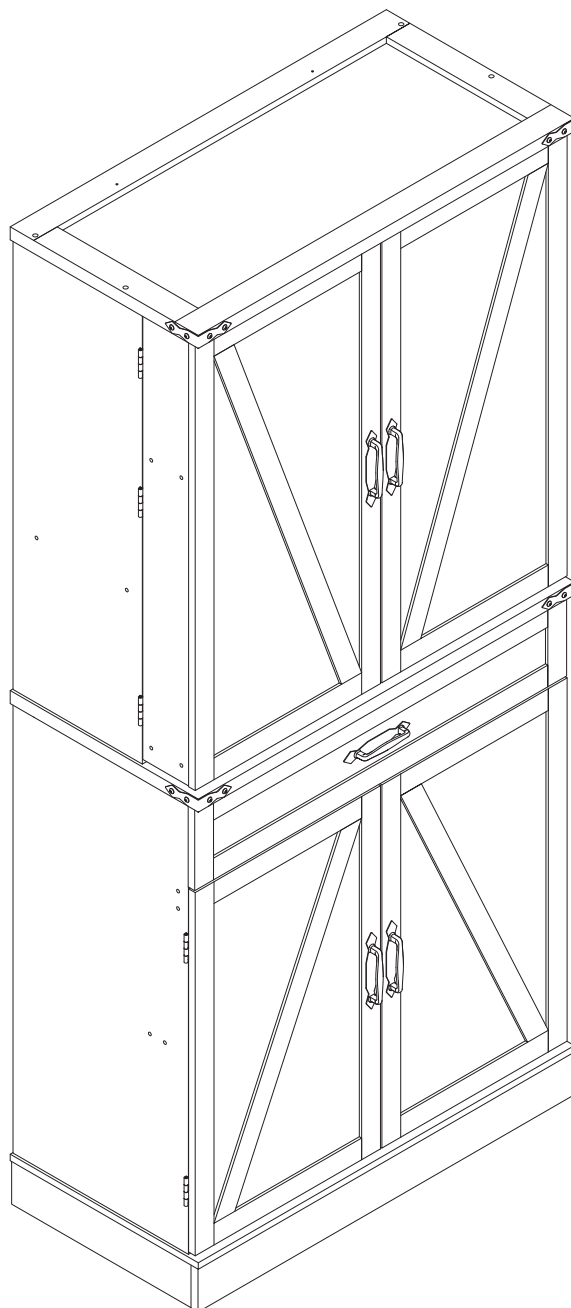


SAFETY TIPS:

Static charge may cause dust on foam—
clean with a dry or damp cloth.





















Small foam strands may be present—
handle gently and dispose of properly.

Do not burn or incinerate. Check local
recycling guidelines.


For an assembly questions or replacement parts,
please contact our customer service.
Scan the QR code for installation video instructions.

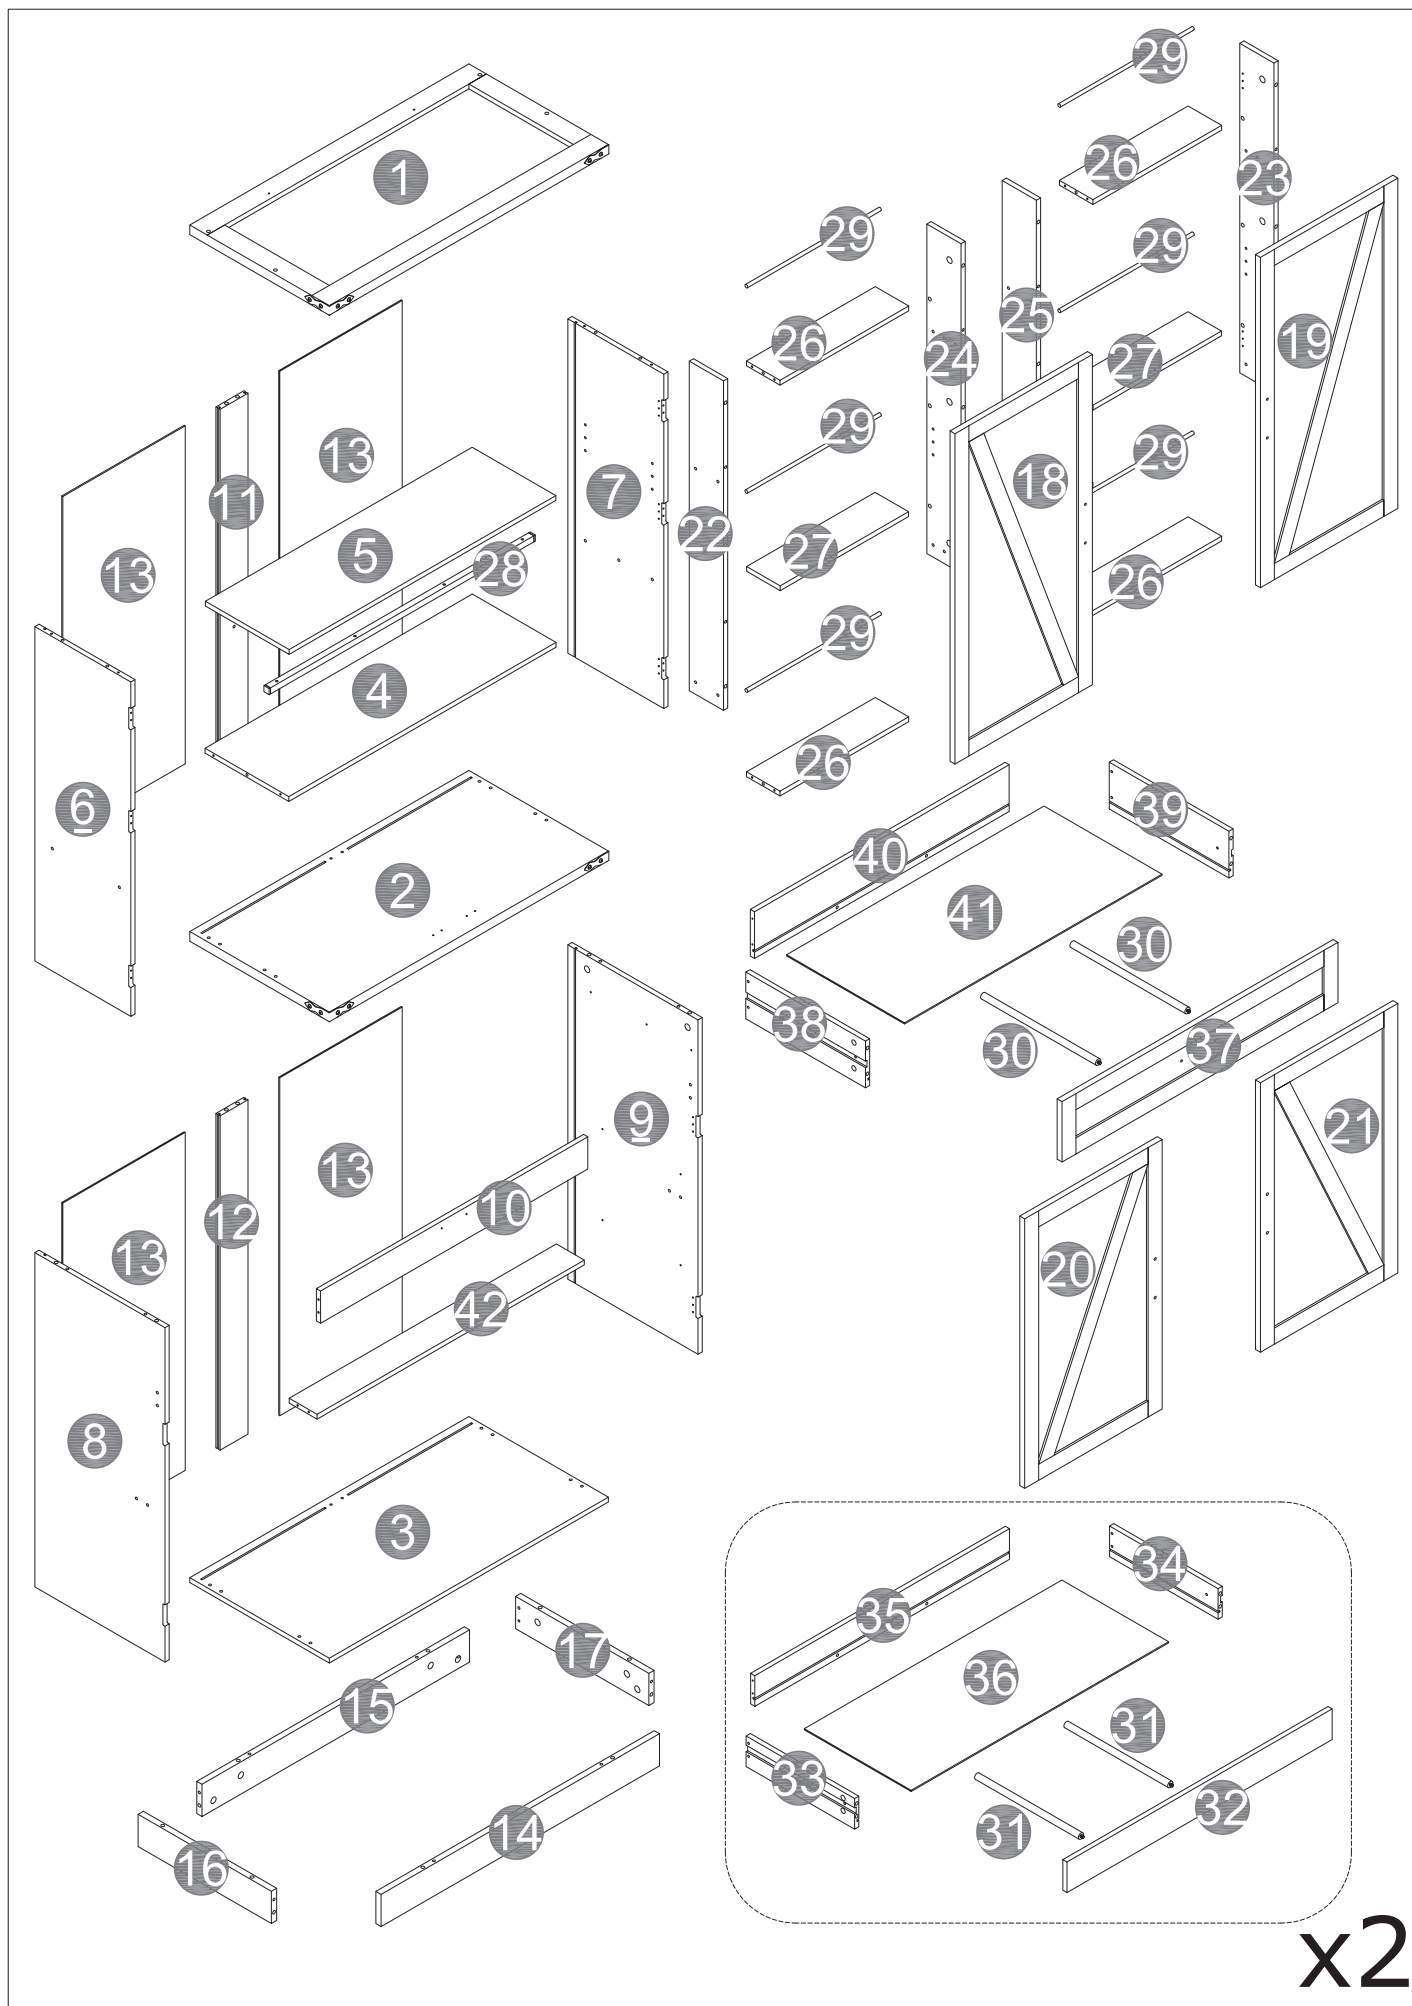

PARTS LIST

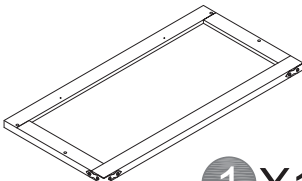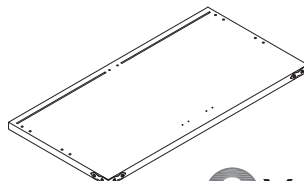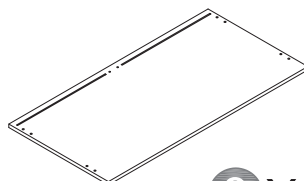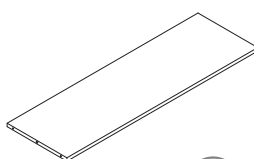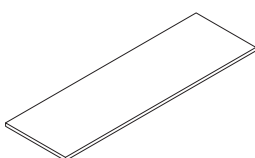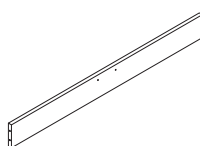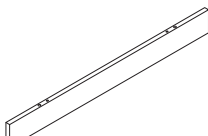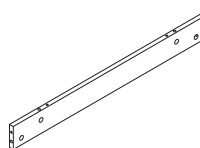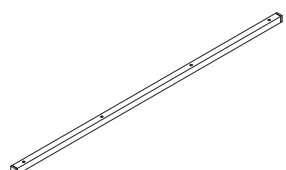 1X1	 2X1	 3X1	 4X1
 5X1	 6X1	 7X1	 8X1
 9X1	 10X1	 11X1	 12X1
 13X4	 14X1	 15X1	 16X1
 17X1	 18X1	 19X1	 20X1
 21X1	 22X1	 23X1	 24X1
 25X1	 26X4	 27X2	 28X1


PARTS LIST




29X6




30X2




31X4

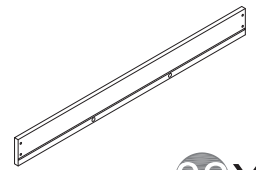


32X2




33X2




34X2

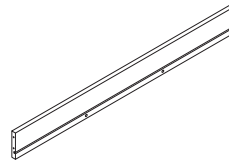


35X2

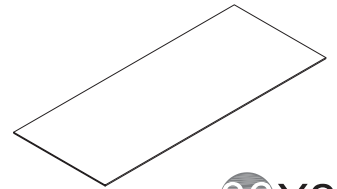


36X2

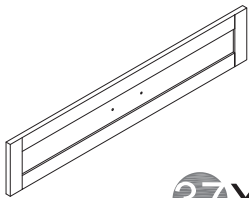


37X1




38X1




39X1

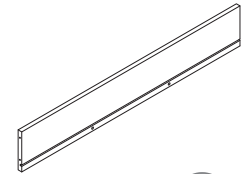

40X1

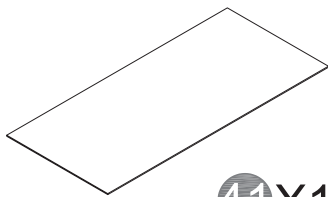


41X1

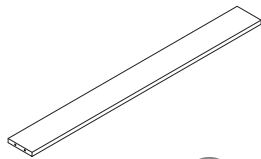

42X1

Please prepare the following tools

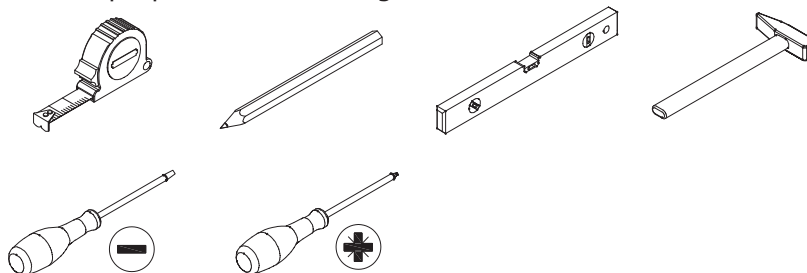

A 36+2 PCS Ø15 x 9.5 mm	A₂ 12+2 PCS Ø12 x 9.5 mm	B 48+2 PCS Ø12 x 9.5 mm	C 76+2 PCS Ø5 x 30 mm	D 42+2 PCS Ø5 x 30 mm
E 25+2 PCS Ø5 x 40 mm	F_{2.5} 6 PCS M6 x 25mm	I₂ 5 PCS M4 x 20mm	I₃ 5 PCS M4 x 20mm	J 8+2 PCS M4 x 20mm
J₂ 2 PCS M4 x 6mm	J₃ 6 PCS M4 x 10mm	K₄ 12+2 PCS 310mm	L 2 set 310mm	L₂ 1 set 342mm
N 98+2 PCS Ø3.5 x 12mm	N₁ 22+2 PCS Ø3 x 12mm	N₂ 4 PCS Ø4 x 25mm	N₃ 28+2 PCS Ø4 x 30mm	N₇ 20+2 PCS Ø3 x 16mm
P 2 PCS P1, P2, P3, P4 Ø3.5 x 16, Ø4 x 40	Q 20+2 PCS Ø3.5 x 16, Ø4 x 40	MH₃ 4 PCS Ø3.5 x 16, Ø4 x 40	MH₄ 6 PCS Ø3.5 x 16, Ø4 x 40	X₃ 4 PCS Ø3.5 x 16, Ø4 x 40
X₄ 4 PCS Ø3.5 x 16, Ø4 x 40	X₅ 1 PC Ø3.5 x 16, Ø4 x 40	X₆ 2 PCS Ø3.5 x 16, Ø4 x 40	V₃ 4 PCS M4 x 15mm	Z 1 PC 4mm
 +2 SPAPEBAG				



Tips: The number after "+" represents the spare hardware.

IMPORTANT NOTES:


The item you are purchasing is a large furniture product that requires a large number of components to assemble.

Please take all parts boxes out of the packaging and place them in order. So that you can follow the steps in the installation manual to find the corresponding parts box and quantity of need when installing. Please do not take too many parts to prevent the parts from scattering.




Please be patient and follow the instructions step by step for installation. If you have any problems during the installation process, you can ask our customer service to help you solve them!

SAFETY TIPS:



Static charge may cause dust on foam clean with a dry or damp cloth.
Small foam strands may be present handle gently and dispose of properly.
Do not burn or incinerate. Check local recycling guidelines.

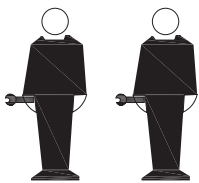


For convenience and safety, we recommend two people to assemble.
If you have any questions, please contact our customer service.

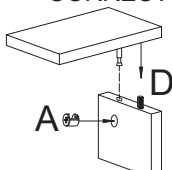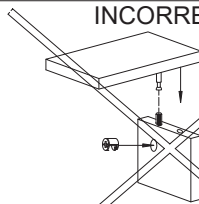Cam Lock/Dowel Placement Supplement		
CORRECT 1  When inserting the Cam lock, make sure that the open End of the cam Lock faces the Cam Screw Entry. The Dowel will be inserted in the hole NEXT to the Cam Lock/Cam Screw hole.	INCORRECT 2  The Cam Lock is backwards in this illustration. The Cam Screw can not connect to the Cam Lock because the Dowel is in the incorrect hole.	3  To tighten, turn the Cam Lock CLOCKWISE until the arrow or "△" signs point AWAY from the connected board. *NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN.




1

L	2 set	L2	1 set	N	14 PCS
					

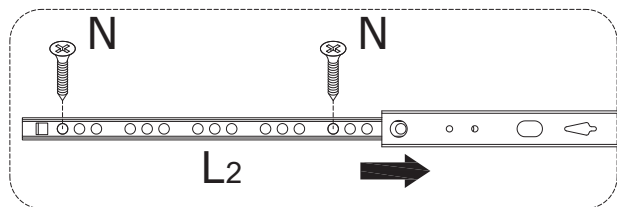



Note: This accessory is L2.

N x4


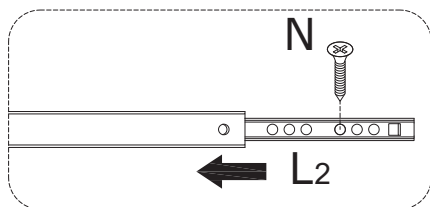
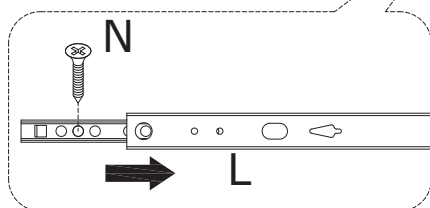
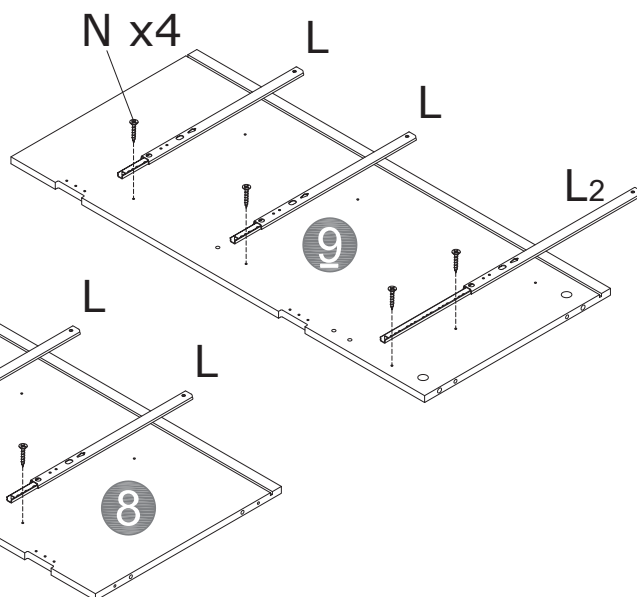



Slide towards the rear side and fix one screw.

N x3

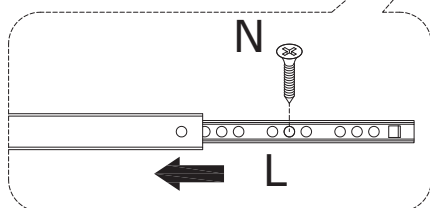
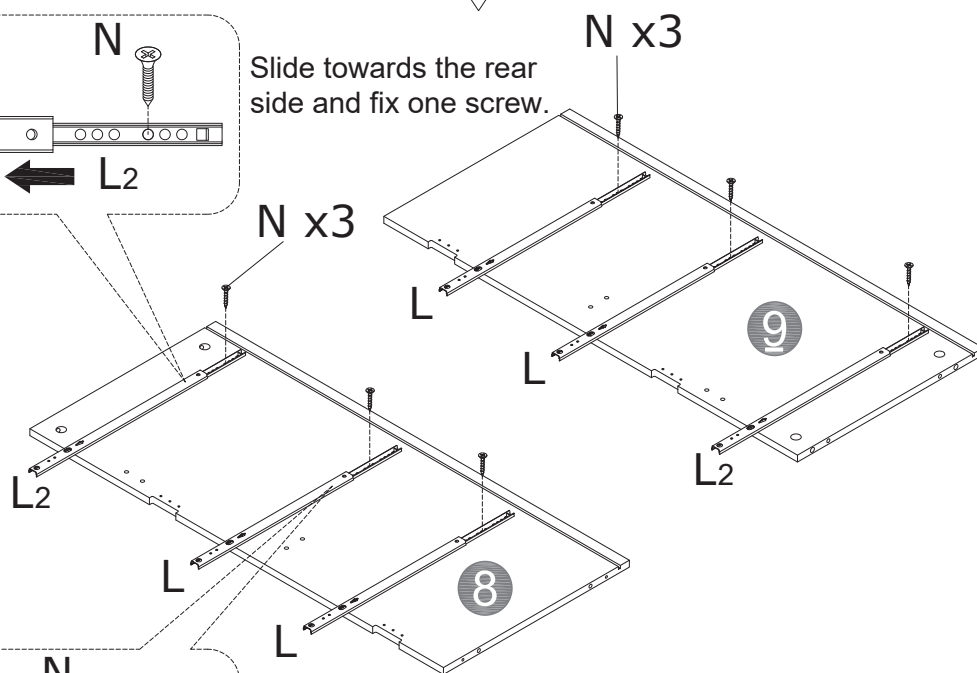








2

B	2 PCS	D	4 PCS	E	12 PCS	N ₁	2 PCS	X ₅	1 PC
									

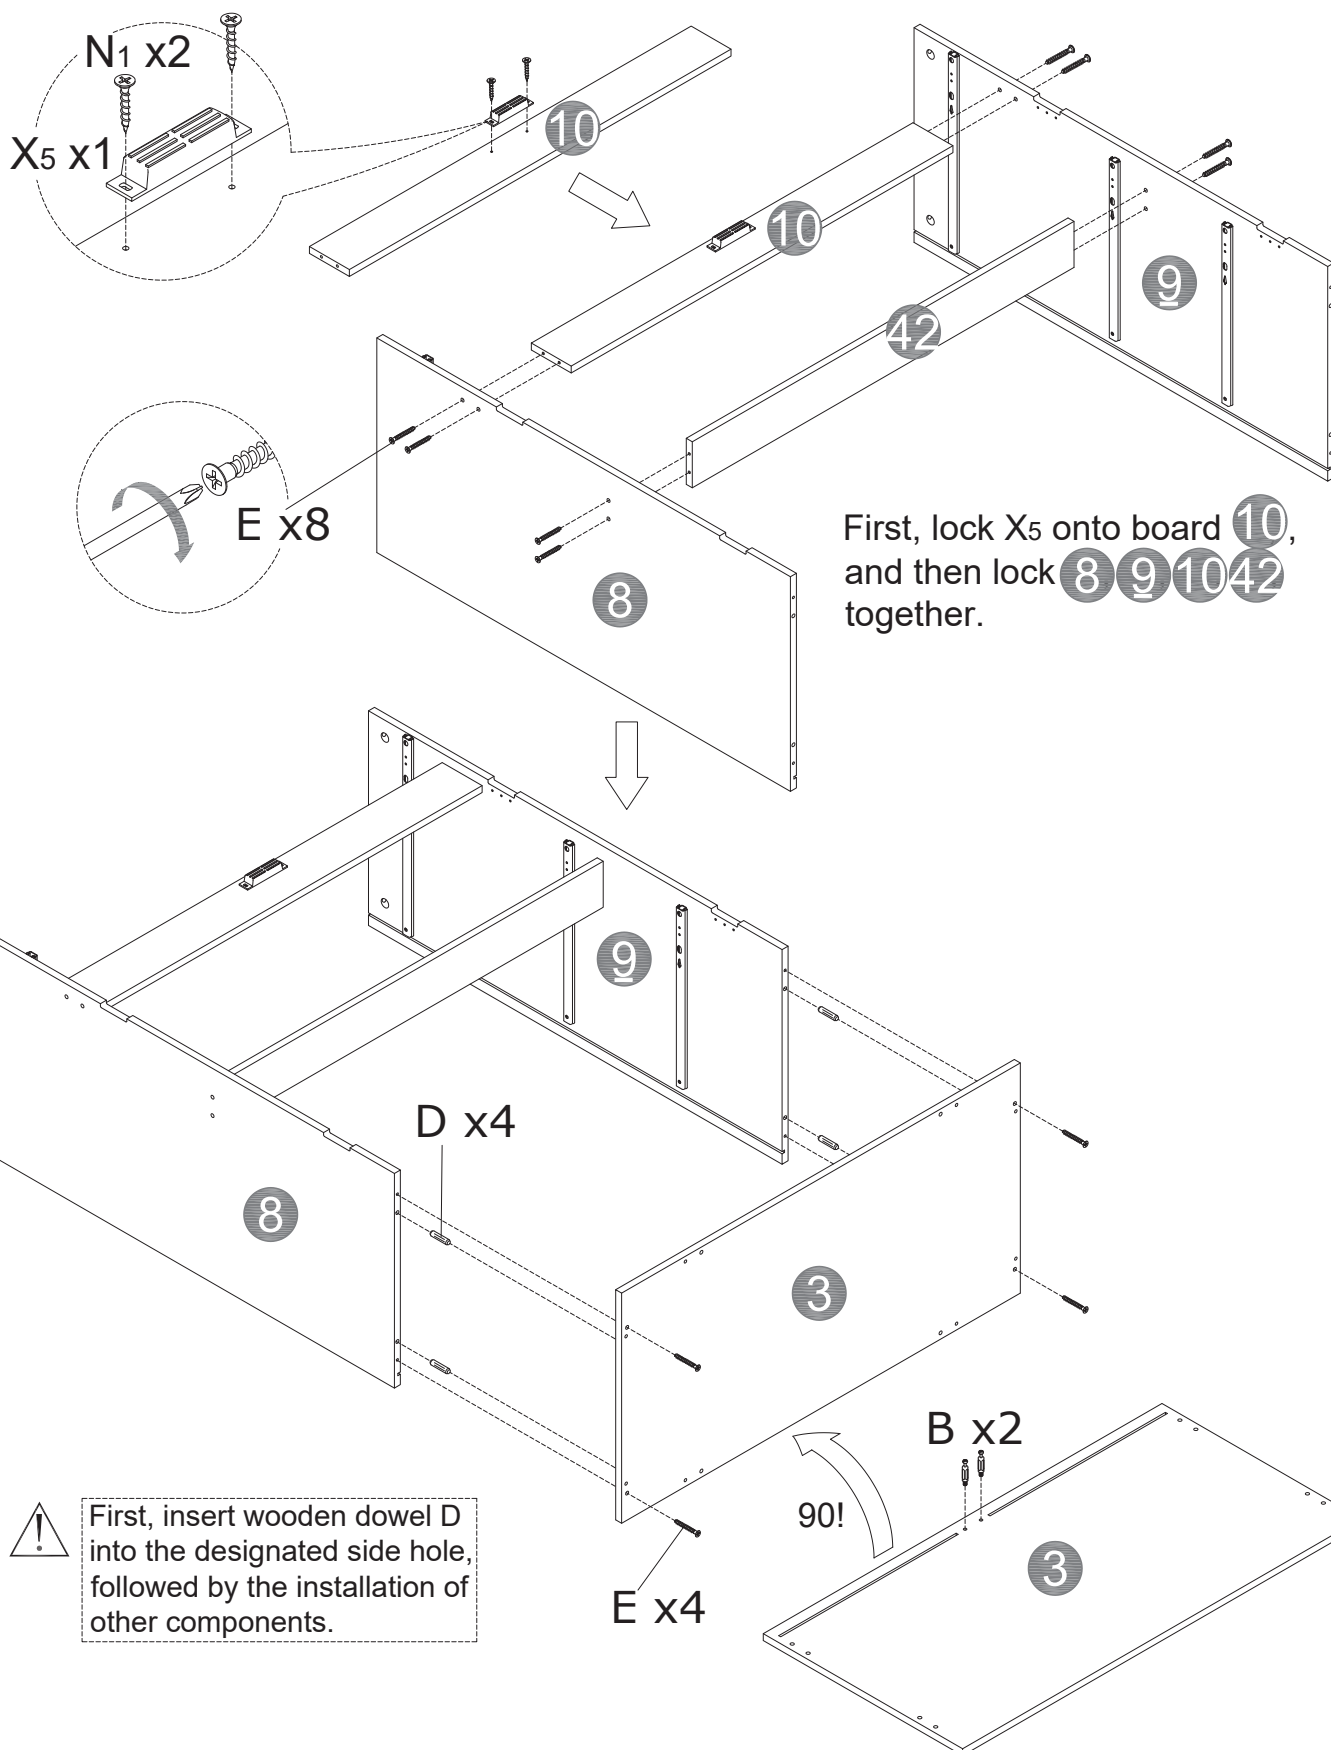




3

A	4 PCS	B	4 PCS	D	4 PCS
					

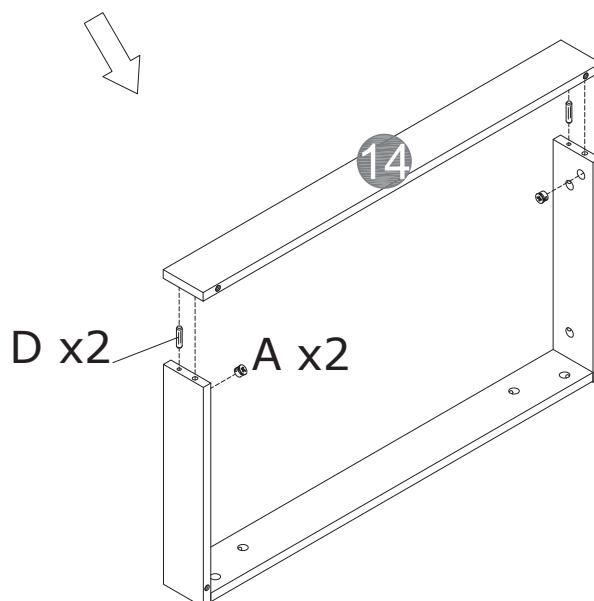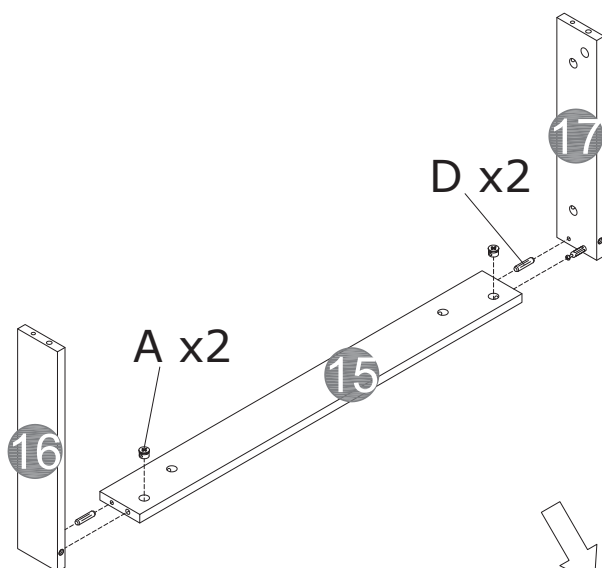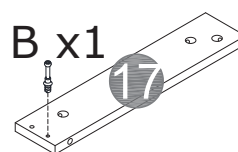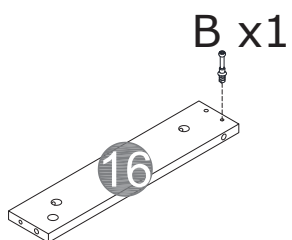
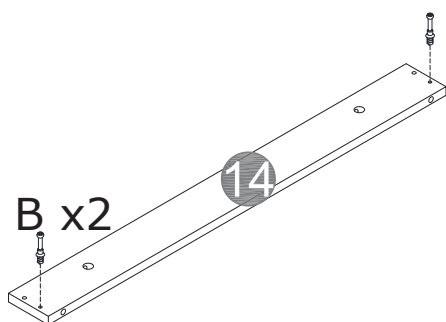
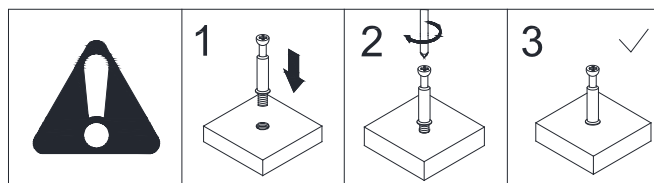


4

A	8 PCS	B	8 PCS	D	4 PCS
					

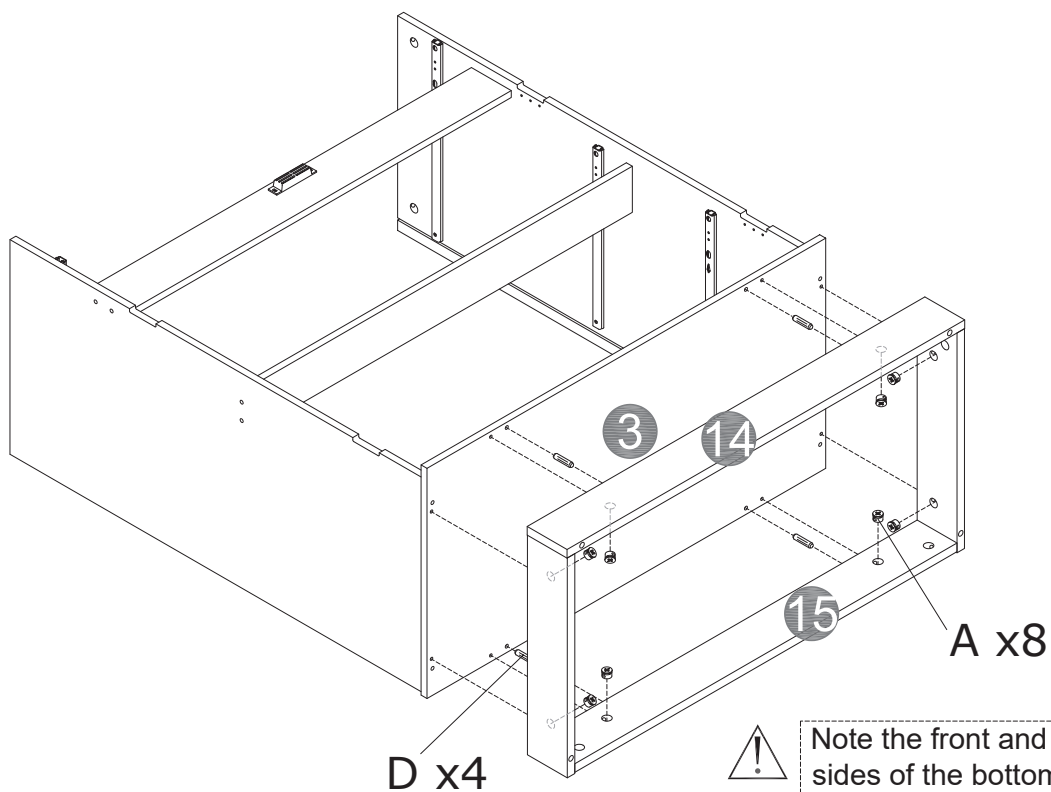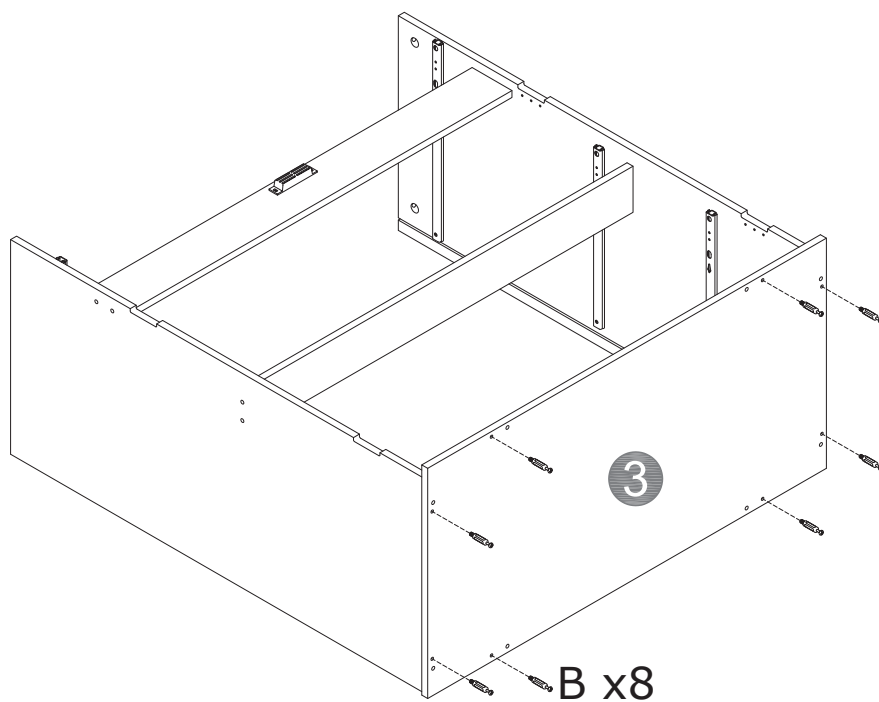



5

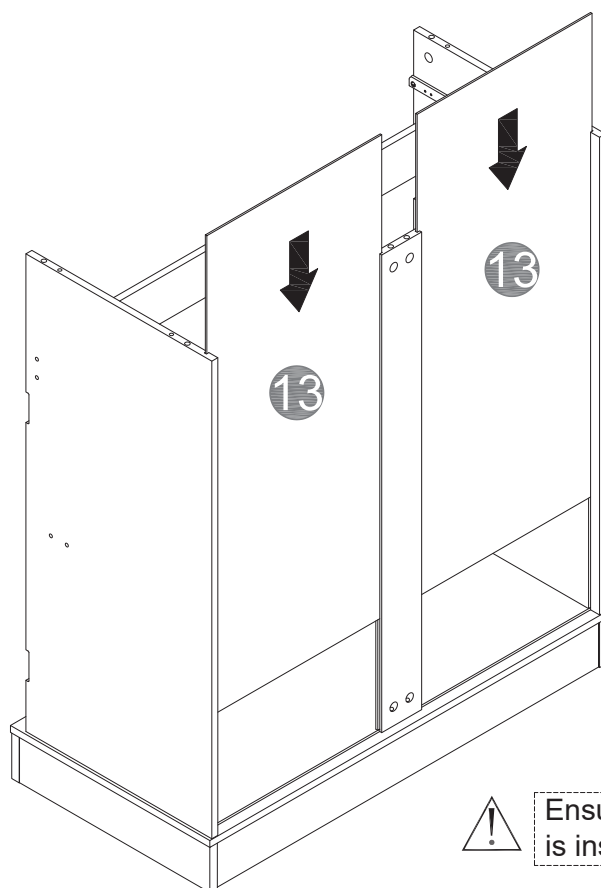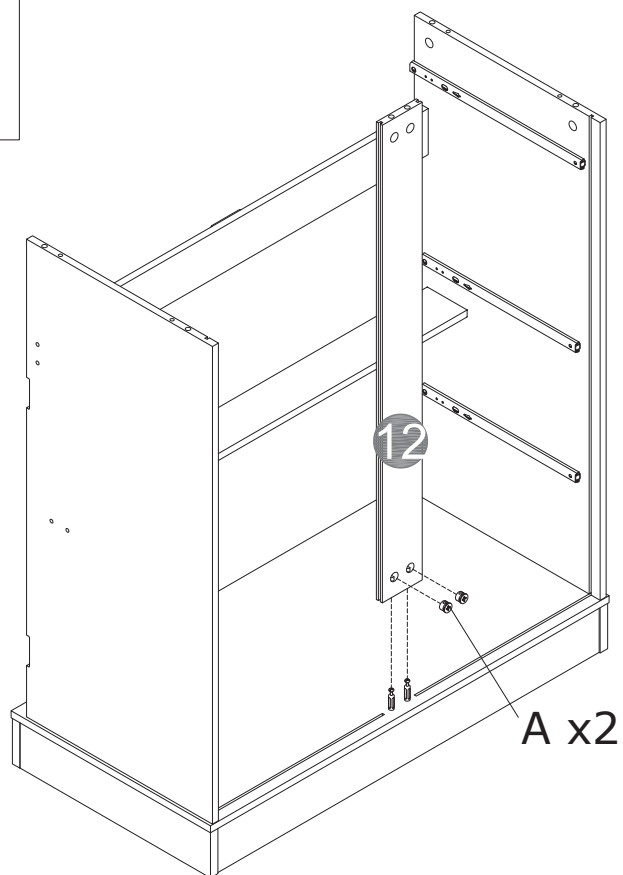
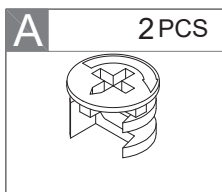


Ensure the back board
is inserted into the slot.




B	2 PCS	D	6 PCS	E	8 PCS	N₁	4 PCS	X₃	2 PCS

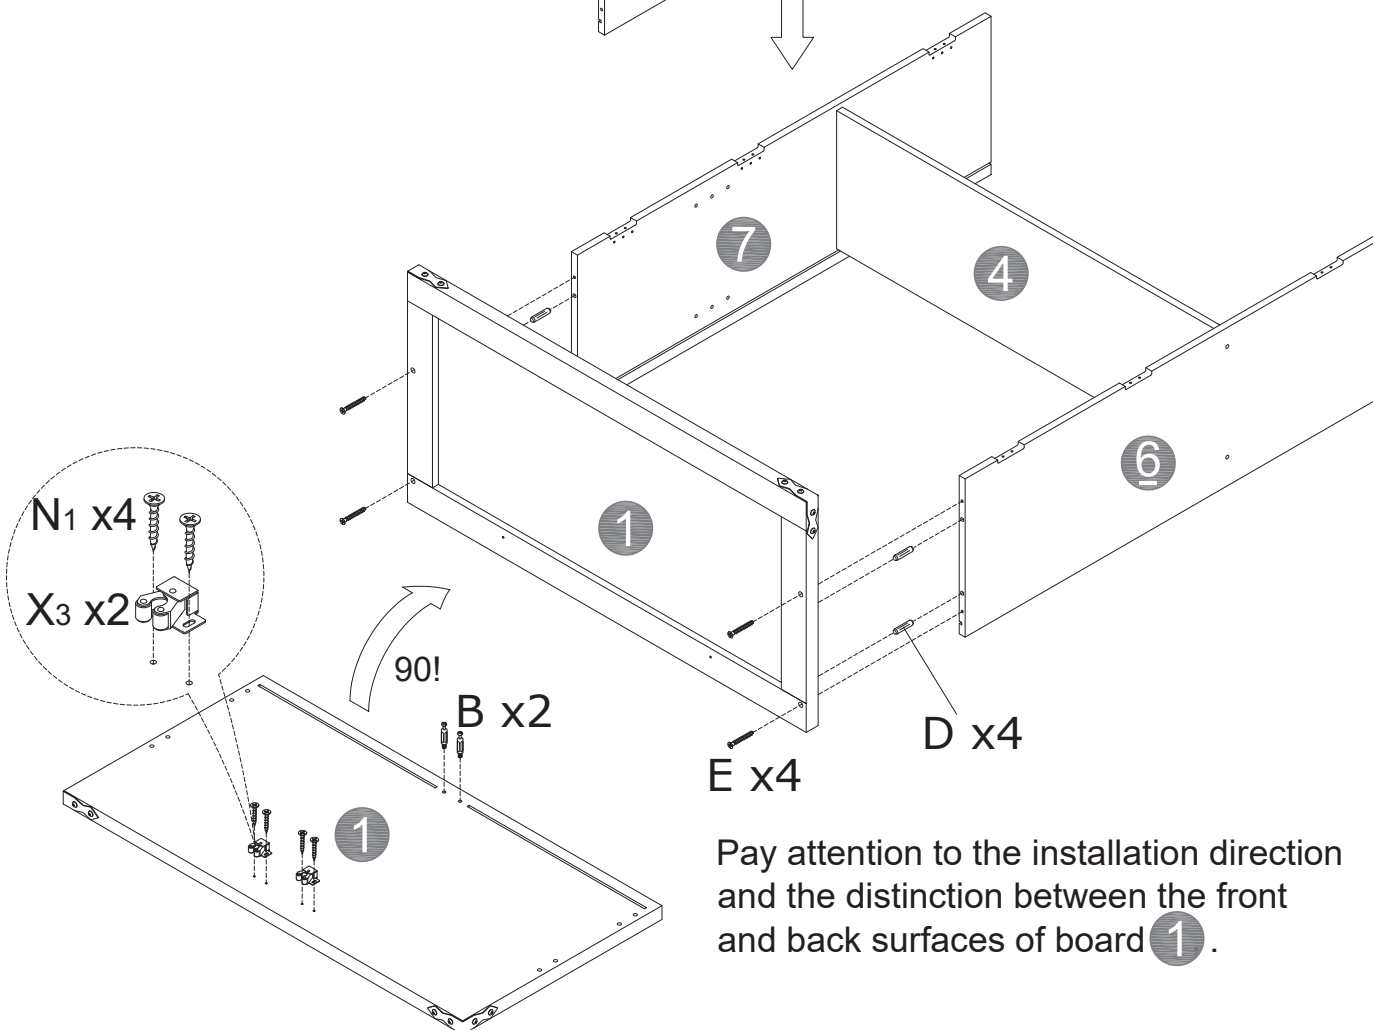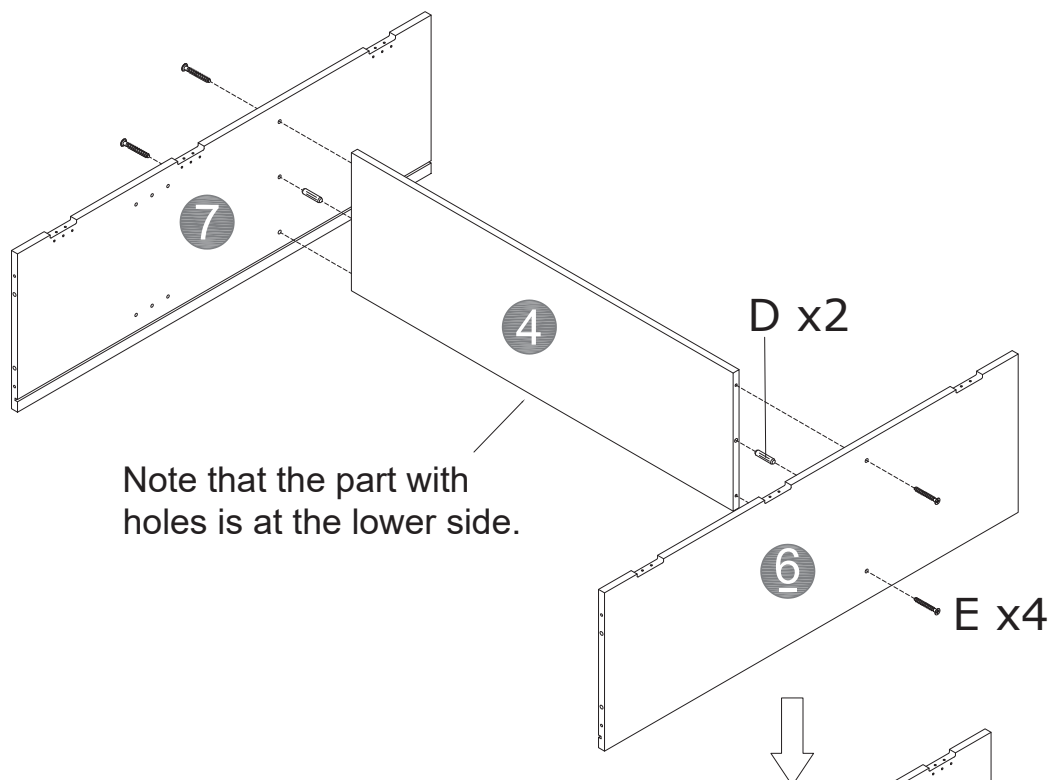

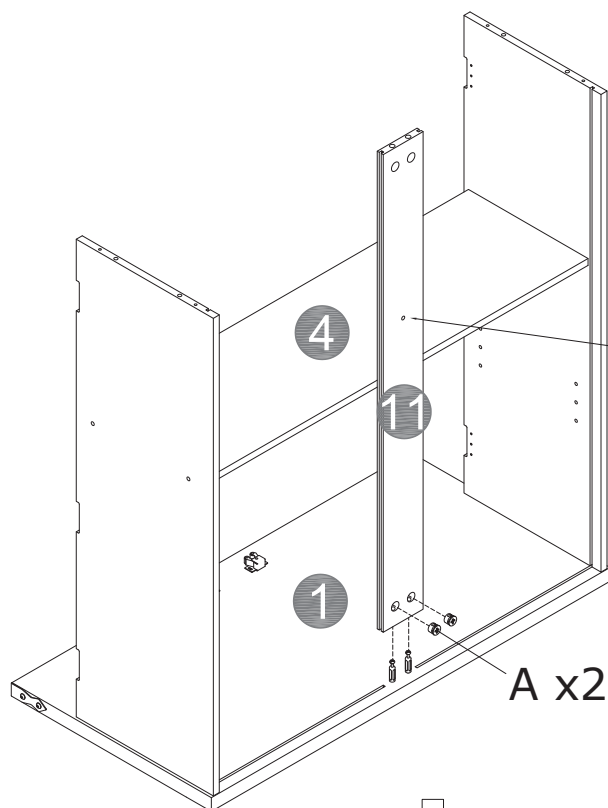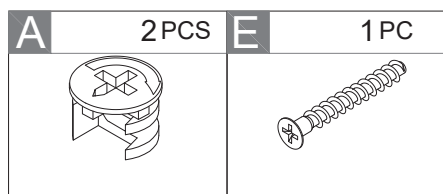



Note: The hole positions on Board 11 correspond to those on Board 4.

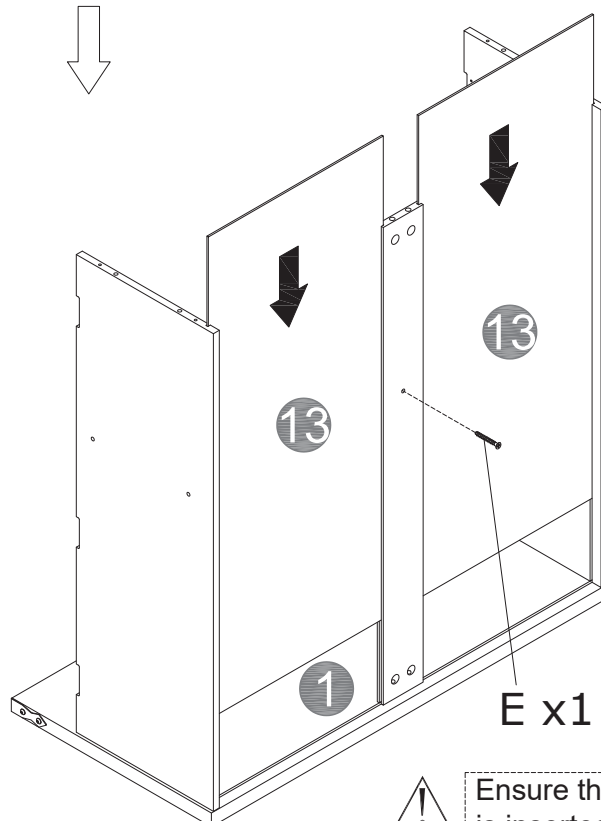


Ensure the back board is inserted into the slot.



A	2 PCS	B	8 PCS	D	4 PCS	E	4 PCS	N ₁	4 PCS	X ₃	2 PCS

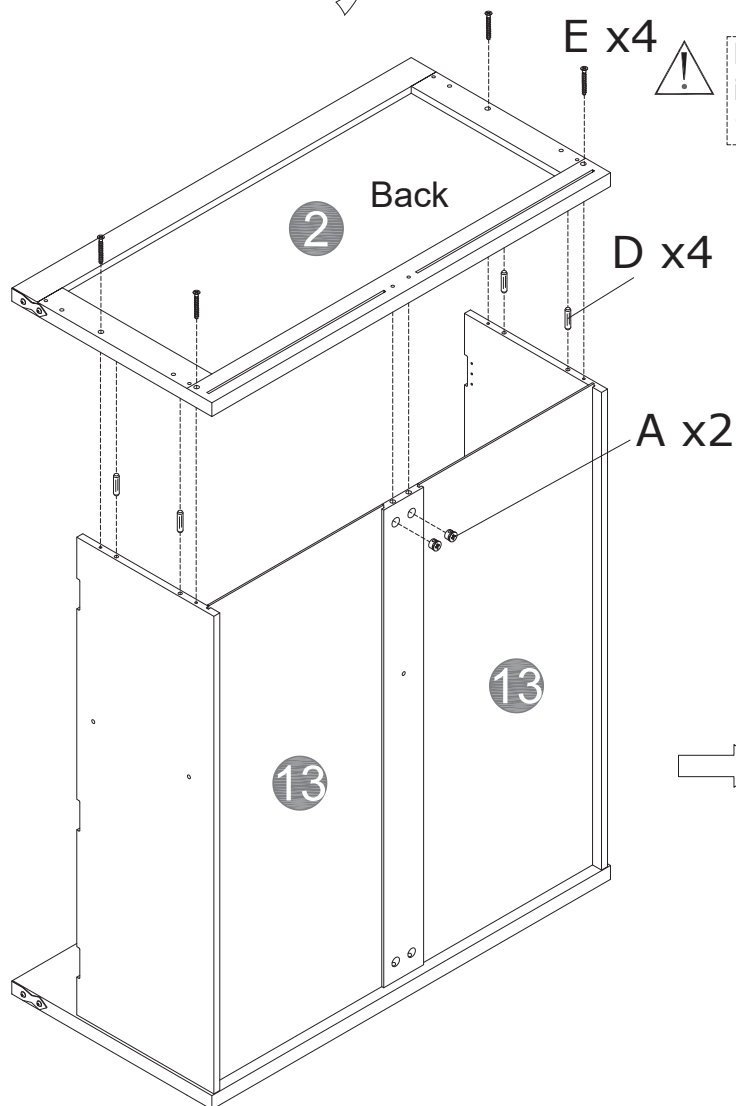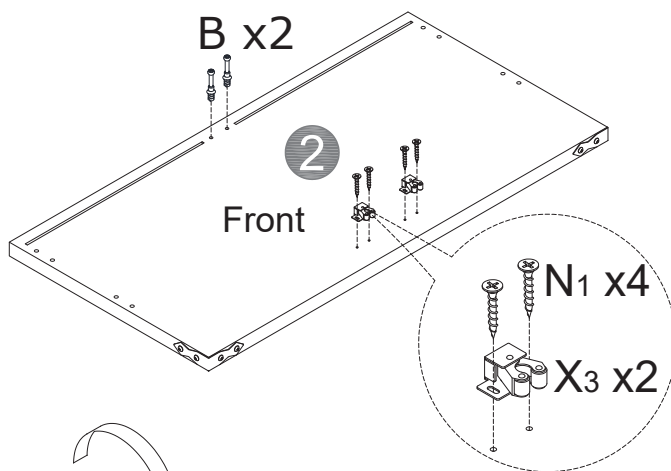


Ensure the back board is inserted into all four slots, then tighten the screws.

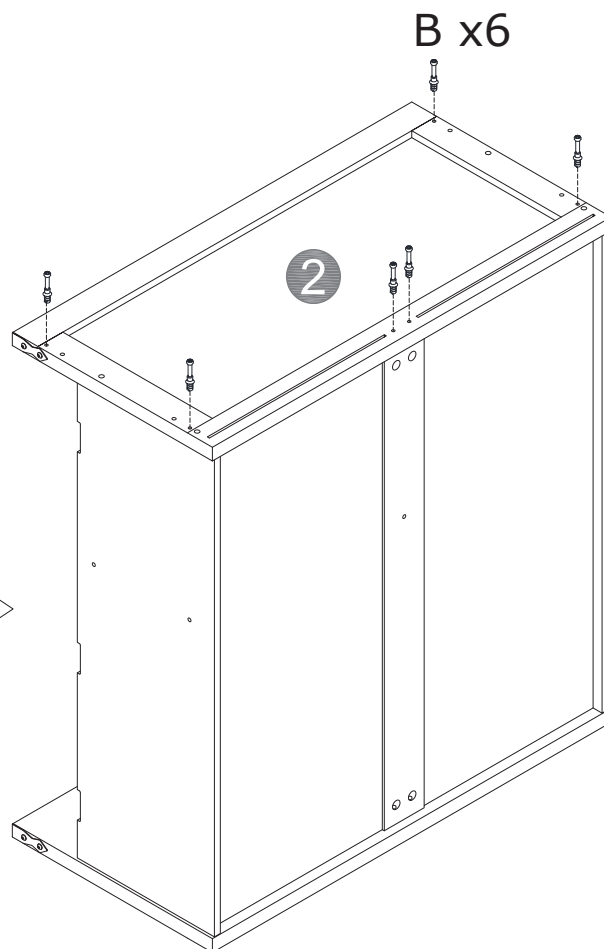




A	6 PCS	D	4 PCS	V ₃	4 PCS

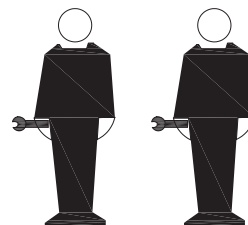




This step requires two people to complete



This step is difficult to install.
Note: Make sure that board 13 is inserted into the groove of board 2 and then fasten A.

use foam to cushion the bottom of the backplane.

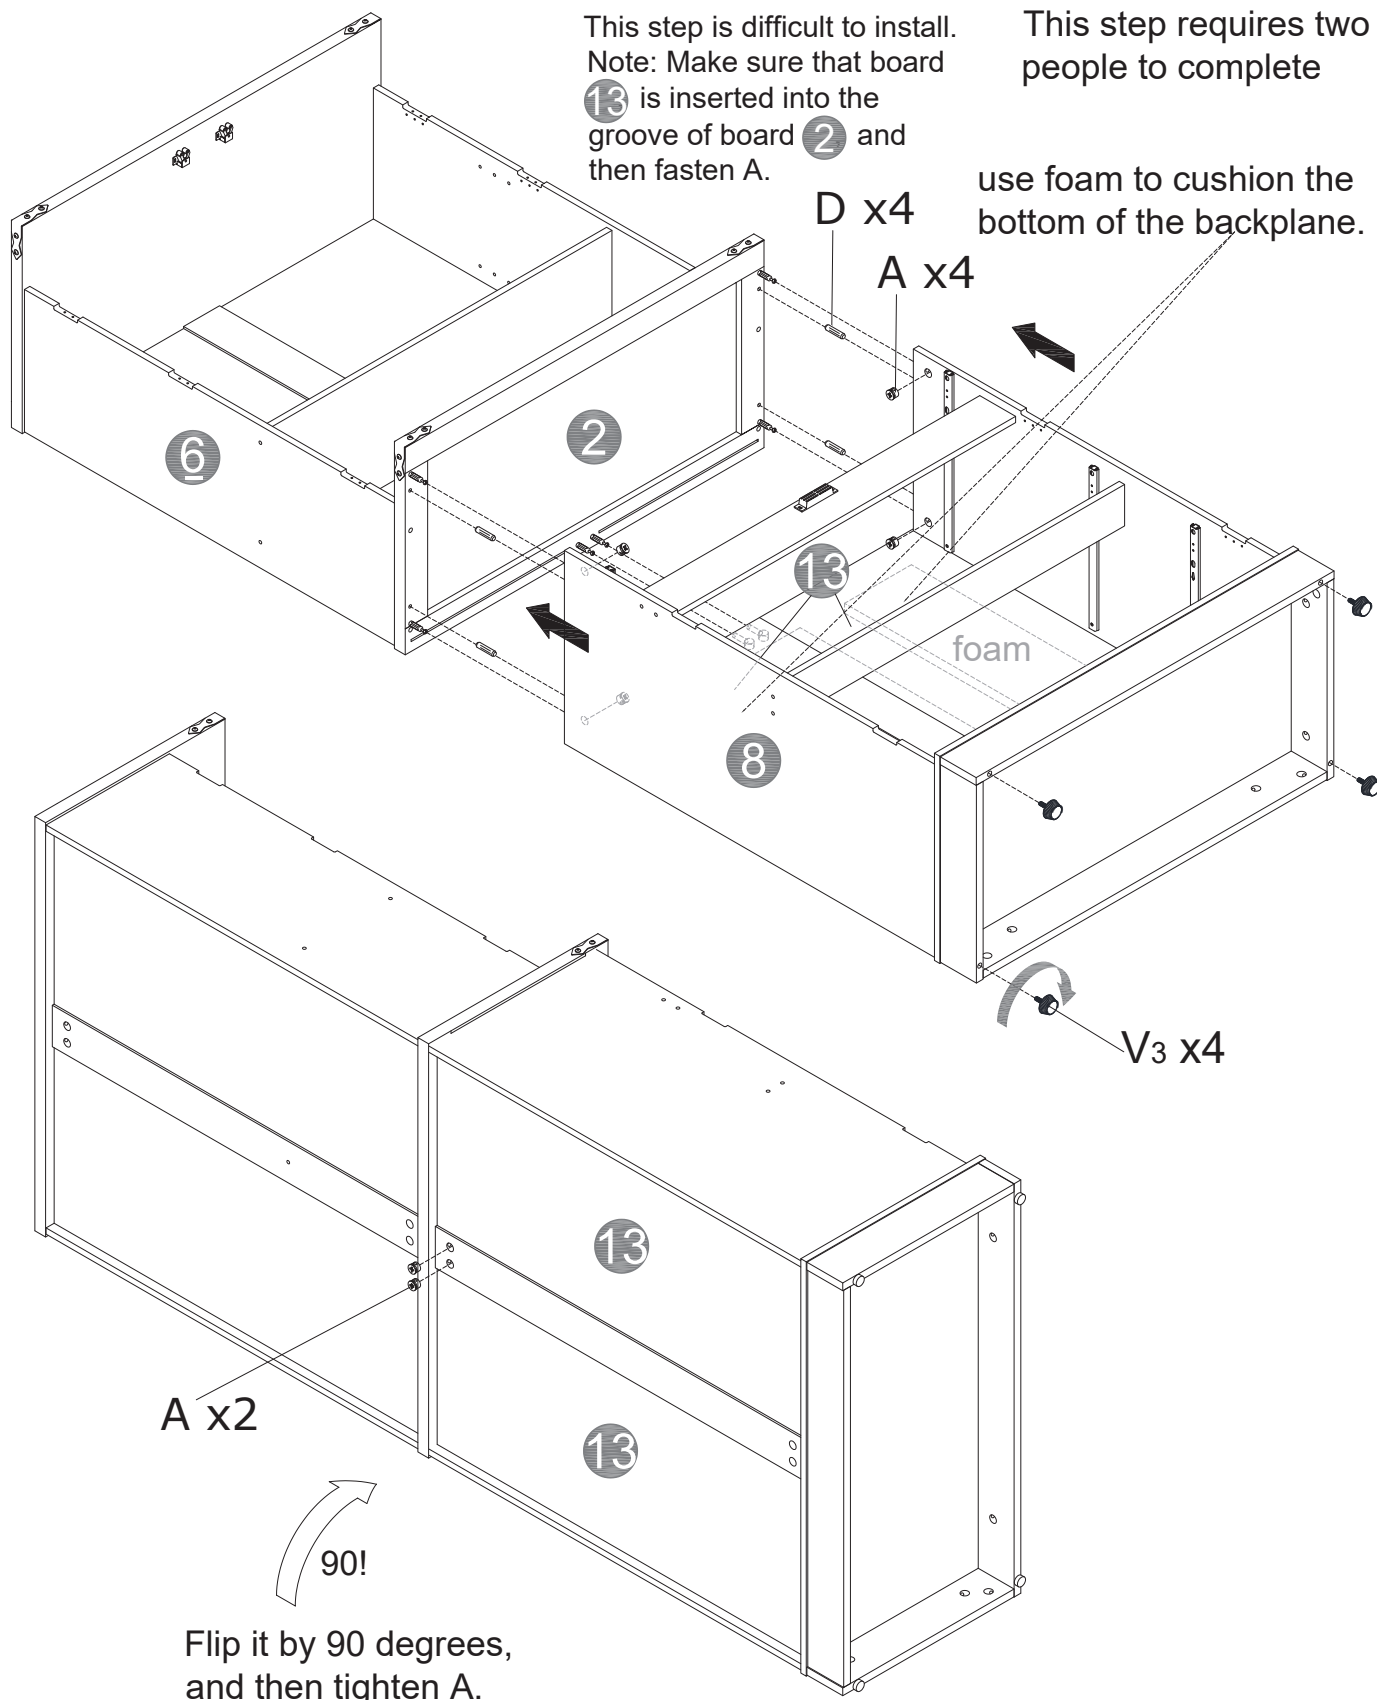


10

A2	8 PCS	B	8 PCS	F2.5	4 PCS	N3	8 PCS	Z	1 PC
									

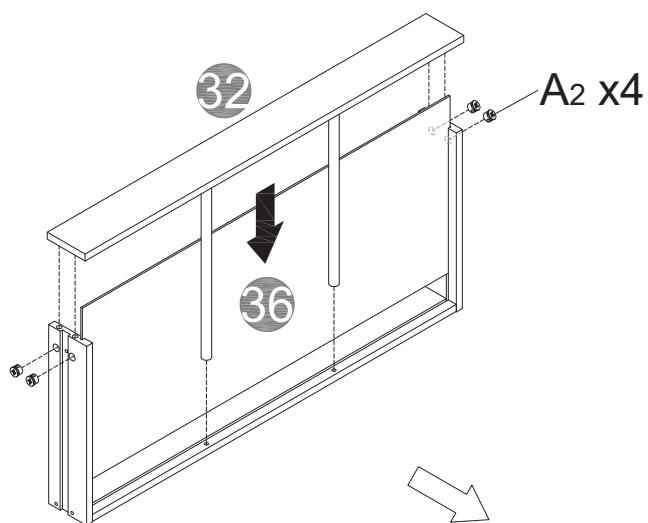
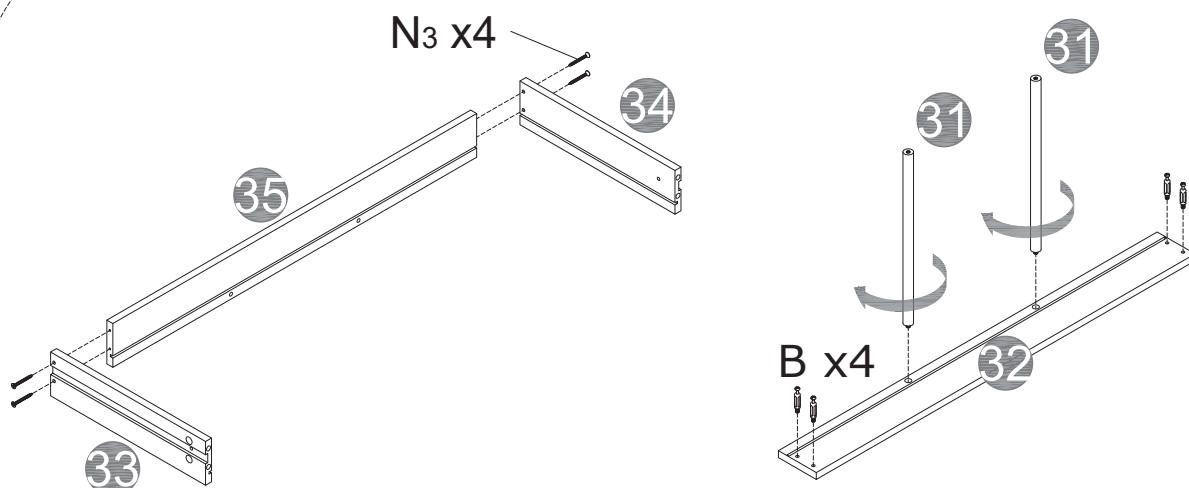




Ensure the drawer bottom board is inserted into all four slots, then tighten the screws.

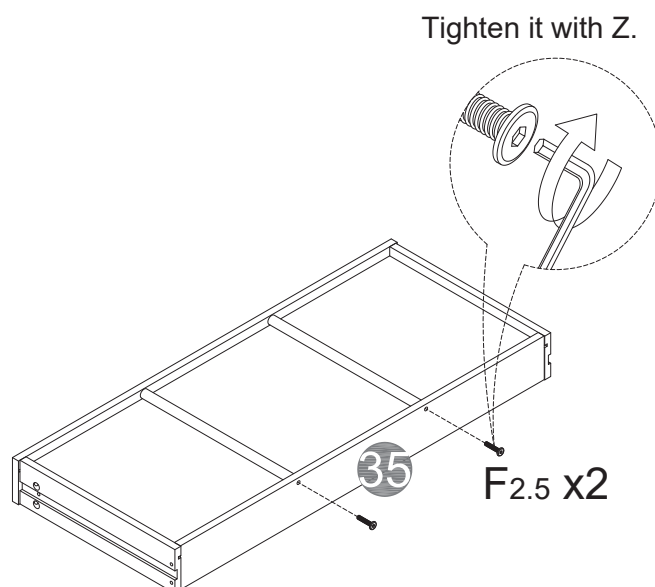


x2

1 1


A2	4 PCS	B	4 PCS	F2.5	2 PCS	N3	4 PCS	I2	1 PC	I3	1 PC
											
J2	2 PCS										
											

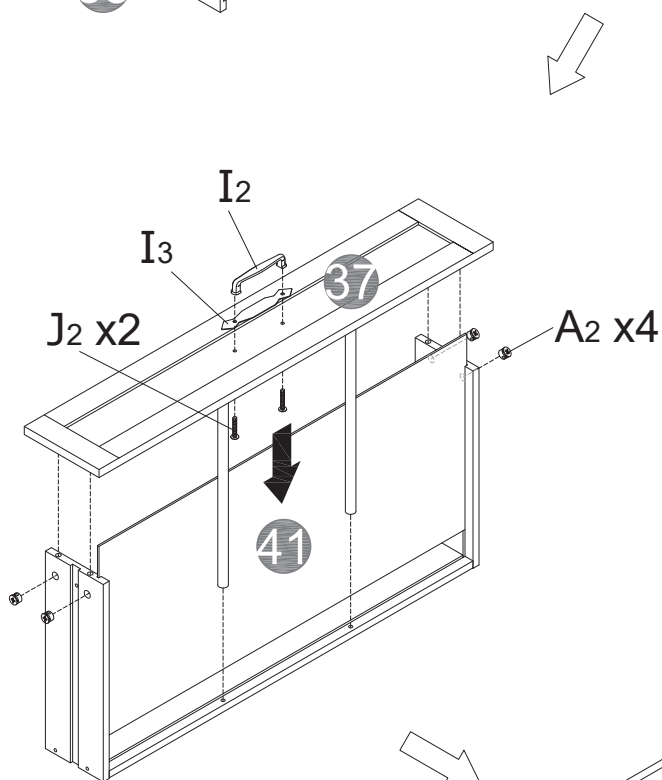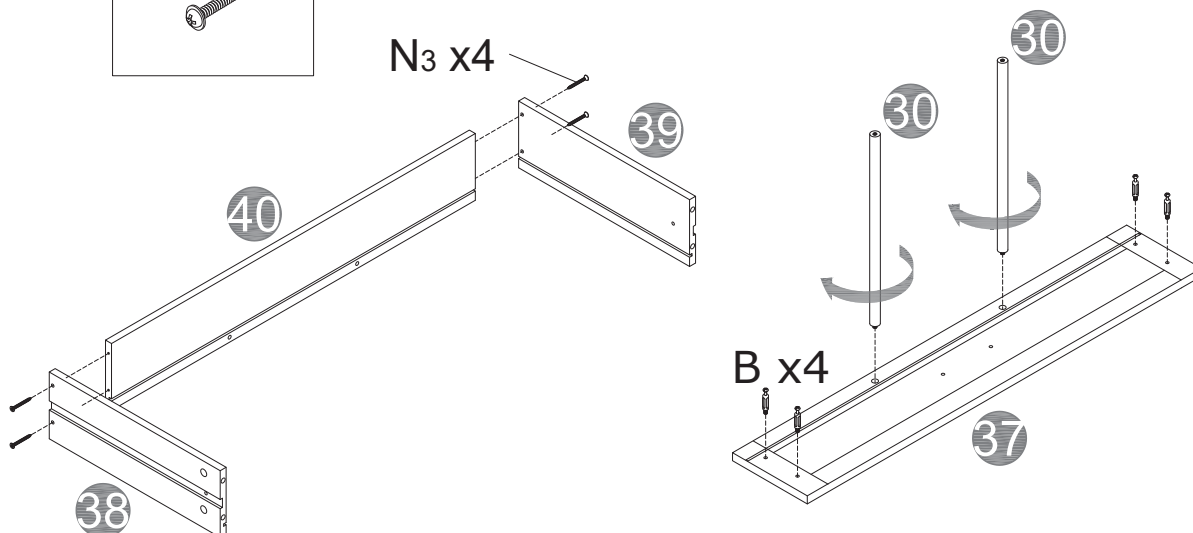




Tighten it with Z.

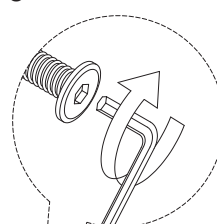



Ensure the drawer bottom board is inserted into all four slots, then tighten the screws.

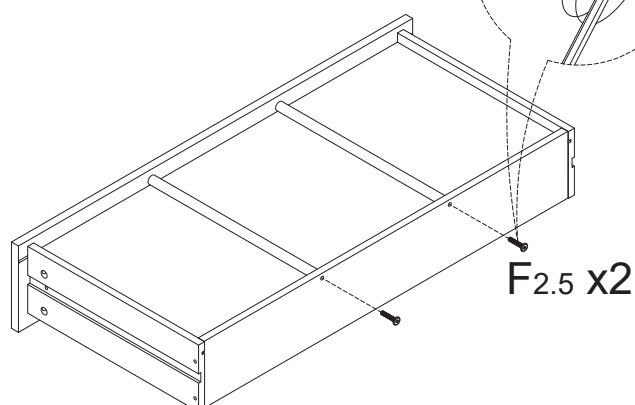

12

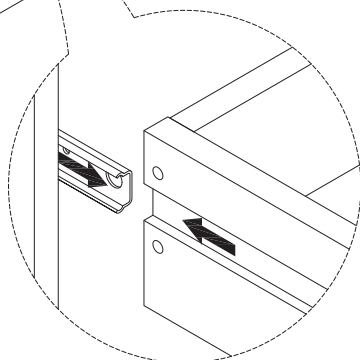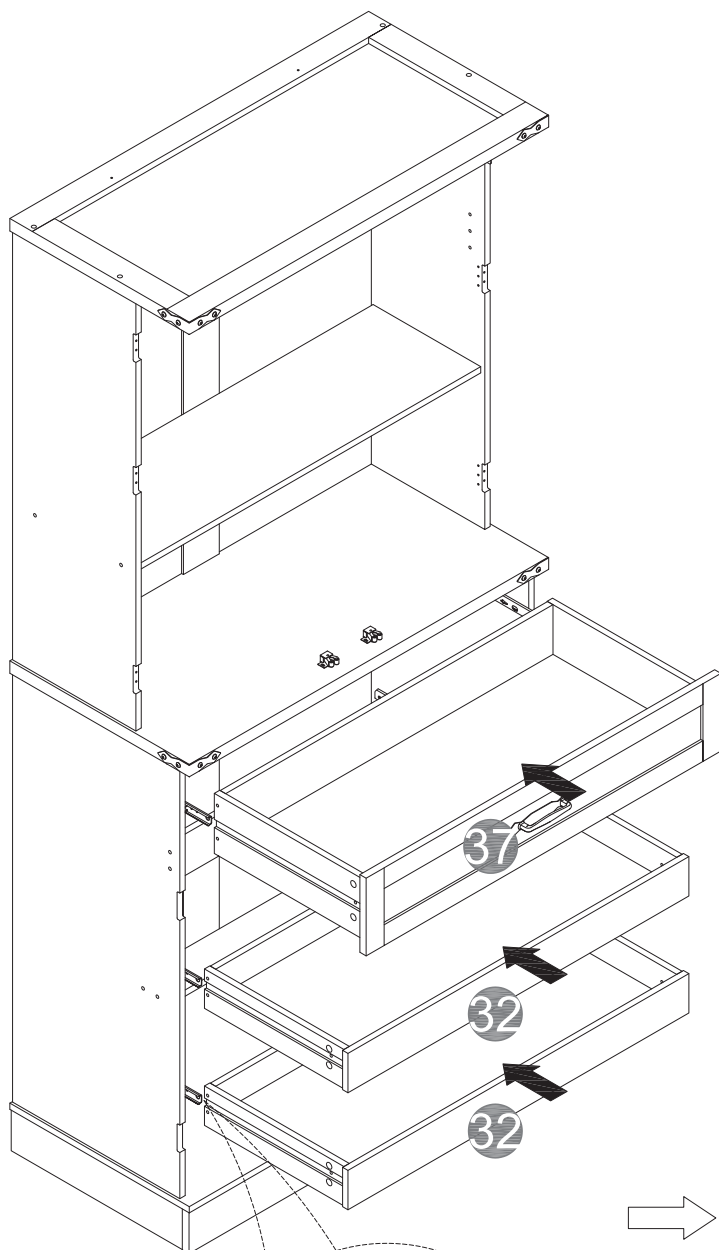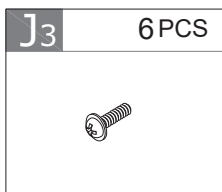





1. Align the track with the side groove and insert both sides simultaneously

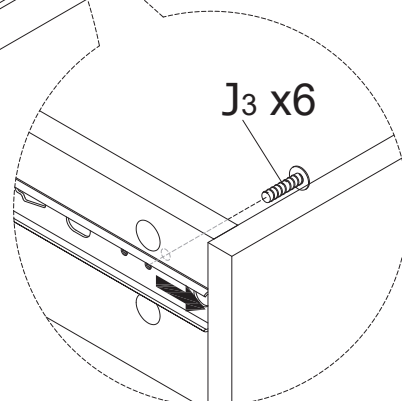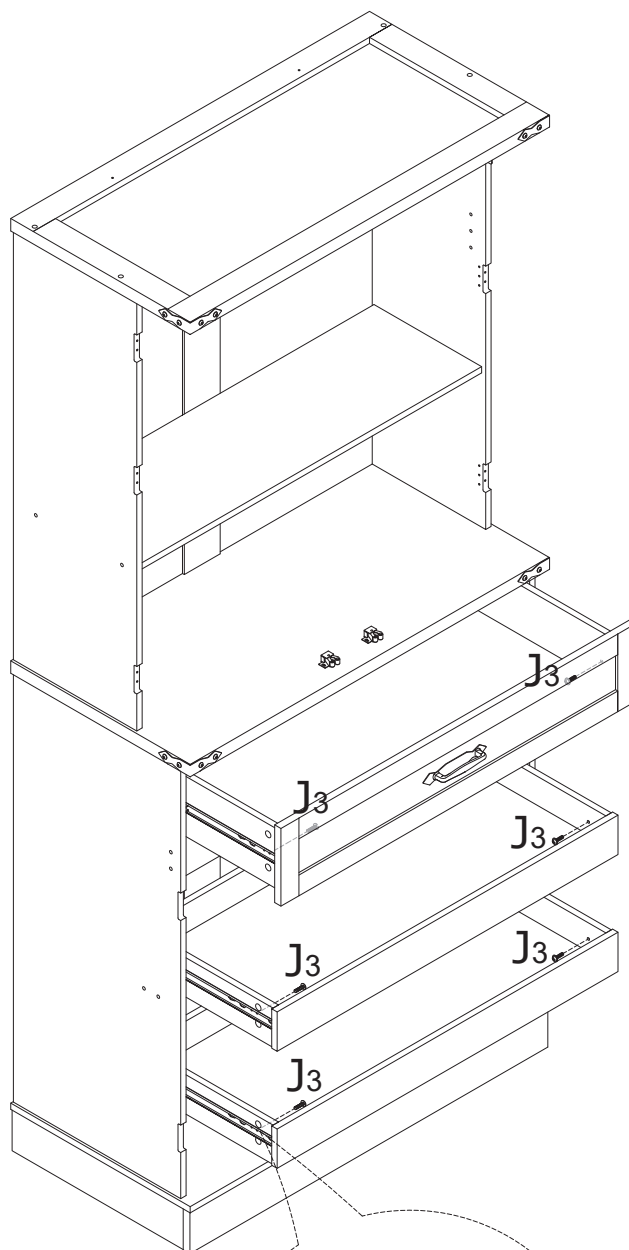





2. Push the track to the bottom and tighten the screws from the inside of the board

13

I ₂	2 PCS	I ₃	2 PCS	J	4 PCS	N	12 PCS	N ₁	4 PCS	MH ₃	4 PCS
X ₆	2 PCS										

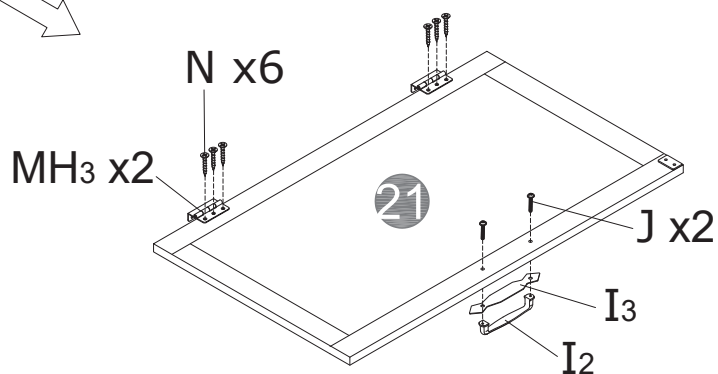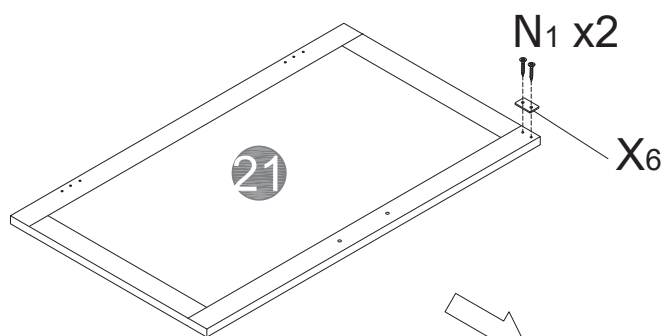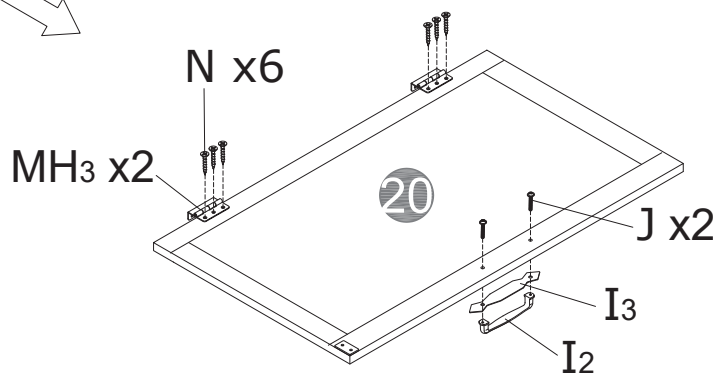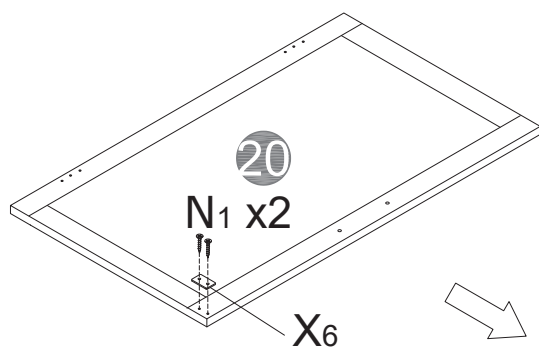




14

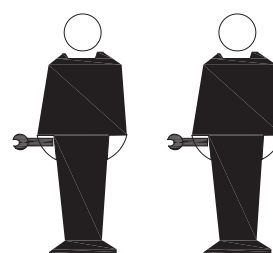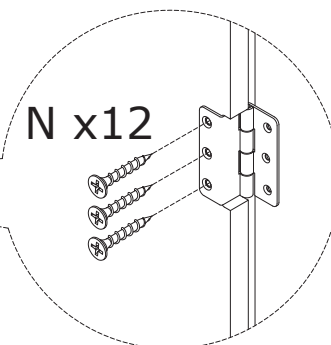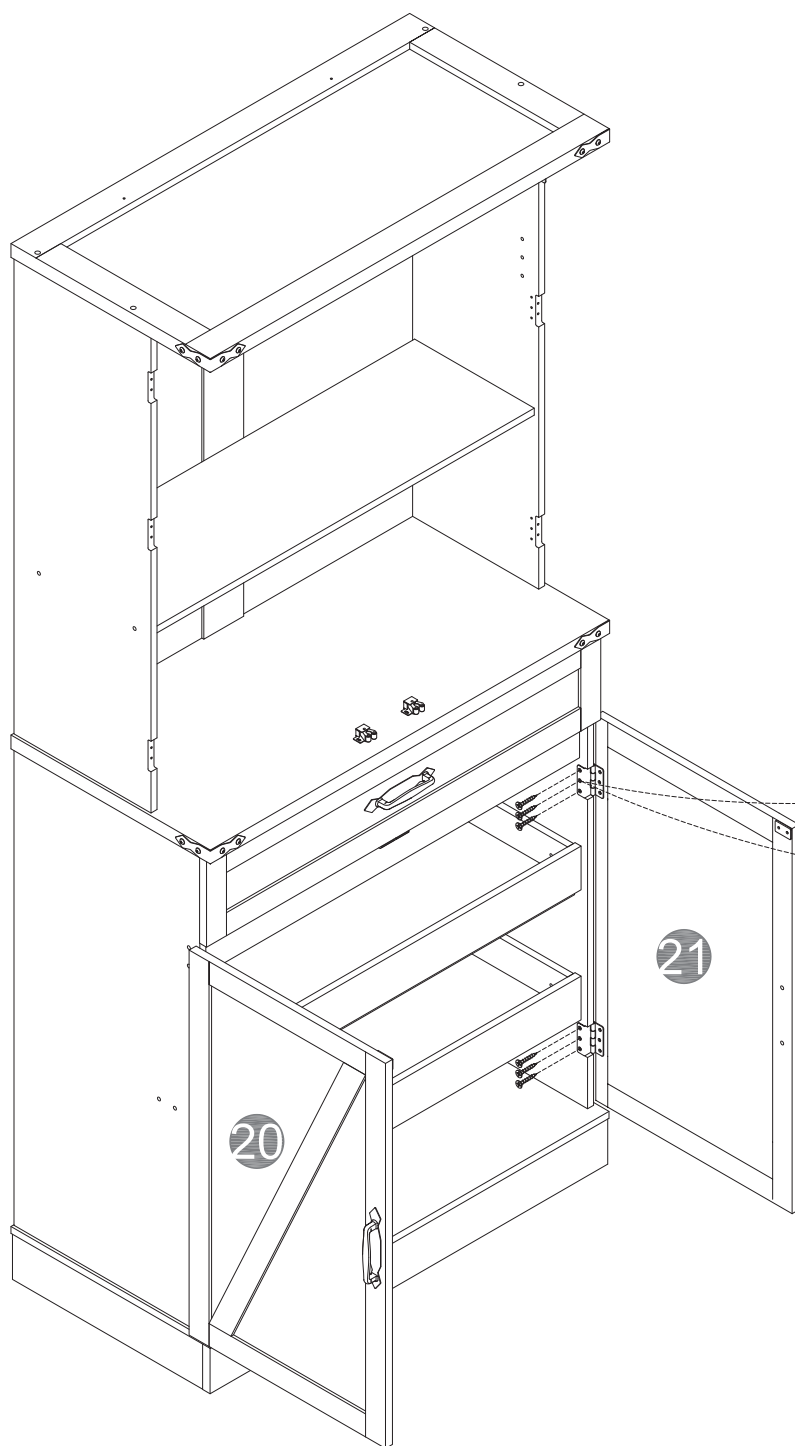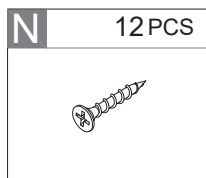


This step requires two people to complete




15

K4	4 PCS	N2	4 PCS
			

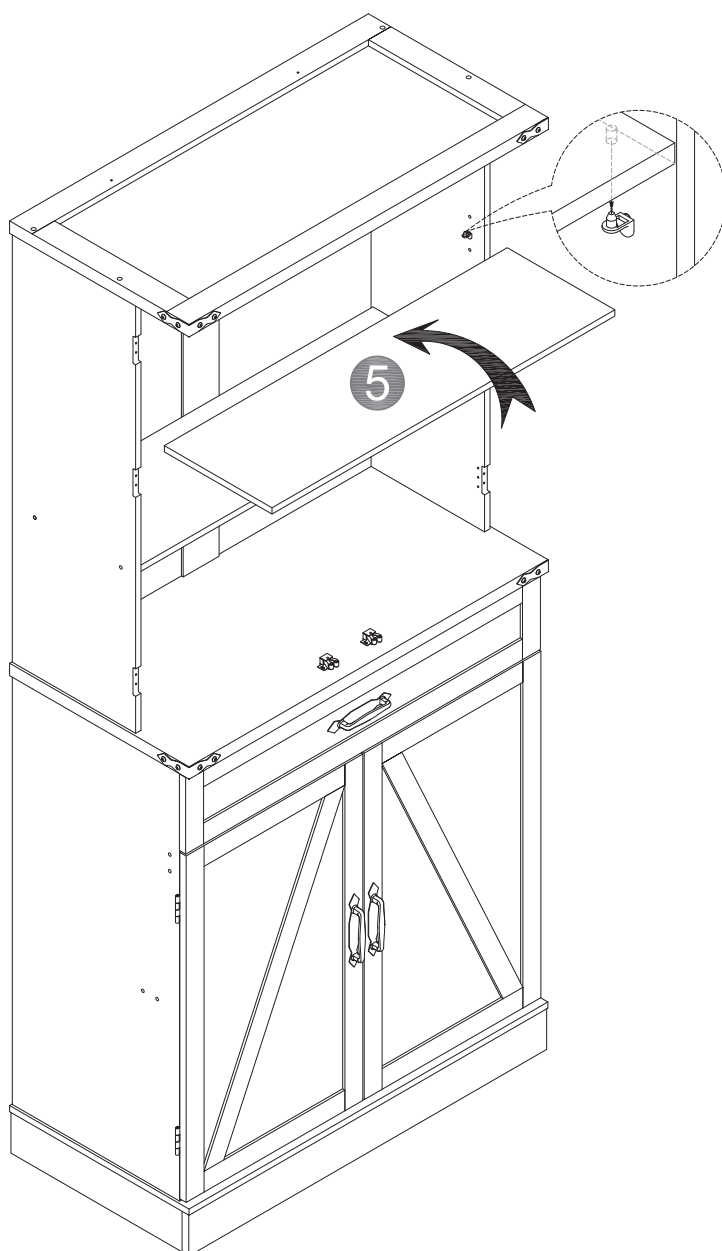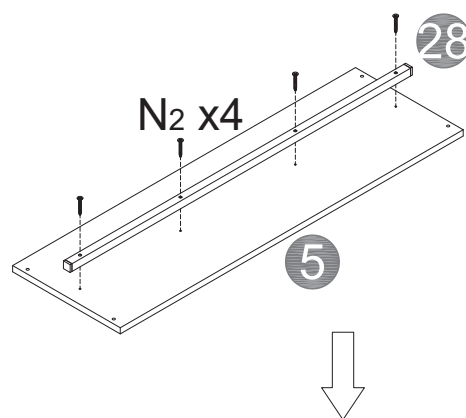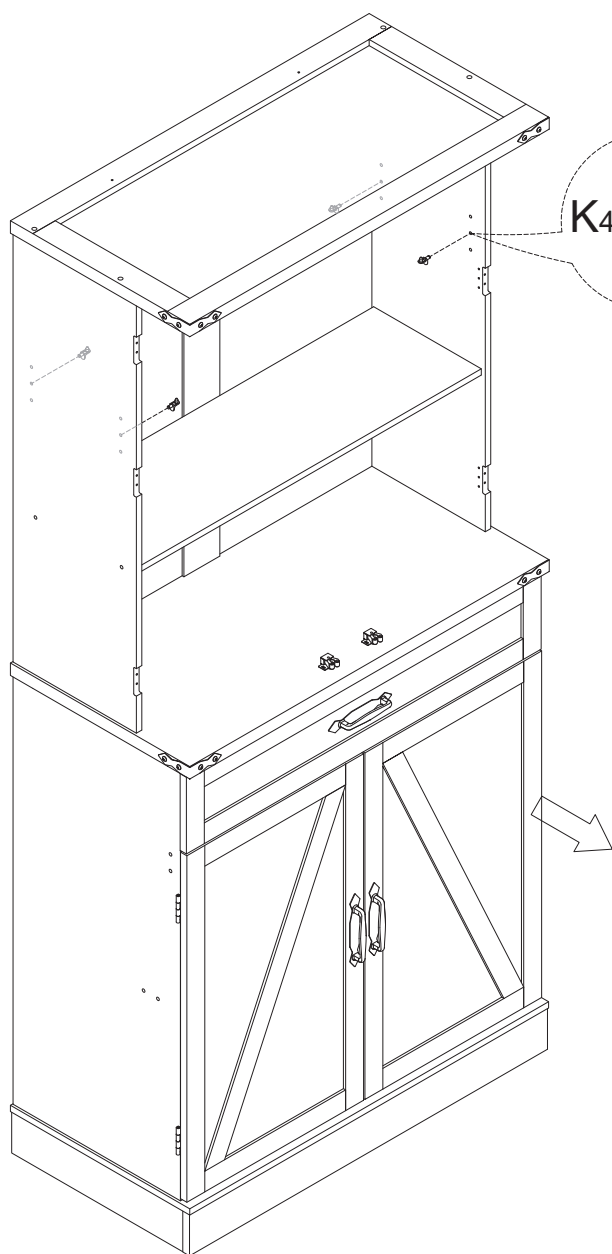


16




D	4 PCS	N ₃	8 PCS	N	15 PCS	MH ₄	3 PCS
							

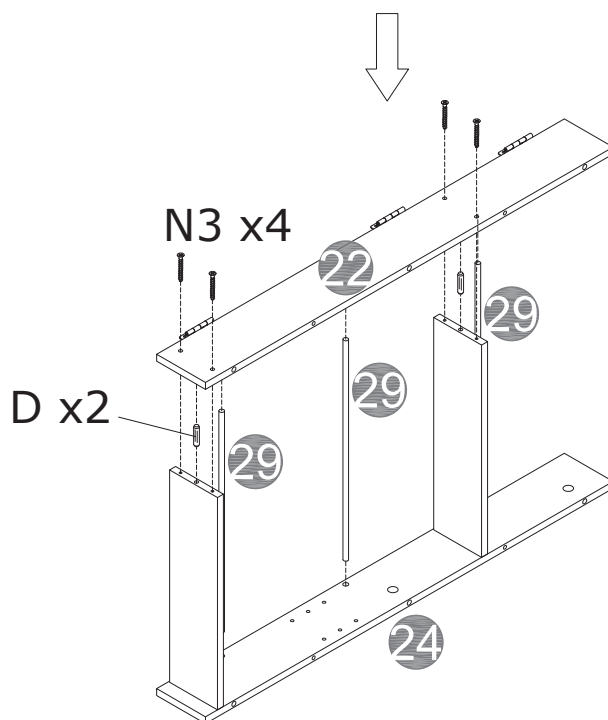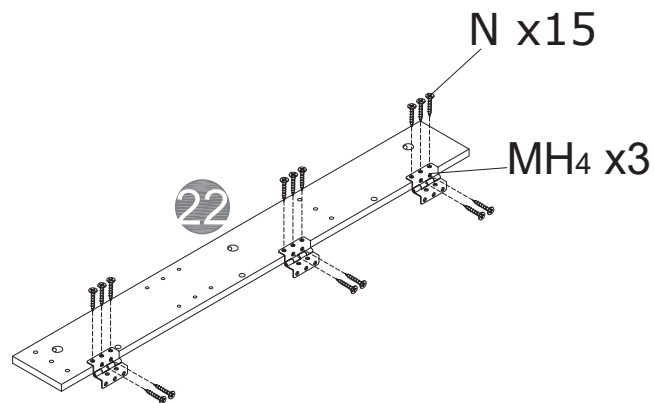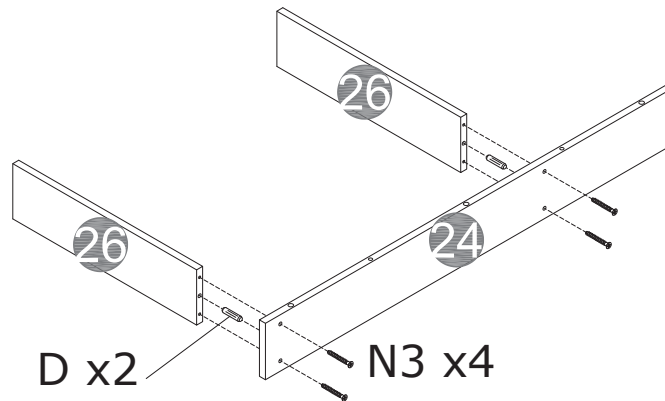


Ensure that the iron pipe is inserted into the holes of the upper and lower boards, then tighten the screws.

17

B	6 PCS	I₂	1 PC	I₃	1 PC	J	2 PCS	N₁	4 PCS	X₄	2 PCS
											

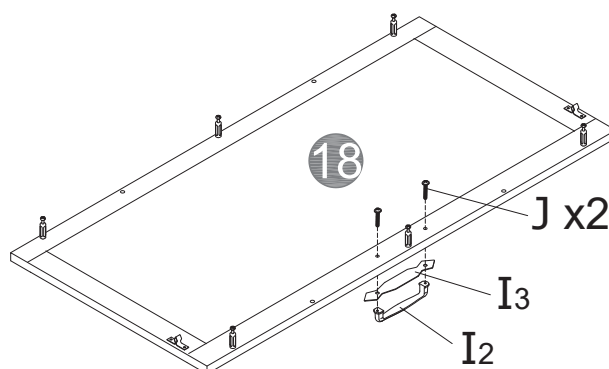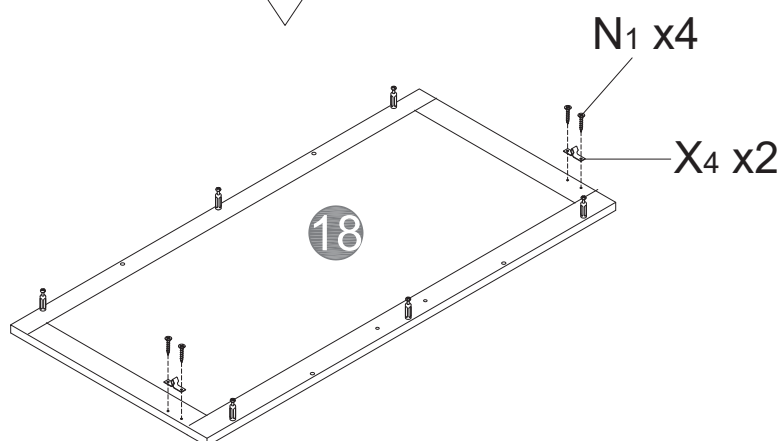
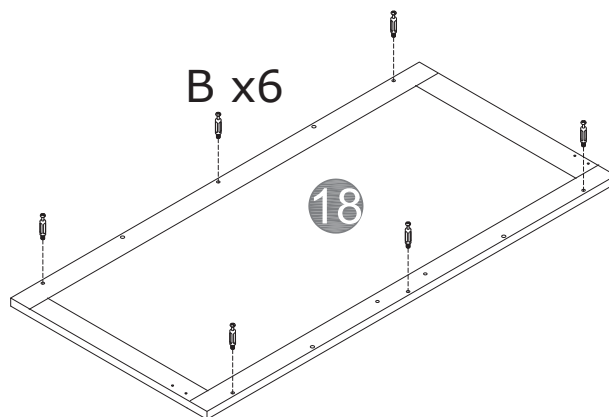





A	6 PCS	D	4 PCS
			

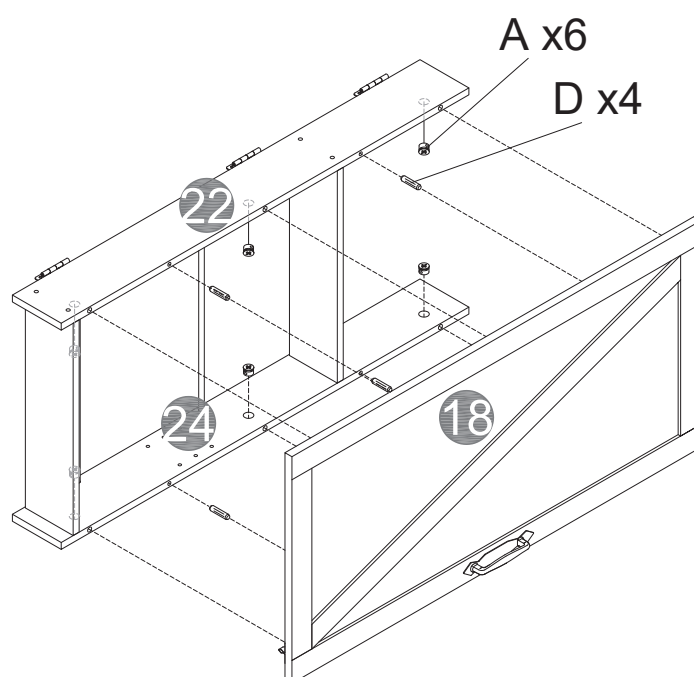

Note: Board 24 and the door board handle must be on the same side.


19






D	4 PCS	N ₃	8 PCS	N	15 PCS	MH ₄	3 PCS
							

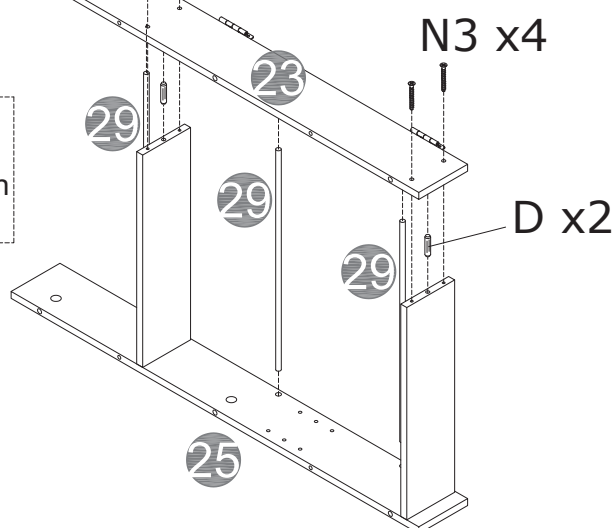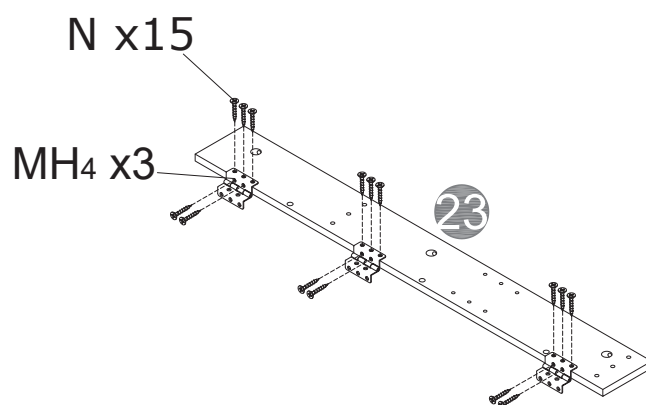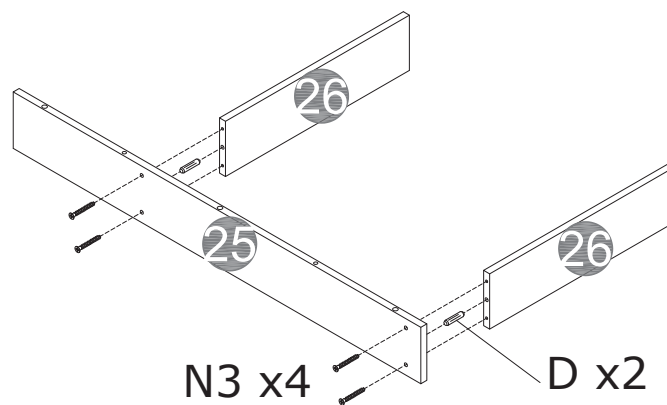


Ensure that the iron pipe is inserted into the holes of the upper and lower boards, then tighten the screws.


20

B	6 PCS	I₂	1 PC	I₃	1 PC	J	2 PCS	N₁	4 PCS	X₄	2 PCS
											

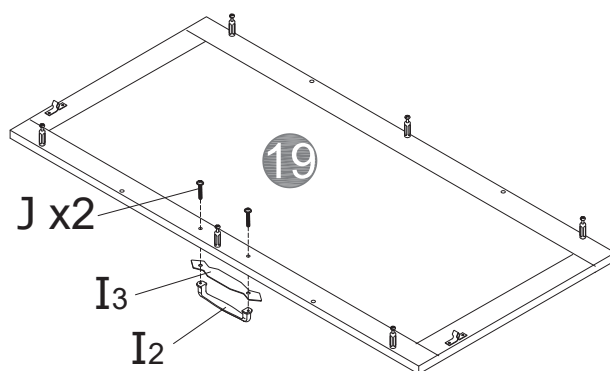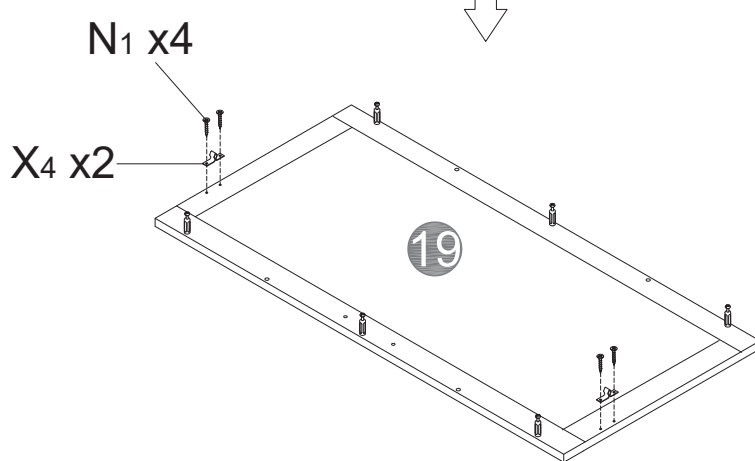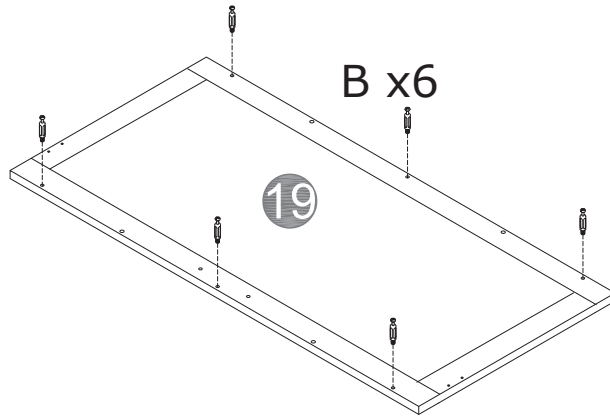


21

A	6 PCS	D	4 PCS
			


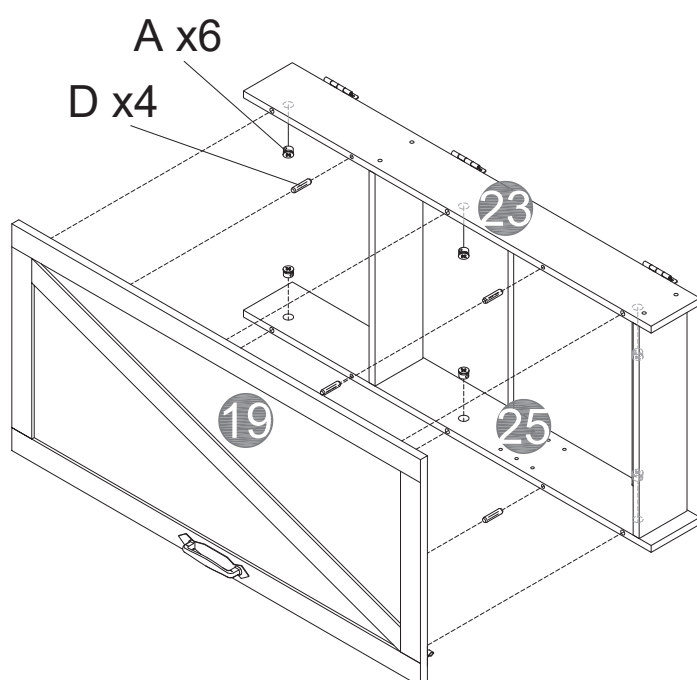


Note: Board **25** and the door board handle must be on the same side.

22


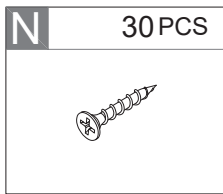


N x30

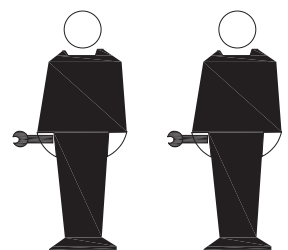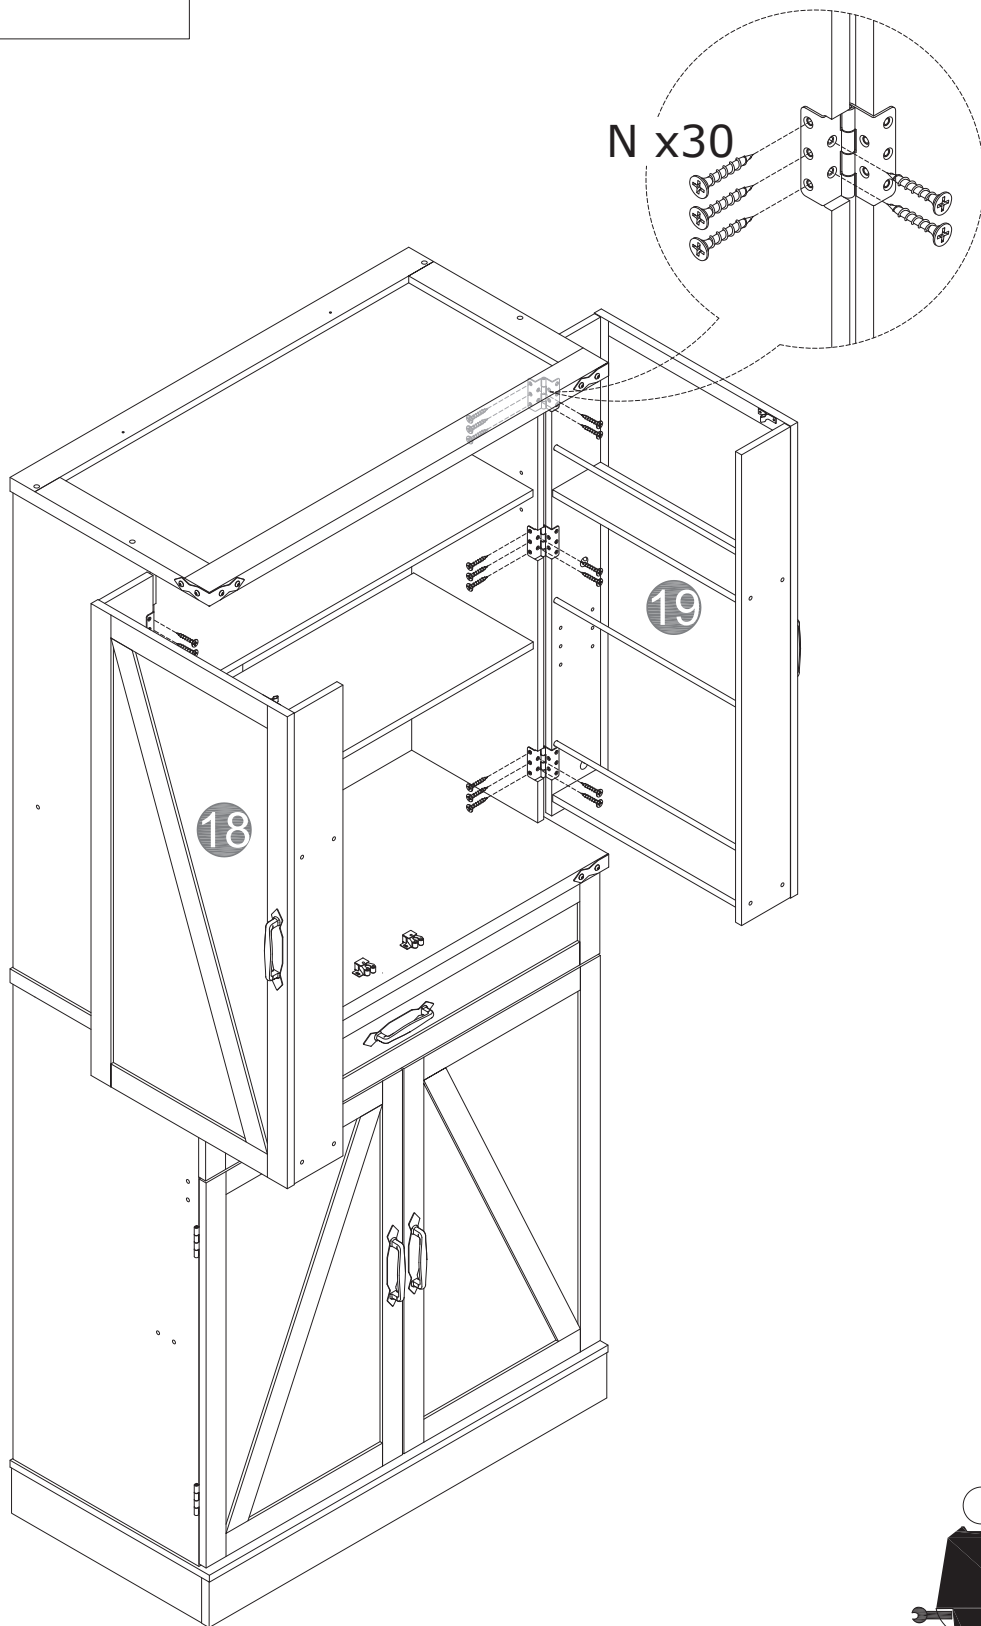


This step requires two people to complete


23

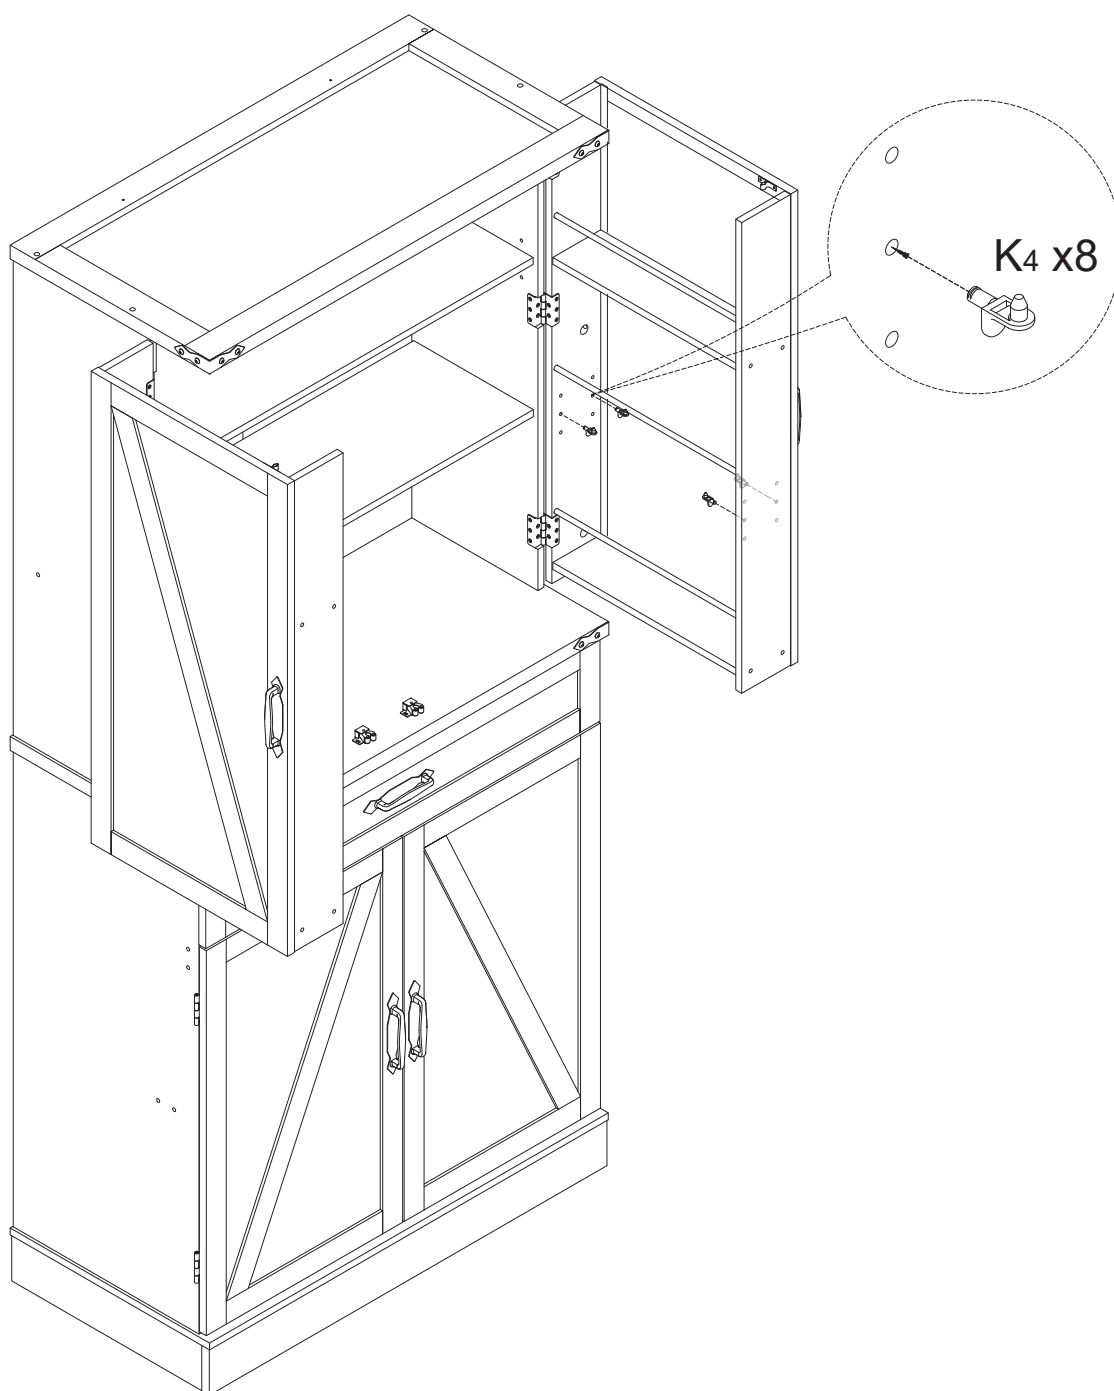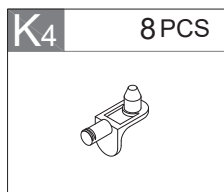

24

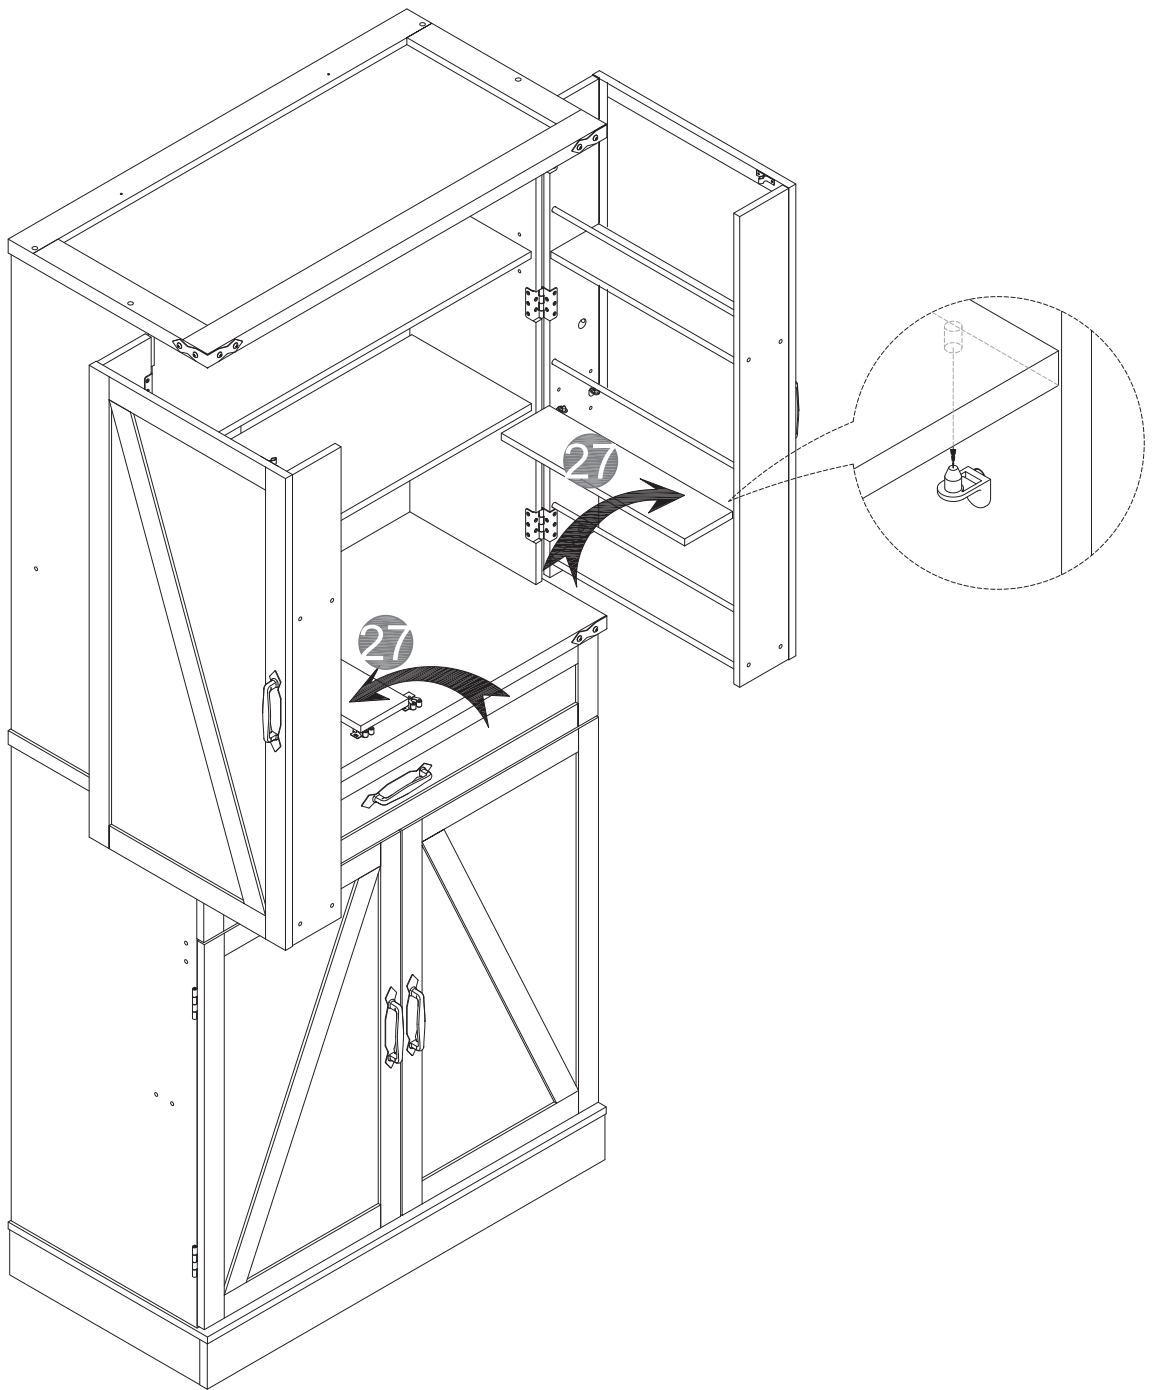


25

Q	20 PCS	N7	20 PCS
			


Installing back board fasteners can improve the overall stability of the furniture. It ensures the verticality of the furniture and that the door boards are level, so that the gaps are uniform.

Also, you can adjust the level of the cabinet by using the adjustable feet at the bottom of the furniture to make the gaps between the cabinet door boards even.

During the adjustment process, you should first place the furniture in the position where it is needed. Otherwise, when you move it to that position after adjustment, you may encounter an uneven floor.

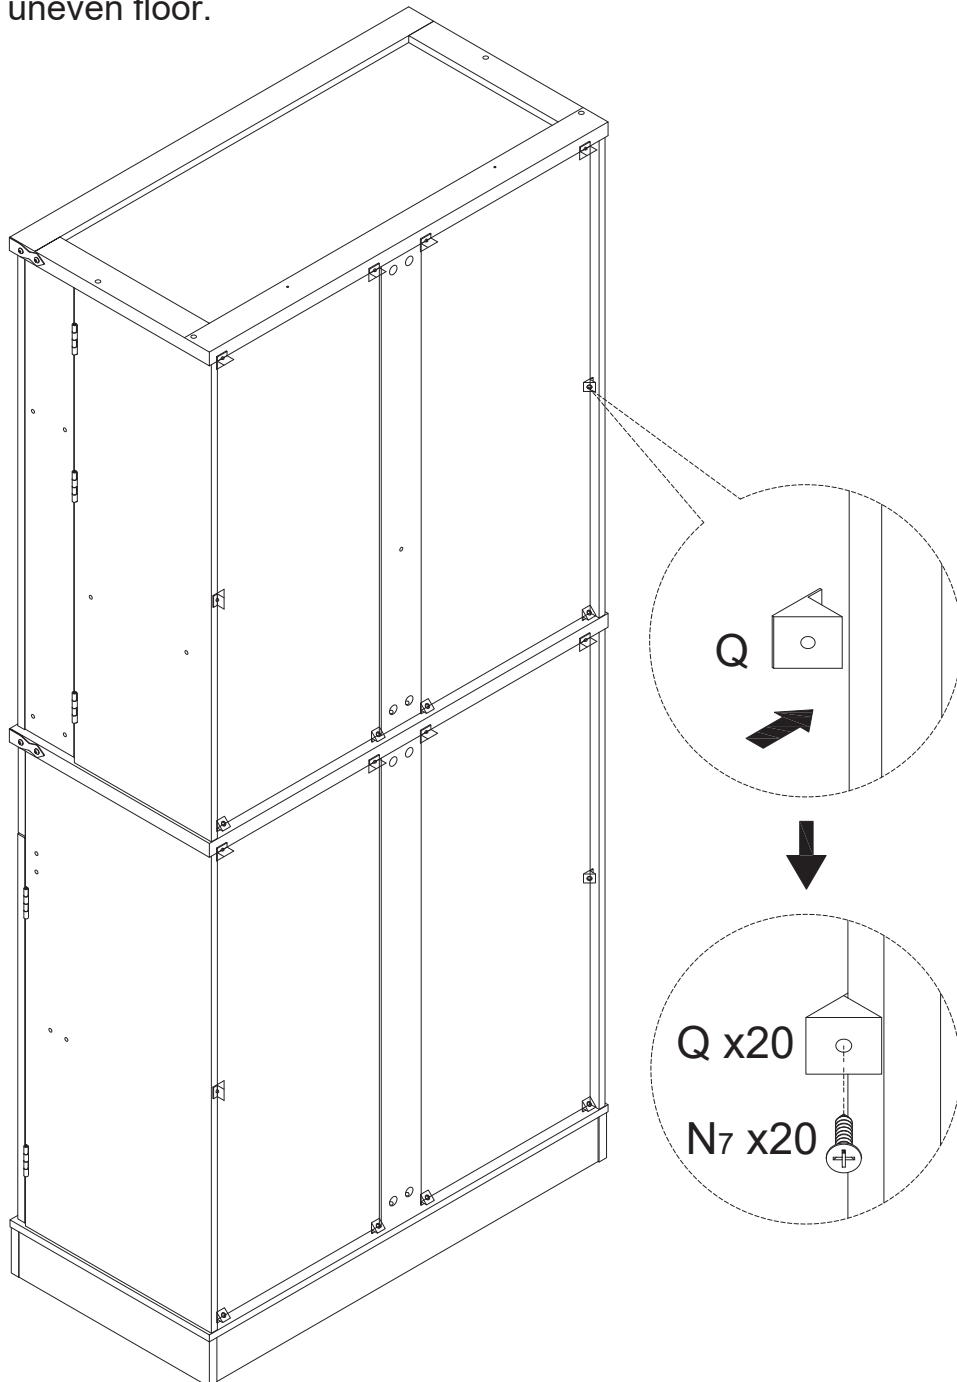


26

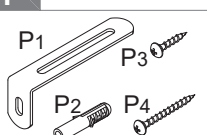P	2 PCS	C	76 PCS
			

Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

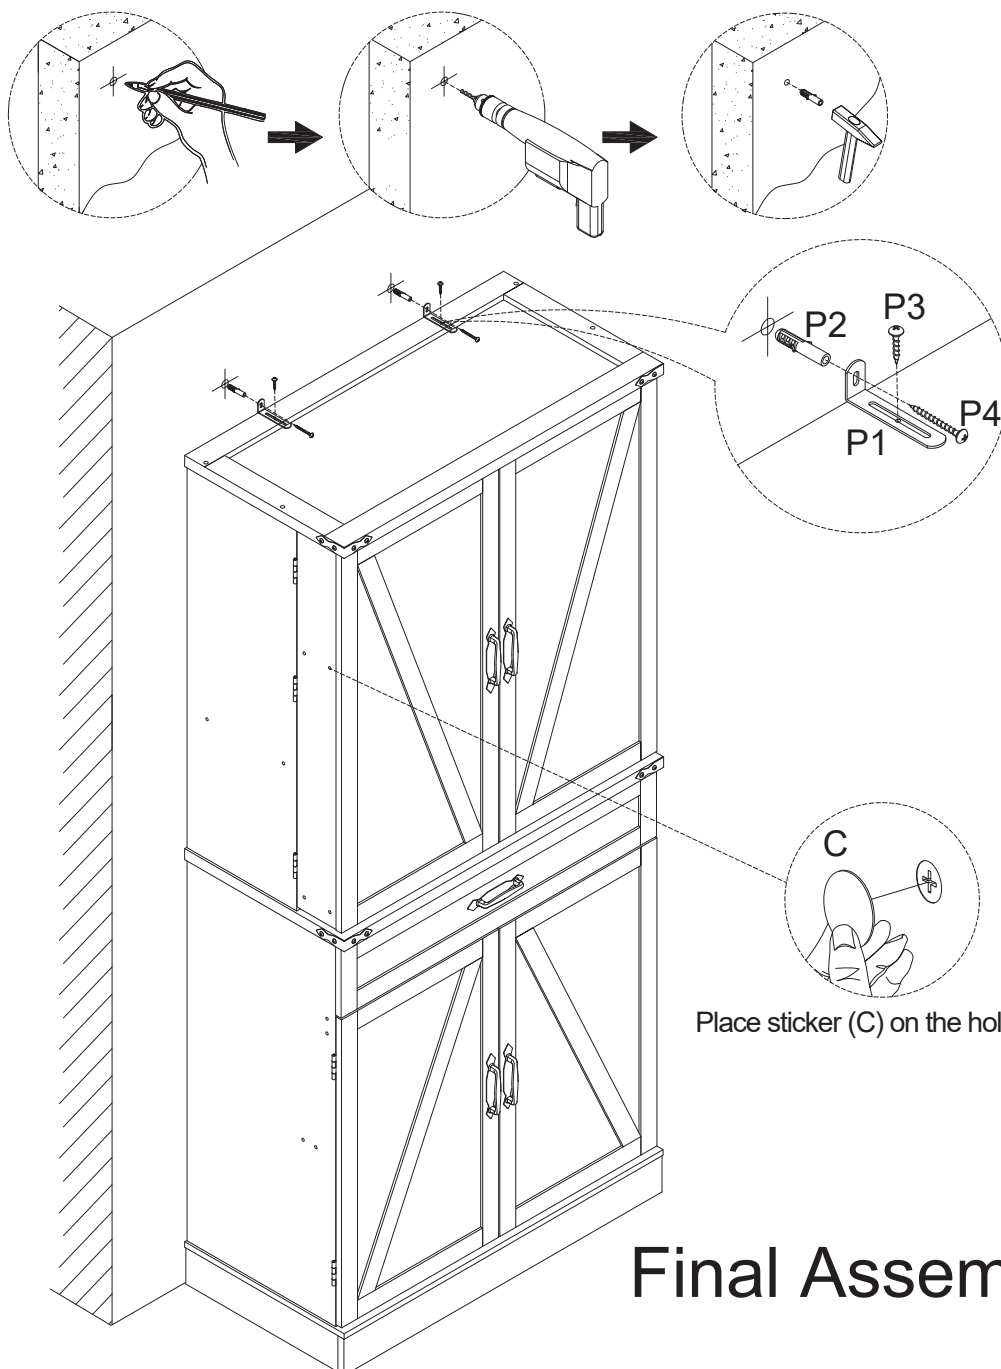

Place sticker (C) on the hole.

Final Assembly