



DJ0753-91CM

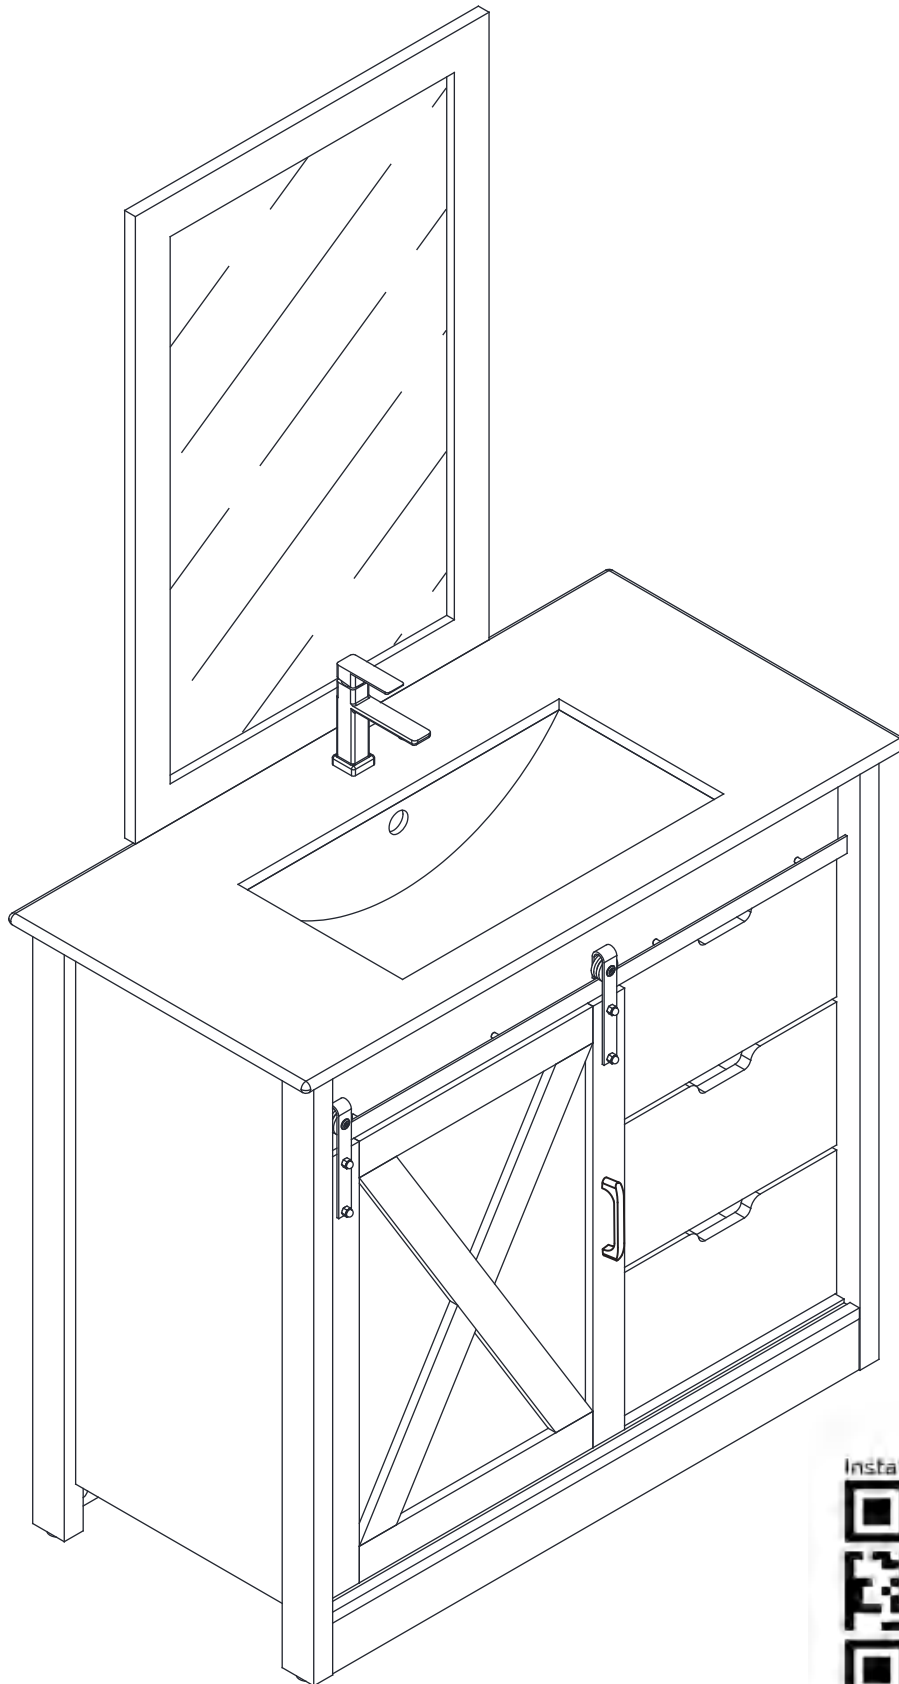

Installation Video QR





DJ0753-91CM
<https://vimeo.com/1048121746>

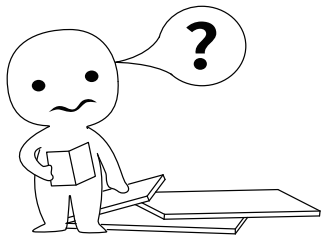



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

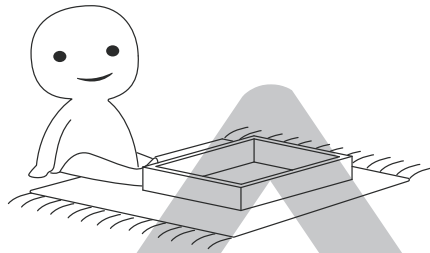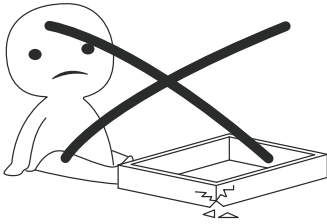




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

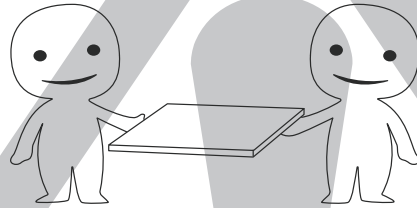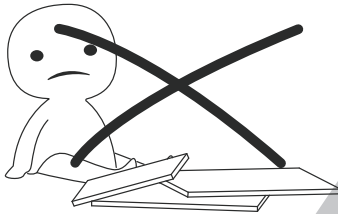

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

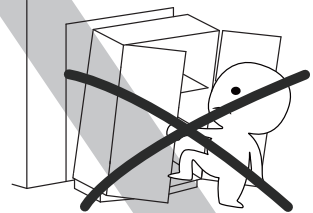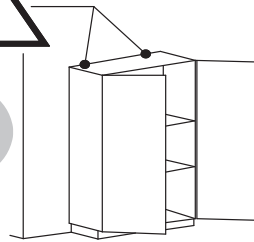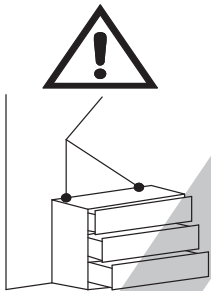

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



'SAFETY TIPS:

Static charge may cause dust on foam - clean with a dry or damp cloth.

Styrofoam strands may represent - handle gently and dispose of properly.























Do not burn or incinerate.

Check local recycling guidelines.








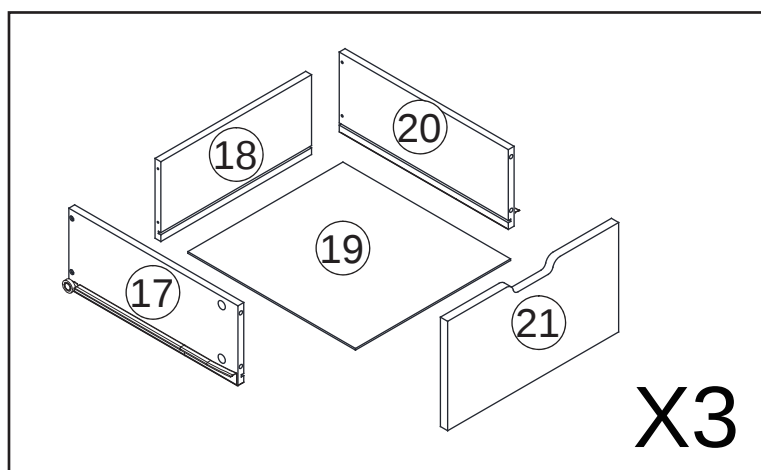
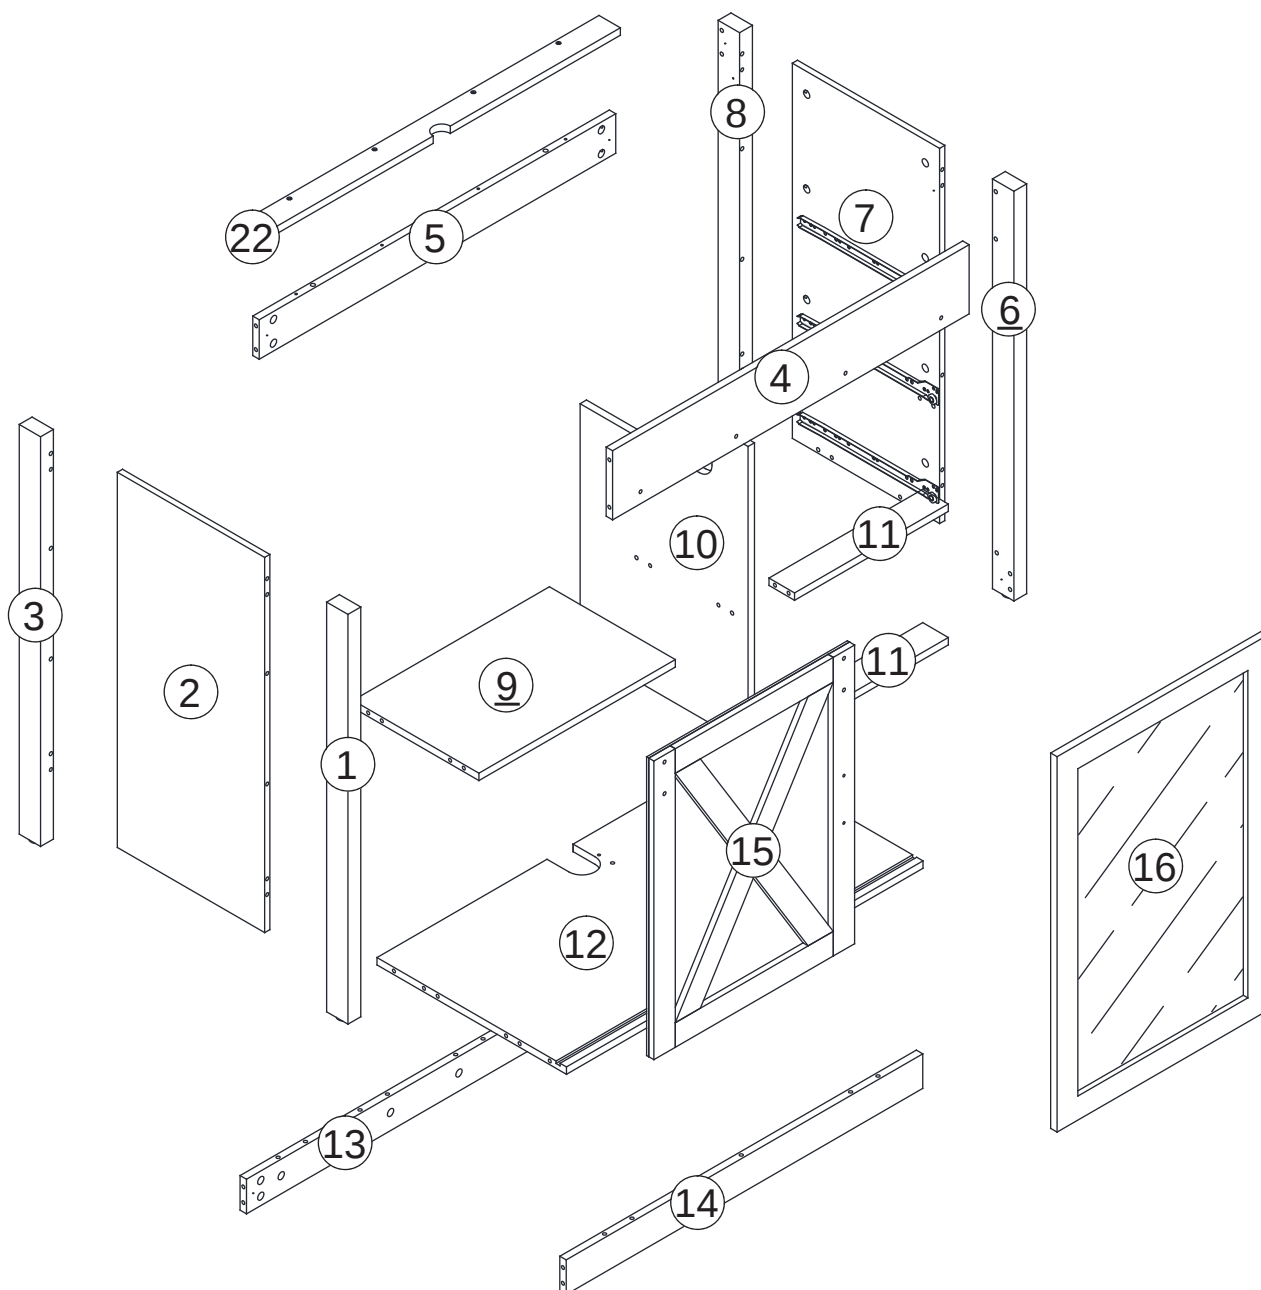


X3

Parts and Operation Elements

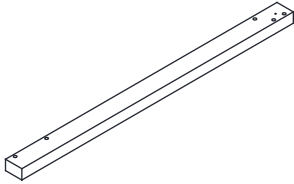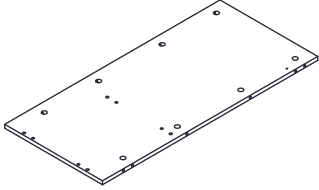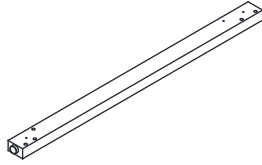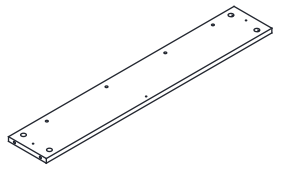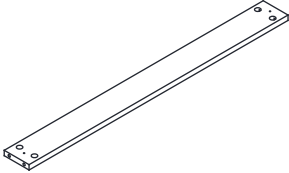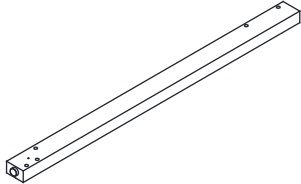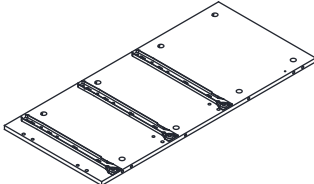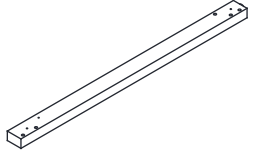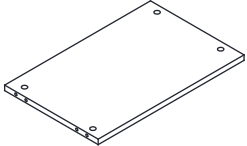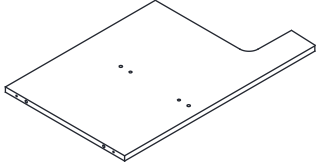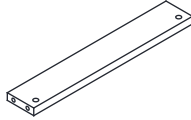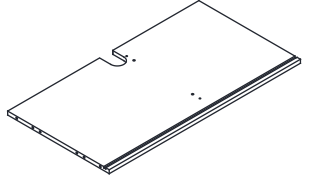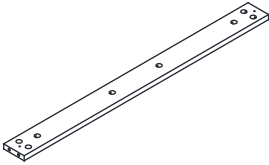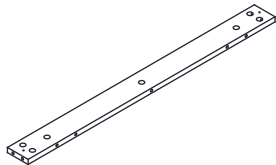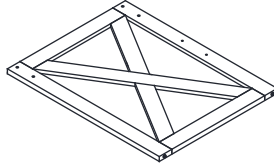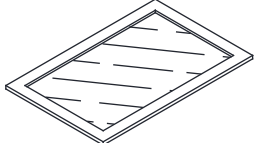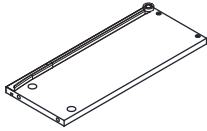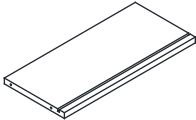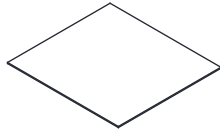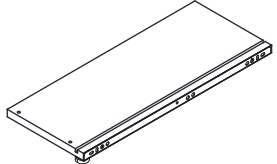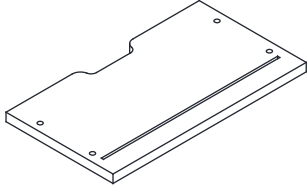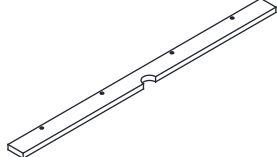			
① Roof 1pc	② On the left panel 1pc	③ Left front bracket 1pcs	④ Neutral plates 1pc
			
⑤ Upper bezel 1pc	⑥ Right front bezel 1pc	⑦ Upper right side panel 1pc	⑧ Upper backplate 1pc
			
⑨ Lower left side panel 1pc	⑩ Shelves 1pc	⑪ Lower right side panel 2pcs	⑫ Horizontal bars 1pc
			
⑬ Left door panel 1pc	⑭ Right door panel 1pc	⑮ Lower back plate 1pc	⑯ Front bar 1pc
			
⑰ Lower rear bar 3pcs	⑱ Horizontal bars 3pcs	⑲ Front baseboard 3pcs	⑳ Draw the back plate 3pcs
			
㉑ The plate 3pcs	㉒ Upper bar 1pc		





Hardware

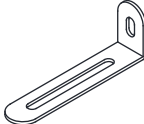 6x32mm Cam bolt		 15x9.5mm cam lock		 7x30mm Wooden dowel		 Dual-purpose screwdriver	
A	67+2pcs	B	67+2pcs	C	30+2pcs	D	1pc
 Fixed spanner		 5x40mm screw		 3.5x12mm screw		 Mirror hook	
E	1pc	F	2pcs	G	22+2pcs	H	2pcs
 4x14mm screw				 Sticker		 Iron laminate nails	
I	 5x40mm screw			J	67+2pcs	K	1pc
 4x30mm screw		 Handle		 Nut		 Magnetic contact	
L	16+2pcs	M	1pc	P	4pcs	Q	2pcs
 M6x22mm bolt		 M4x18mm bolt		 4x40mm screw		 	
R	8+2pcs	S	2pcs	T	2sets	U	9pcs






SPARE BAG




THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING.

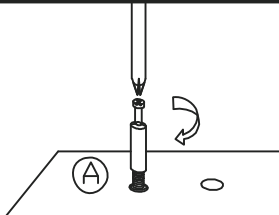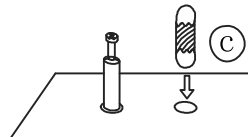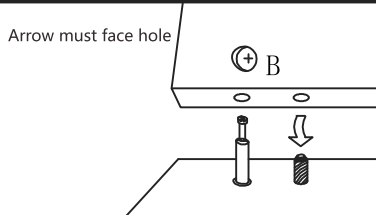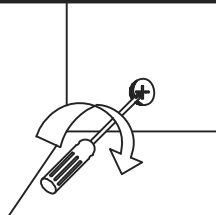			
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.

1

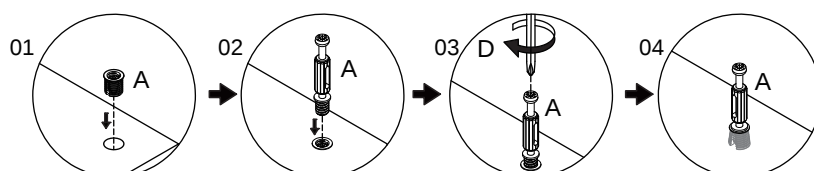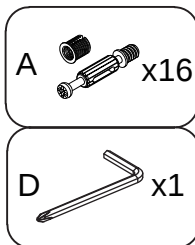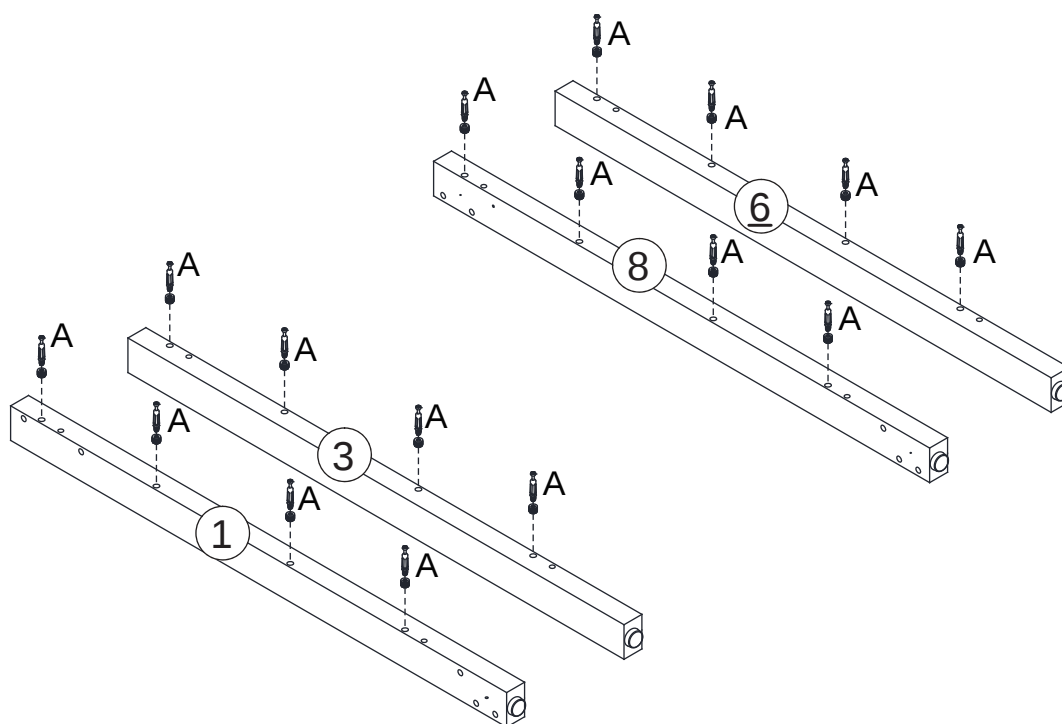



2

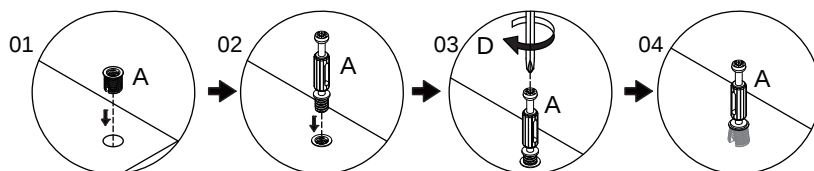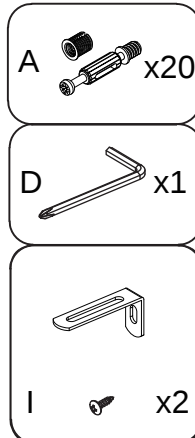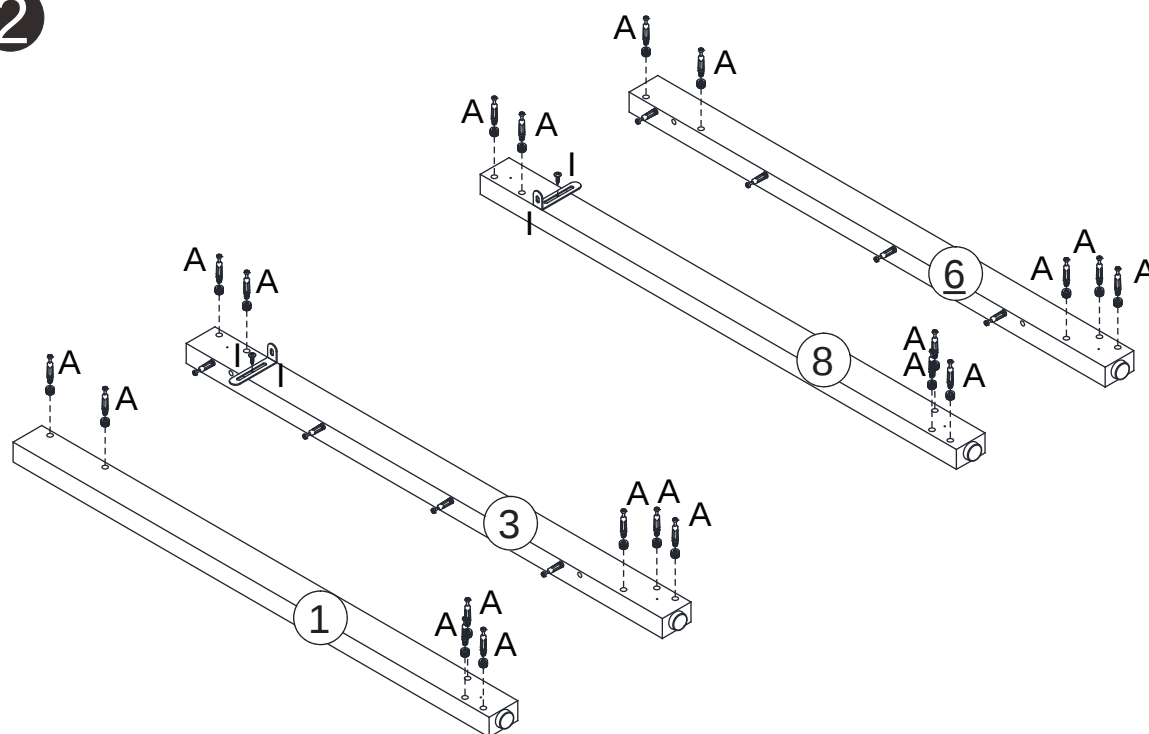

3

A x8

D x1

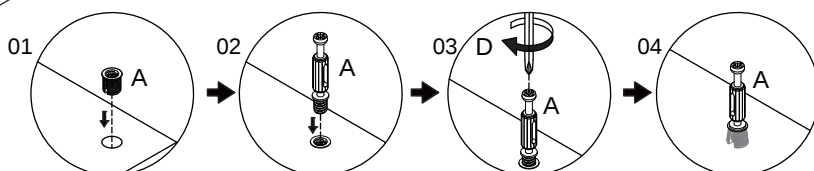
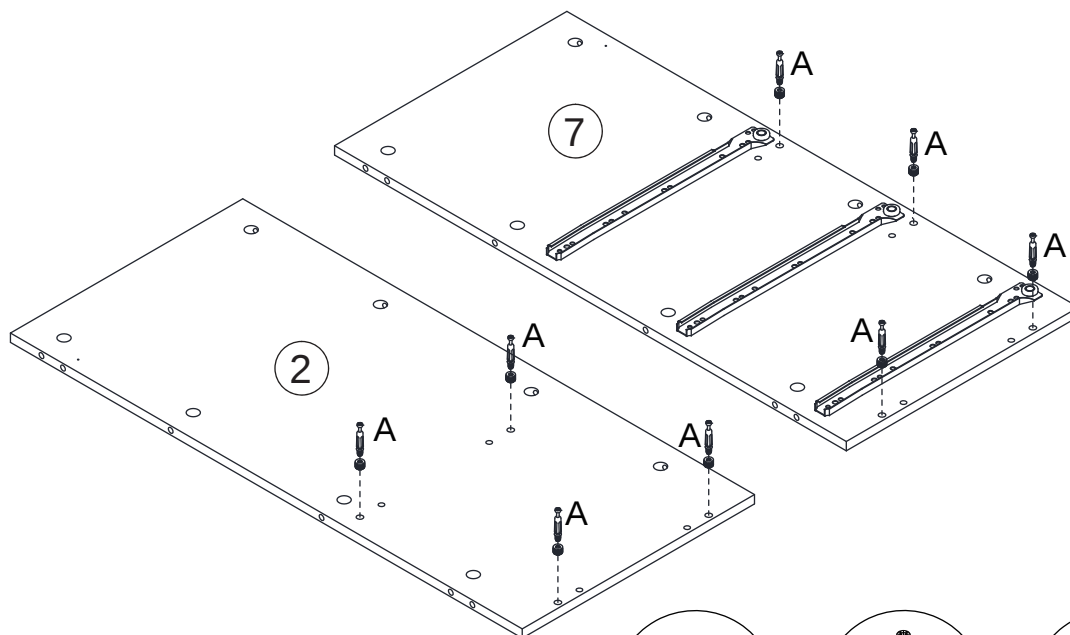


4



B x8

C x4

D x1

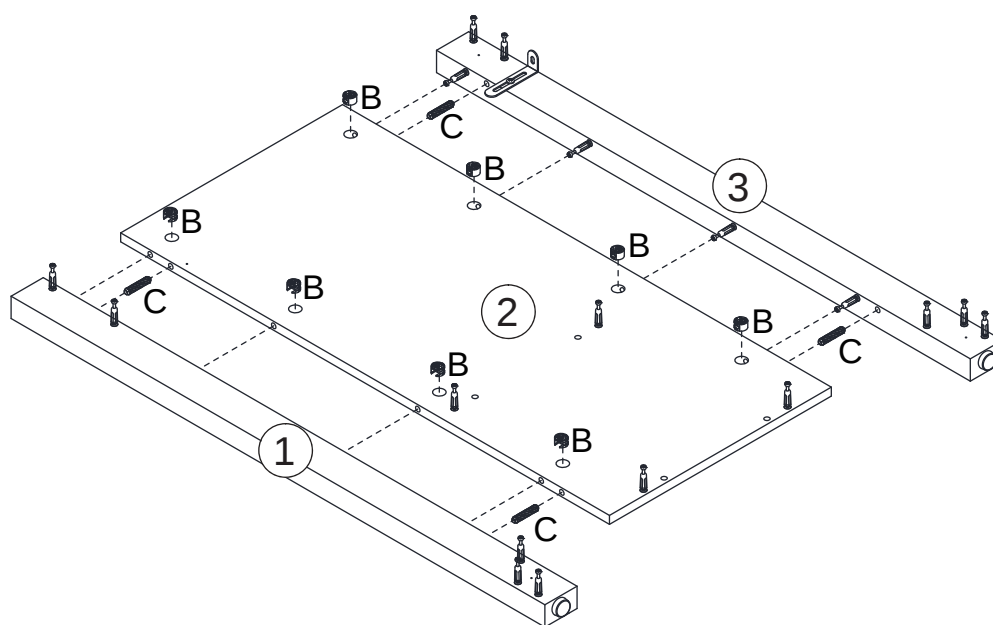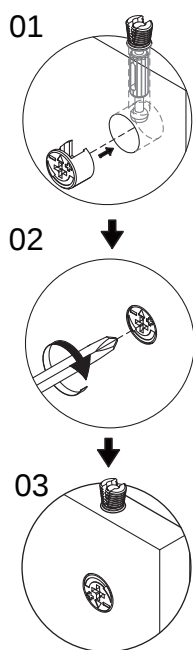


5

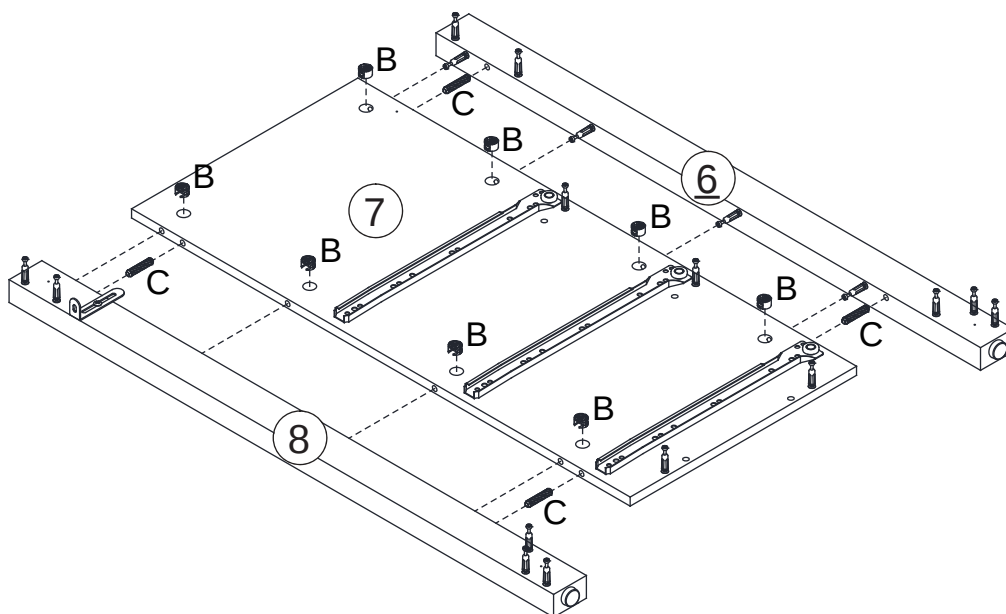
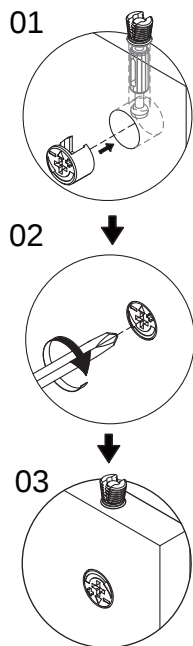


B  x8

C  x4


D  x1

6

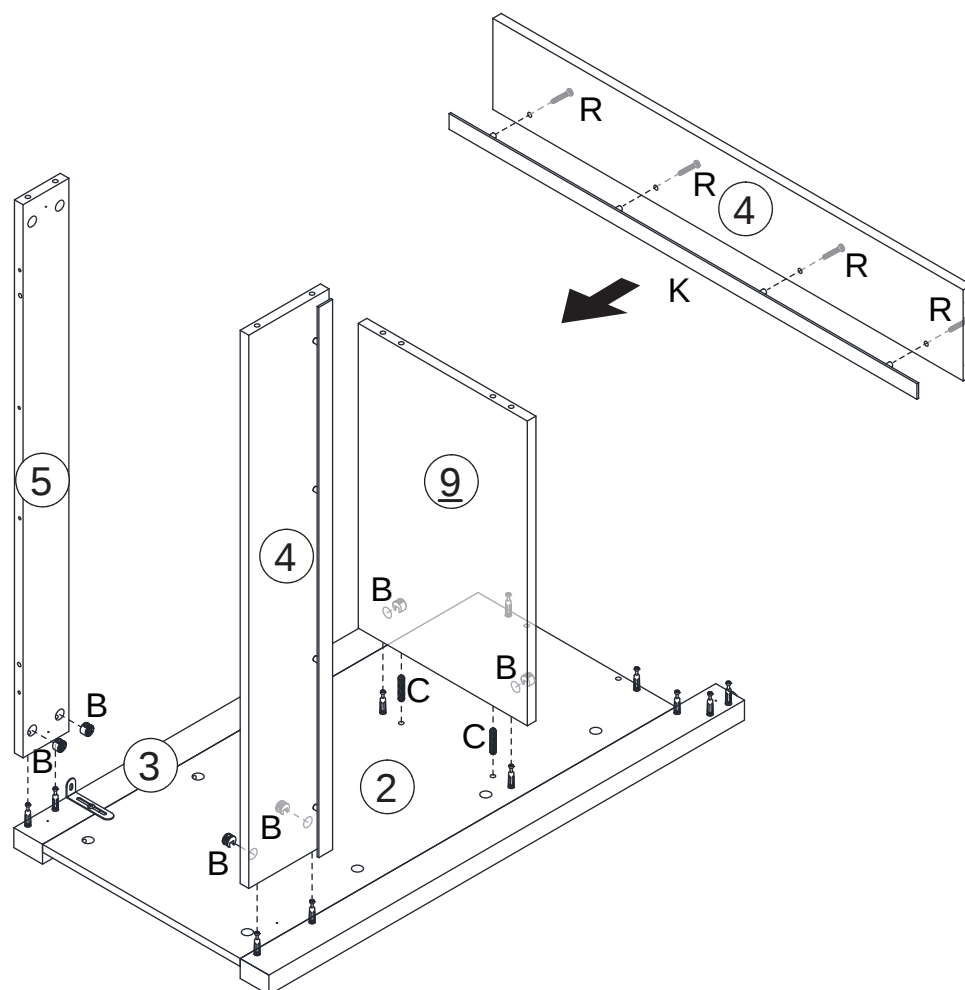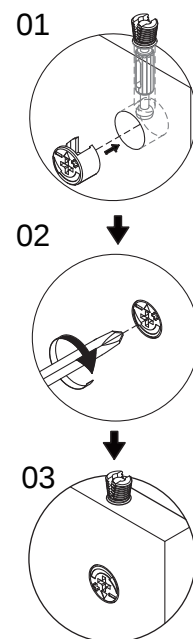

B  x6




C  x2

D  x1




R  x4

K  x1




7

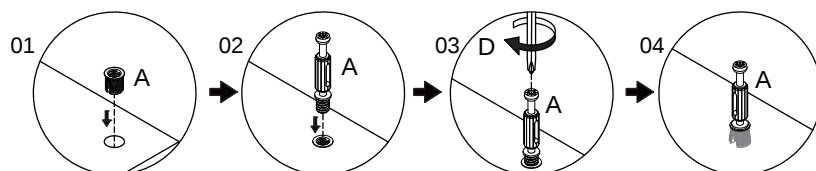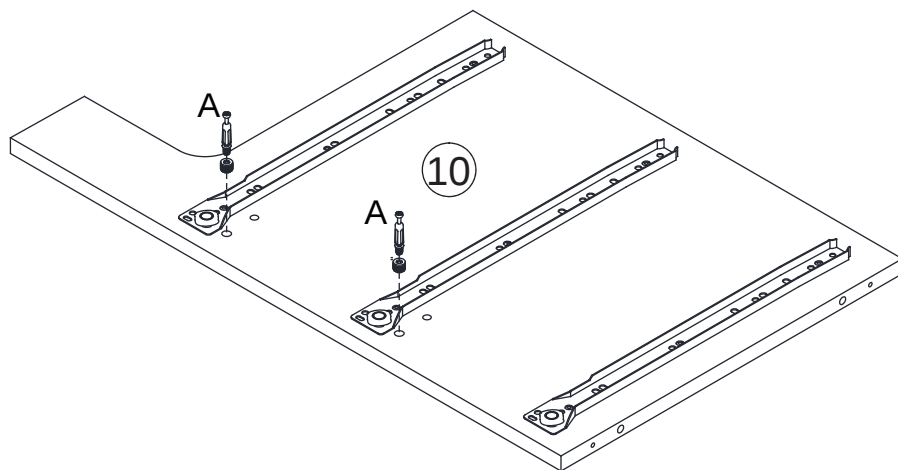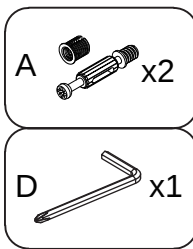

8

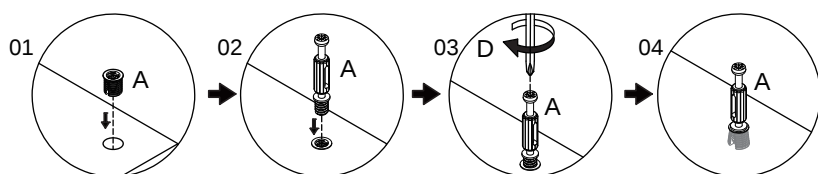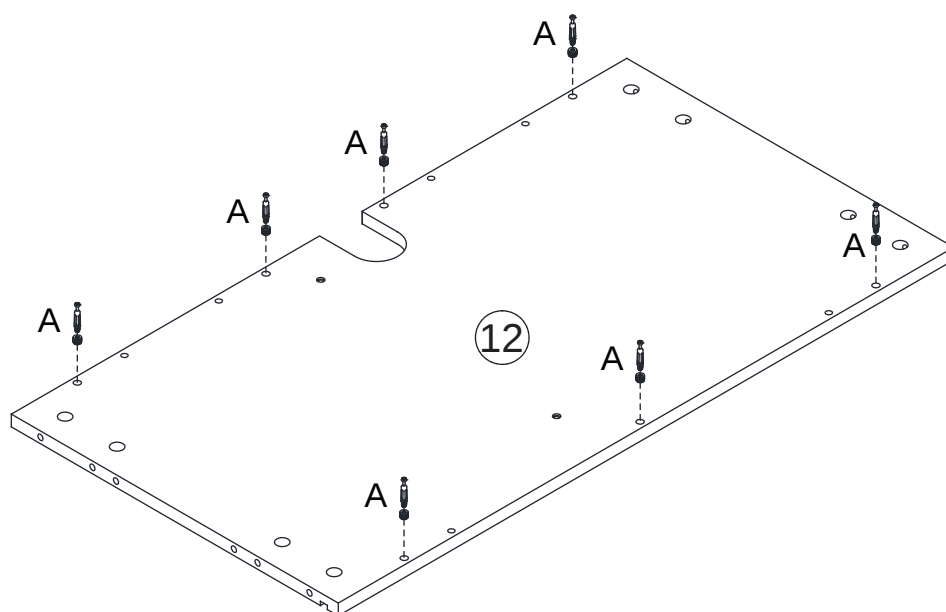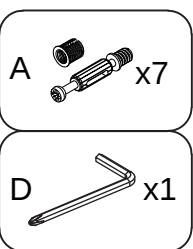


9

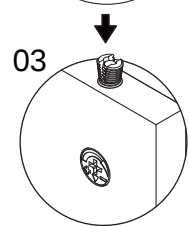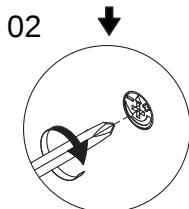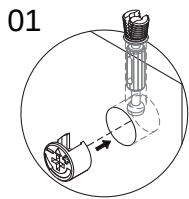


B  x7

C  x6

D  x1

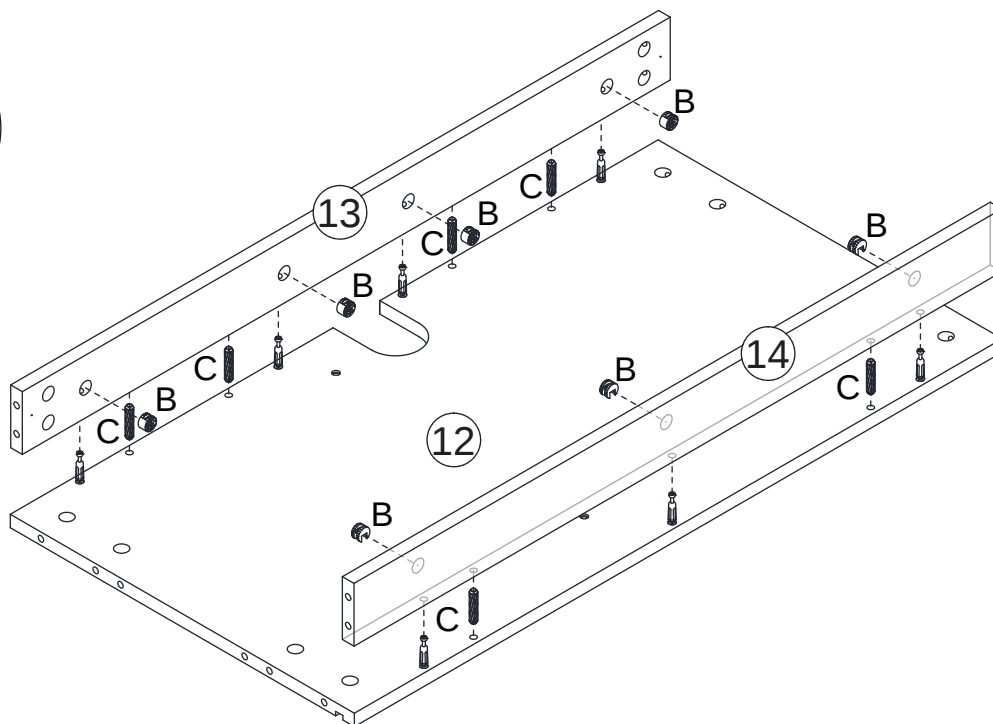

10

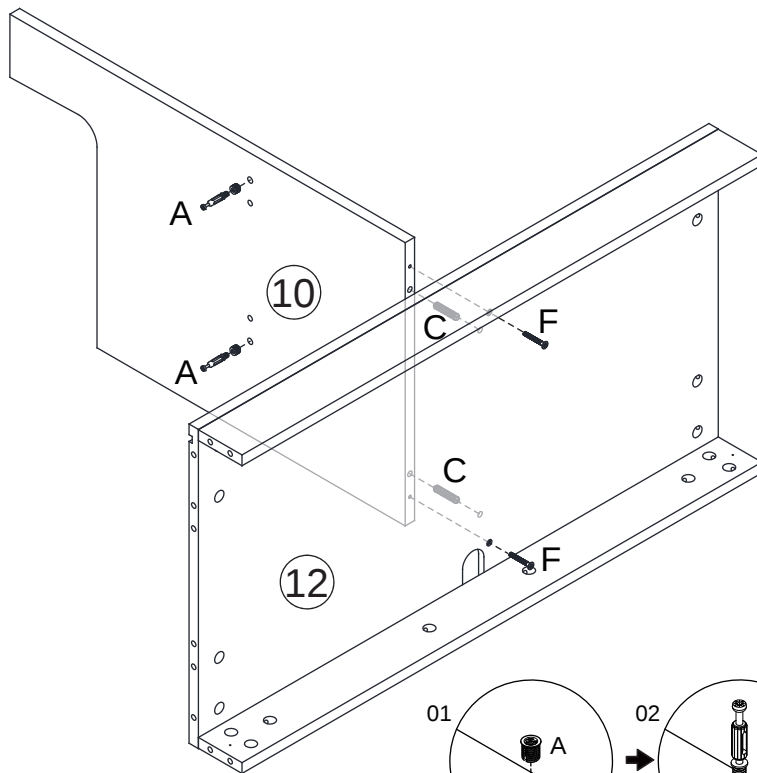


A x2


D x1

C x2

F x2

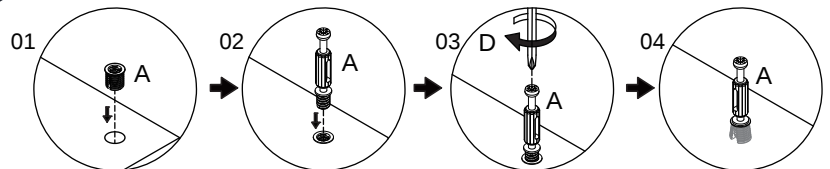


11

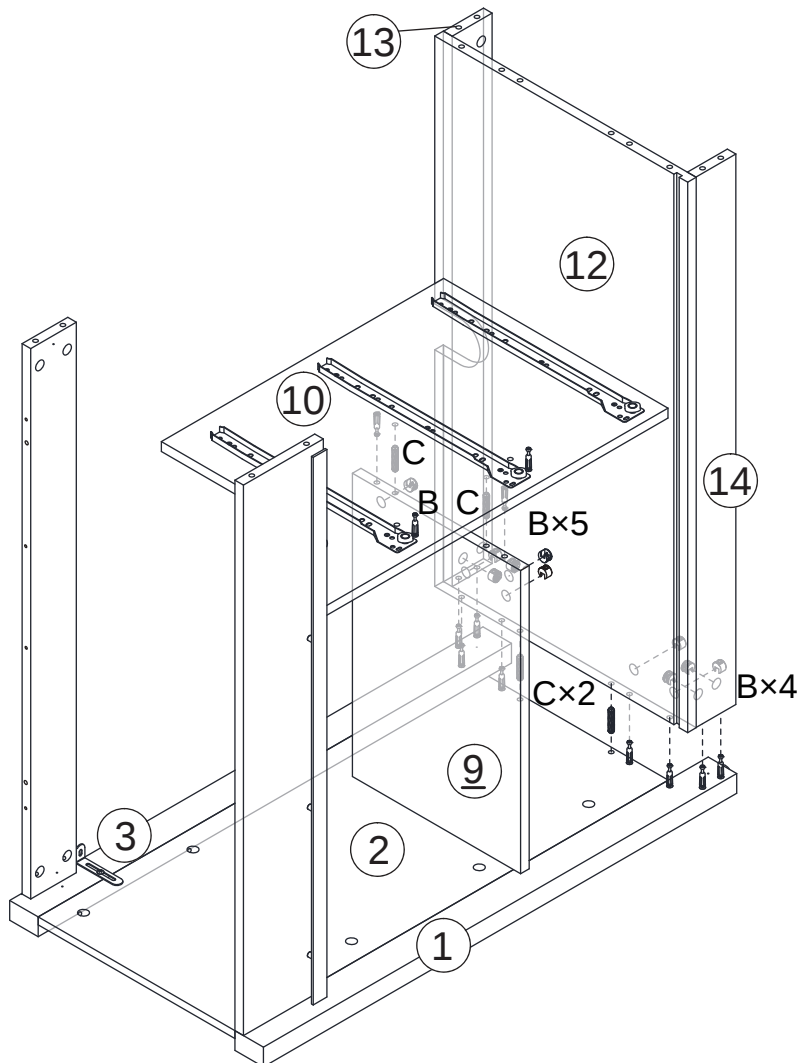







B x10

C x4



D x1

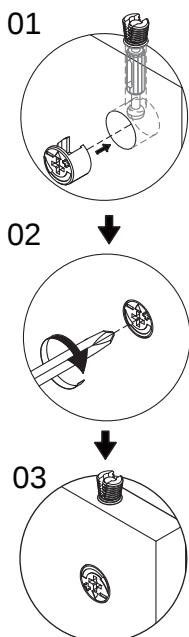


12

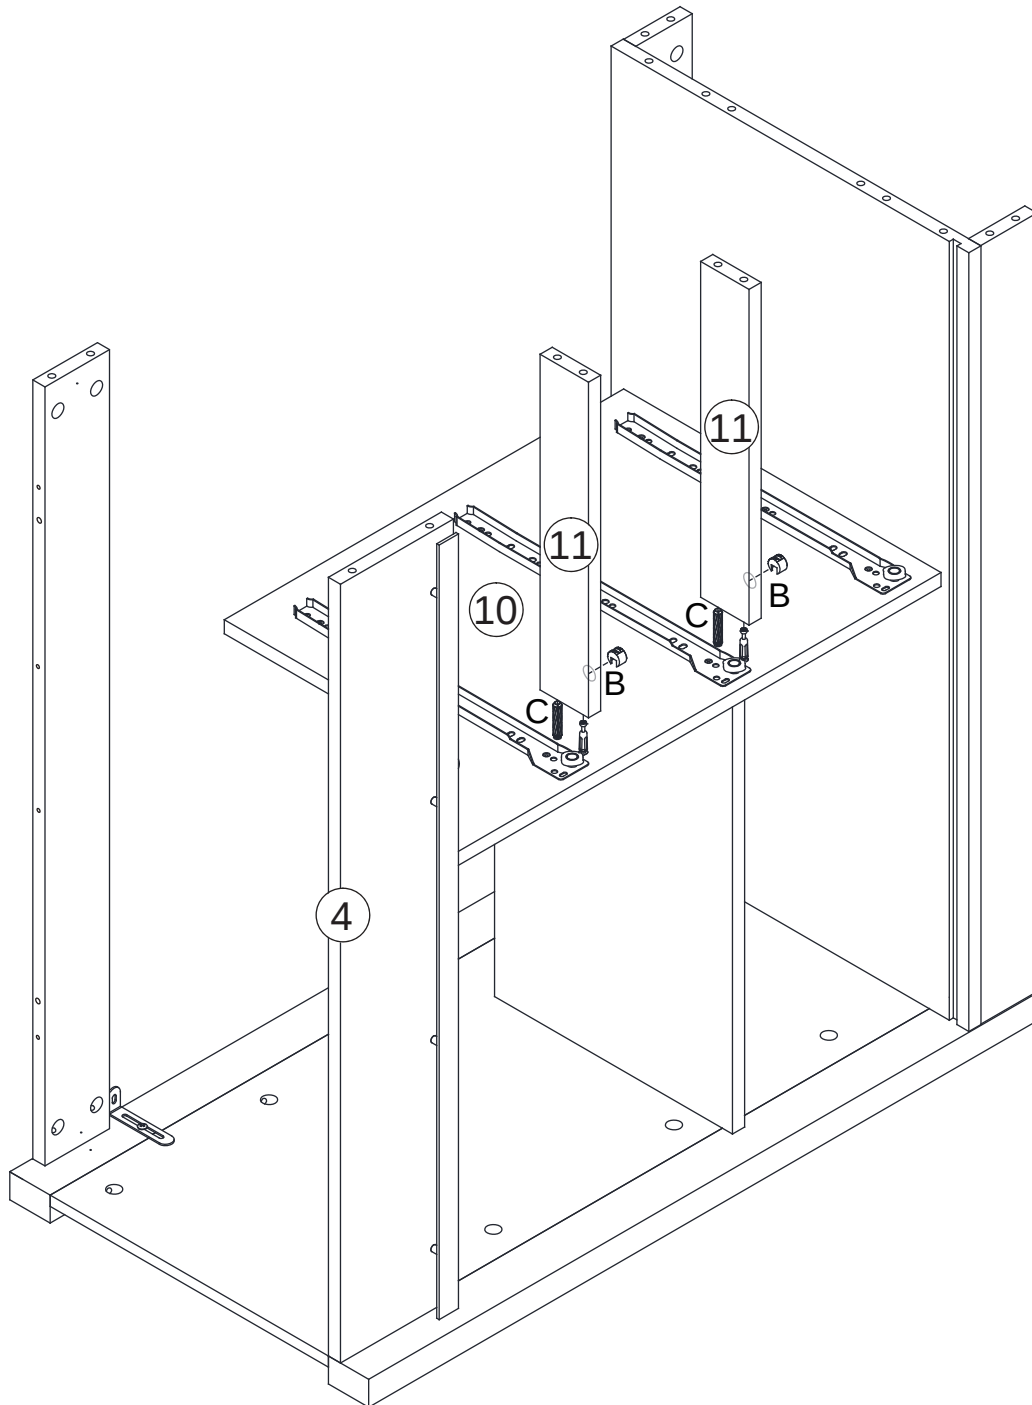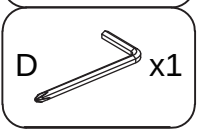
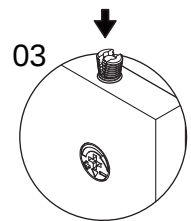
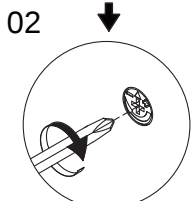
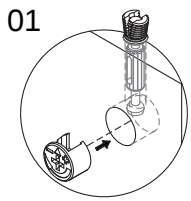


13

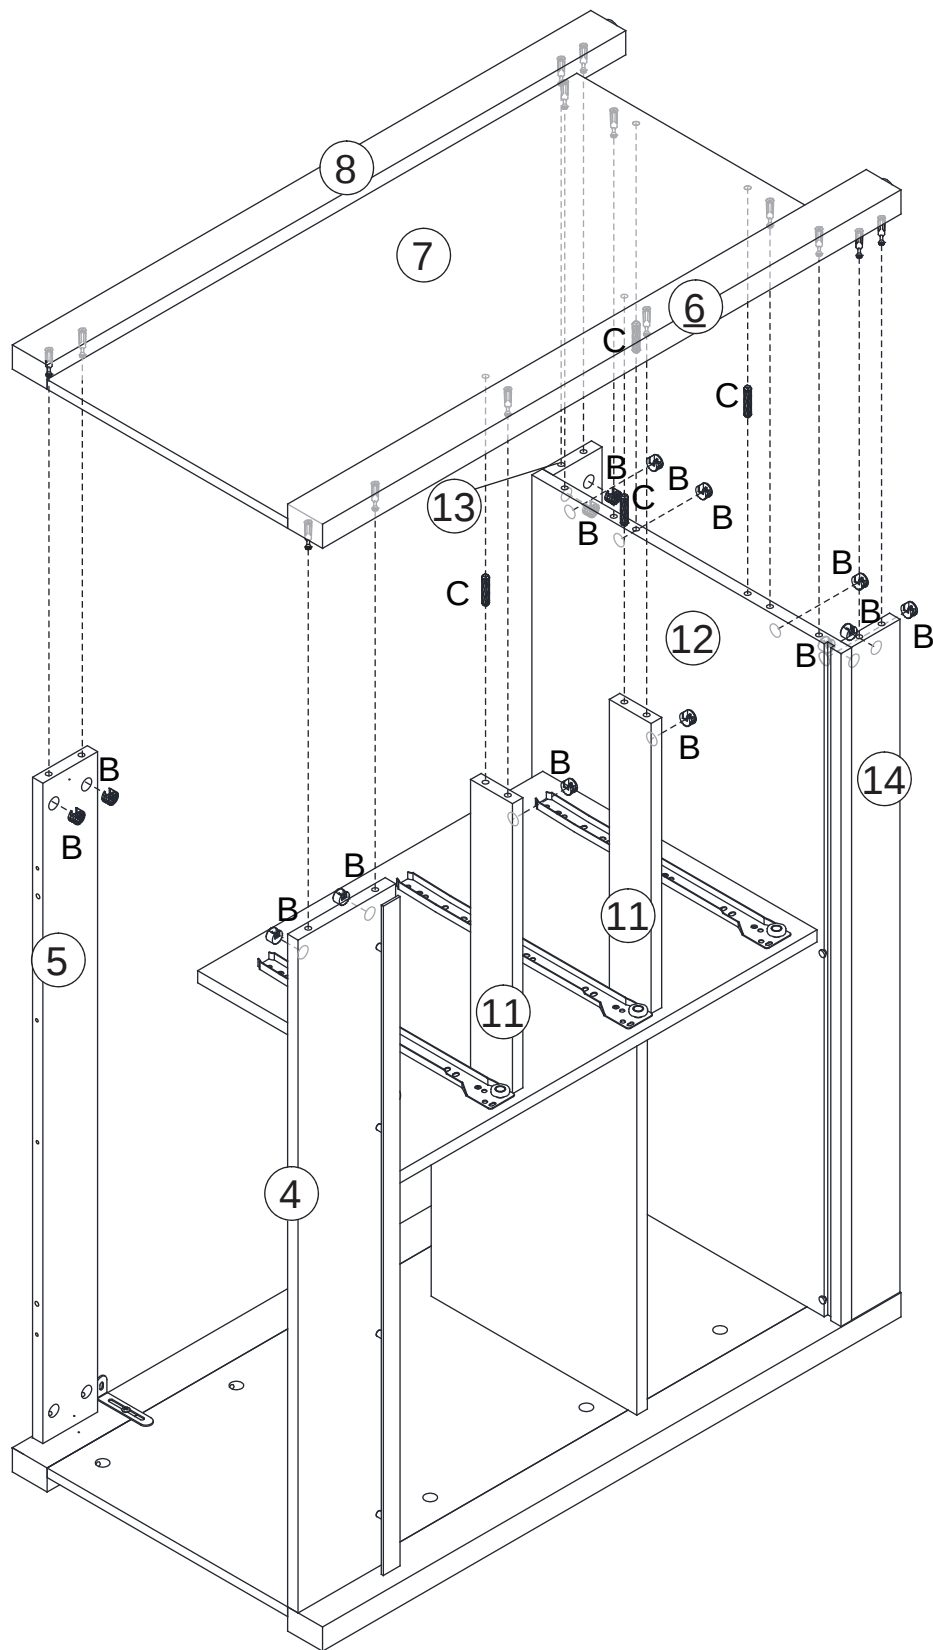
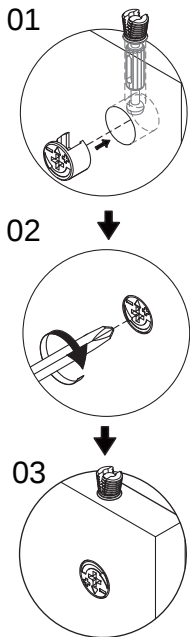


- B  x14
- C  x4
- D  x1


14

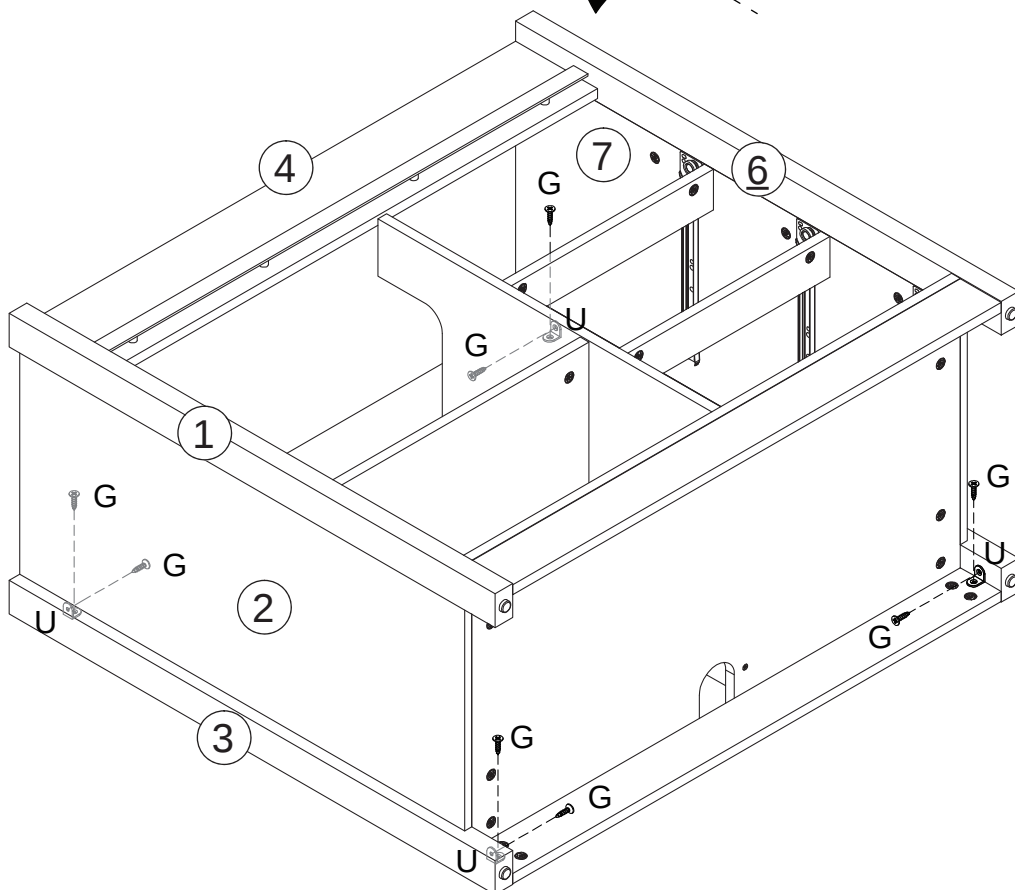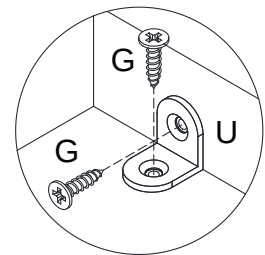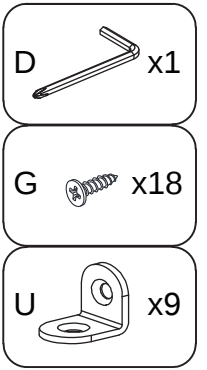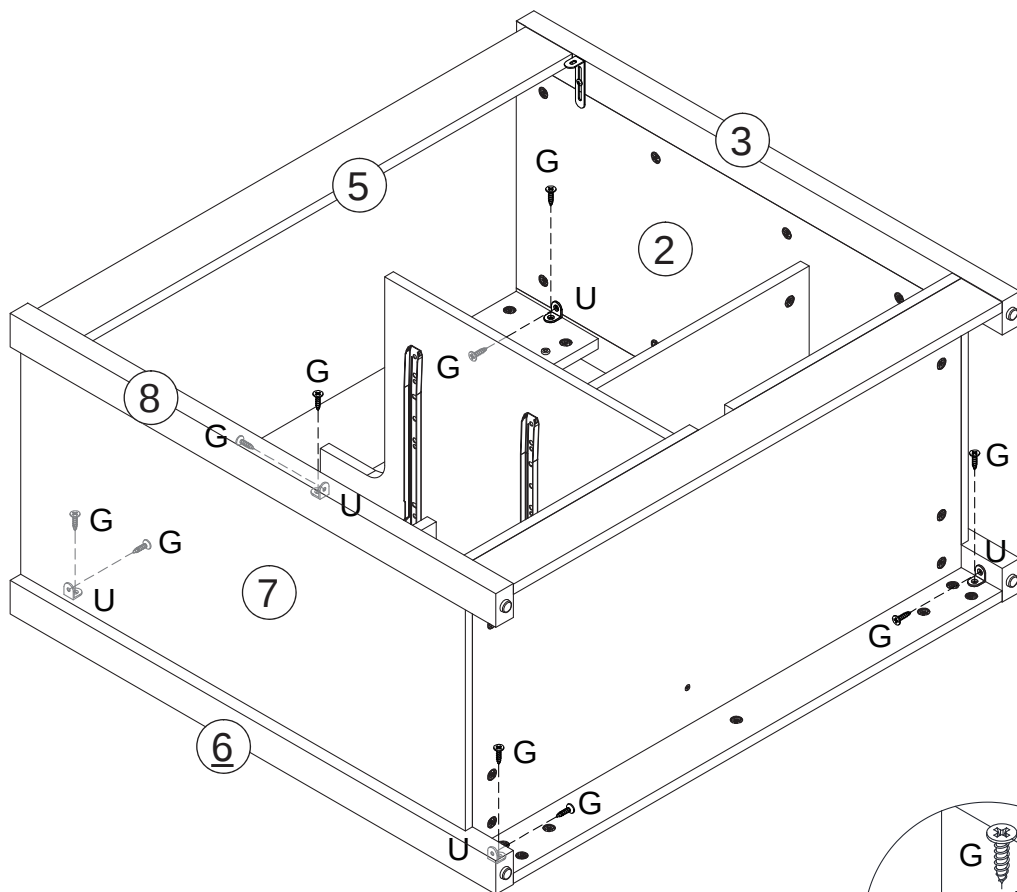


15

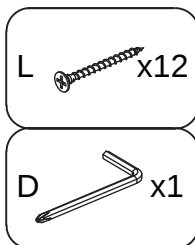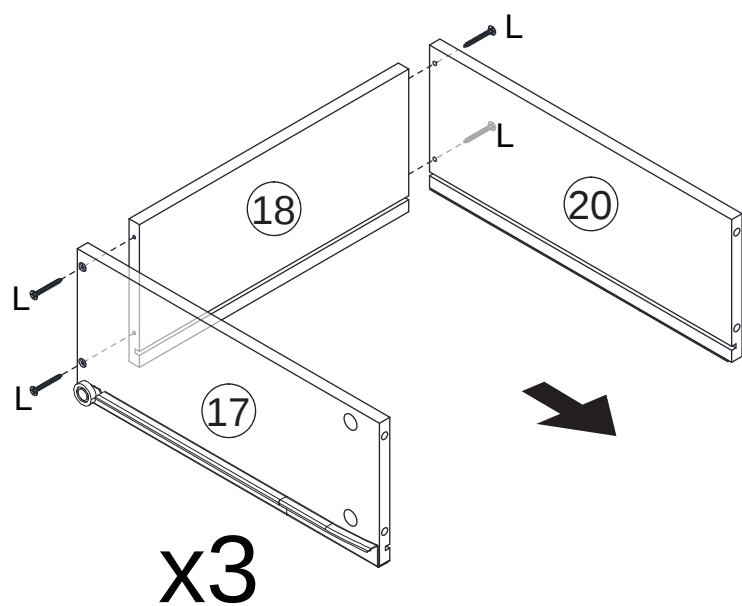


16

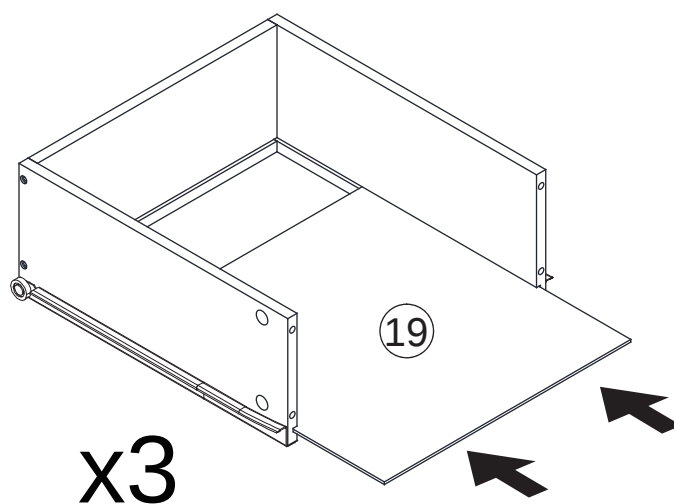

17

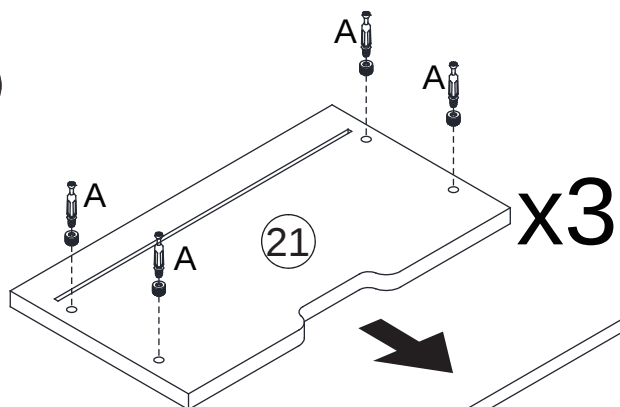

x3

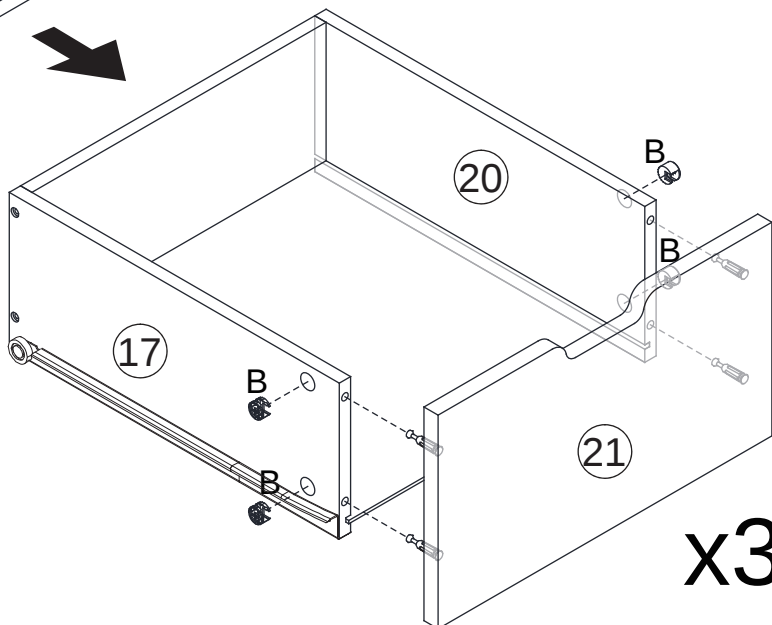


x3

A x12

B x12

D x1

18

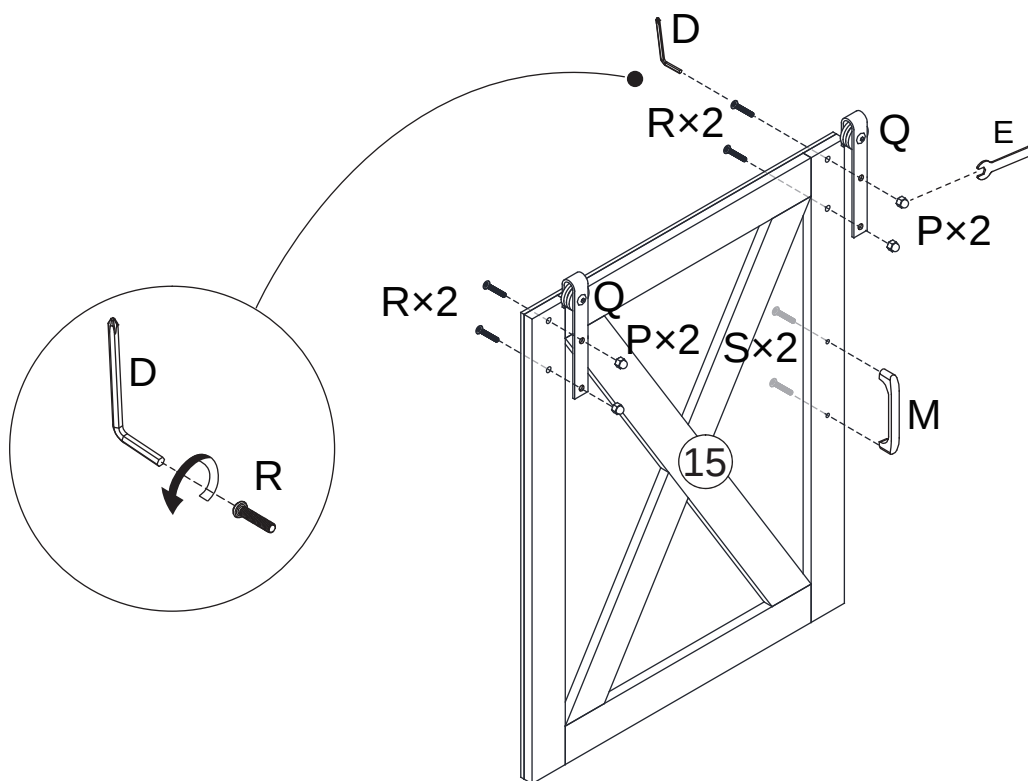

P x4

R x4

D x1


E x1

M x1

S x2

Q x2

19

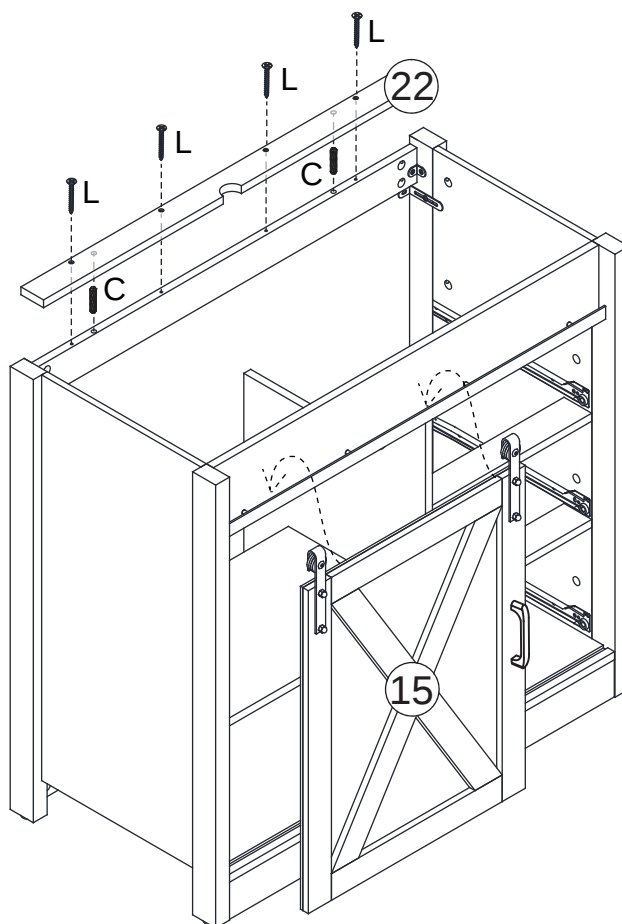


L  x4








C  x2

D  x1

20

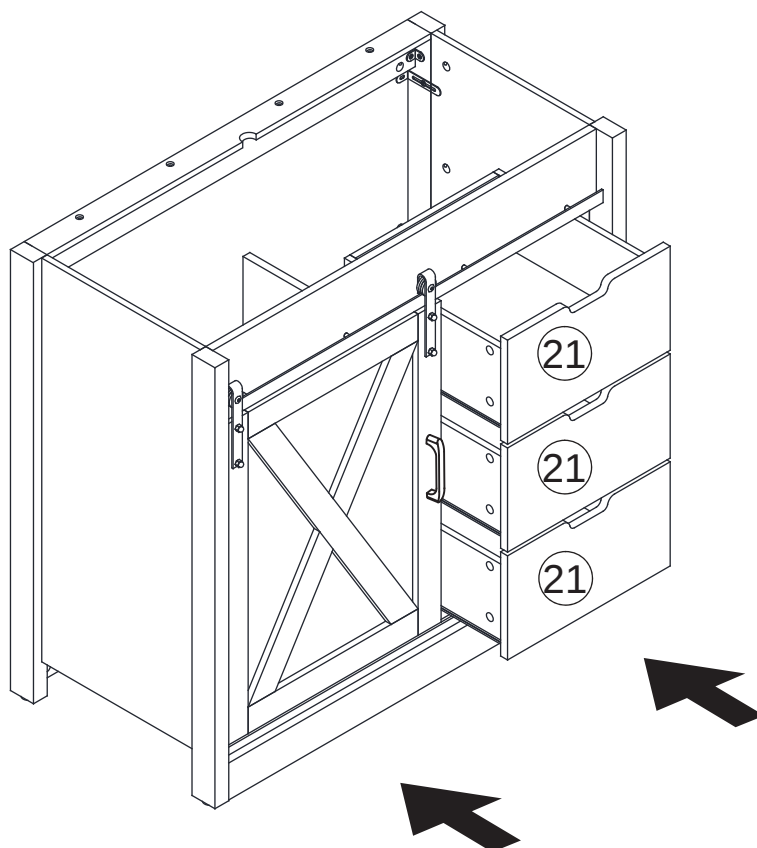


21

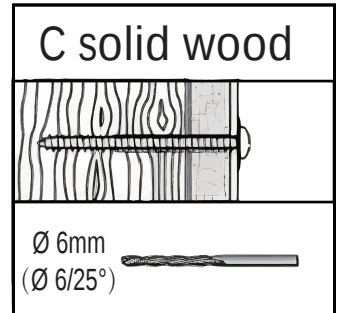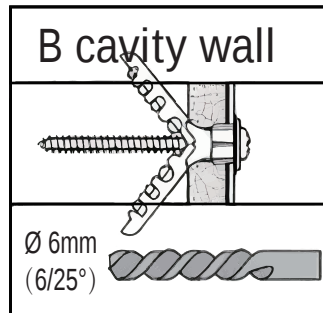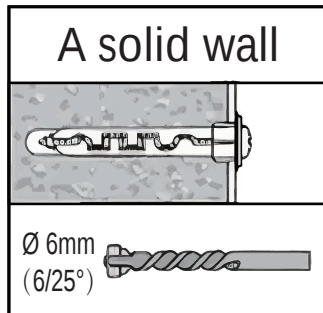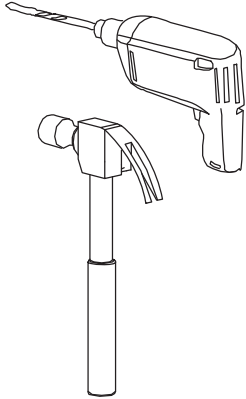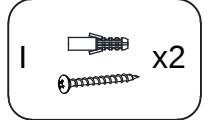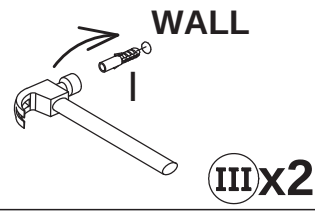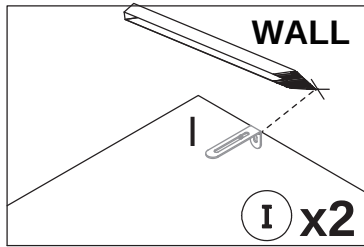


Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

WALL

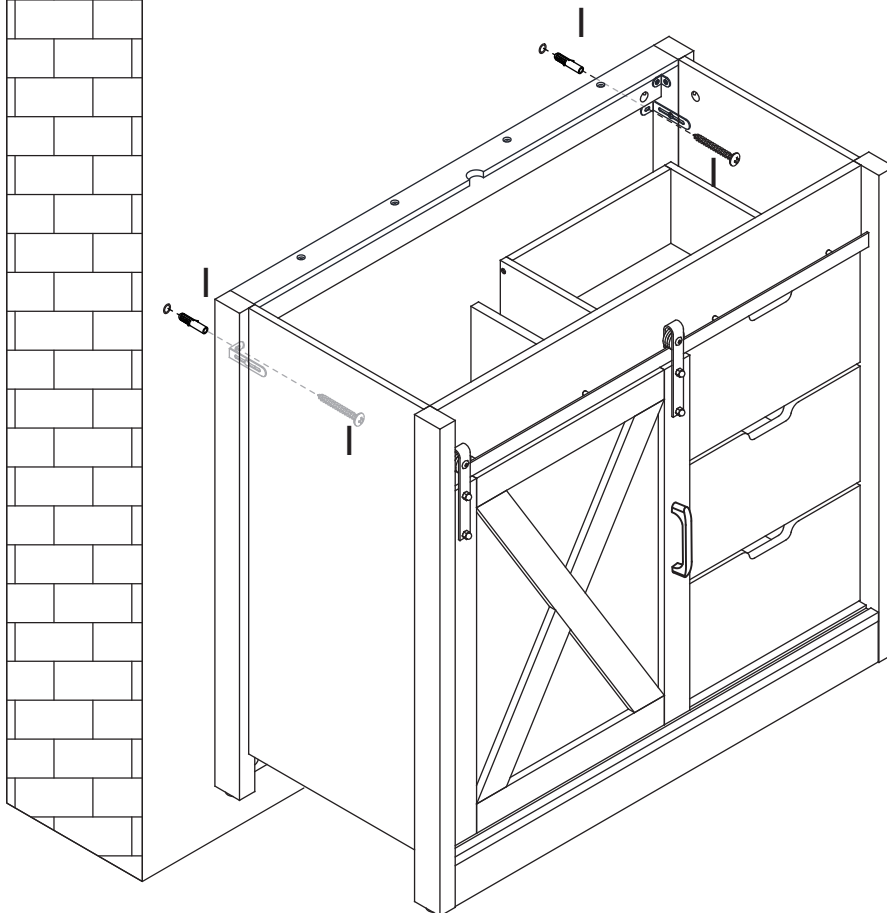

22

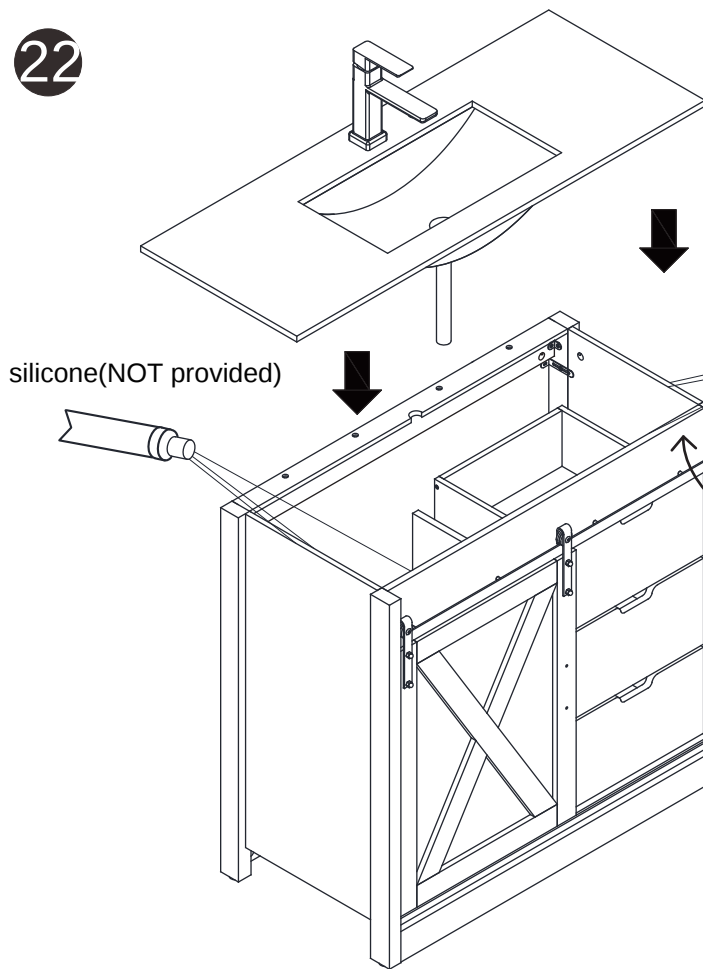

Please complete the installation of the faucet and basin first, and then place the basin on the cabinet

silicone(NOT provided)

Note: After installing the sink, you need to apply Silicone to fix the circle, and you need to wait patiently for 10 hours for the glue to dry.

Use only through-wall plumbing attachments.

Follow the instructions included with your plumbing fixtures.

Install plumbing fixture and drain to basin before attaching basin to vanity using 100% silicone adhesive.

Allow adhesive 24 hours cure time to achieve full strength.

Consult a plumbing professional for specific installation questions and consult local codes as applicable.

Use only plumbing fixtures designed to fit either single hole or 3 hole, 4" centerline faucets.

Team Lift


Silicone

Faucet, drain, silicone and all other plumbing components, tools and hardware are not included.

Ensure the vanity is installed on a level floor.

Unevenness can cause the vanity to become misaligned, resulting in twisting of the cabinet.


23

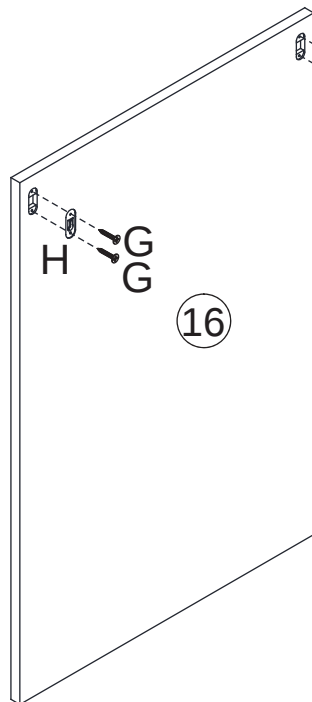





G  x4

D  x1

H  x2

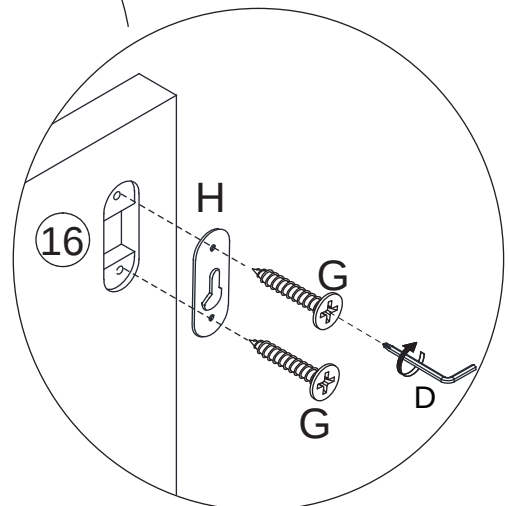


24

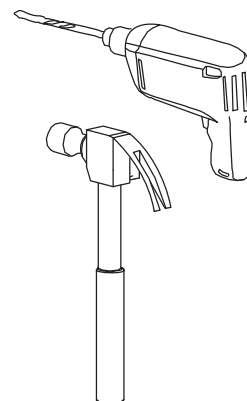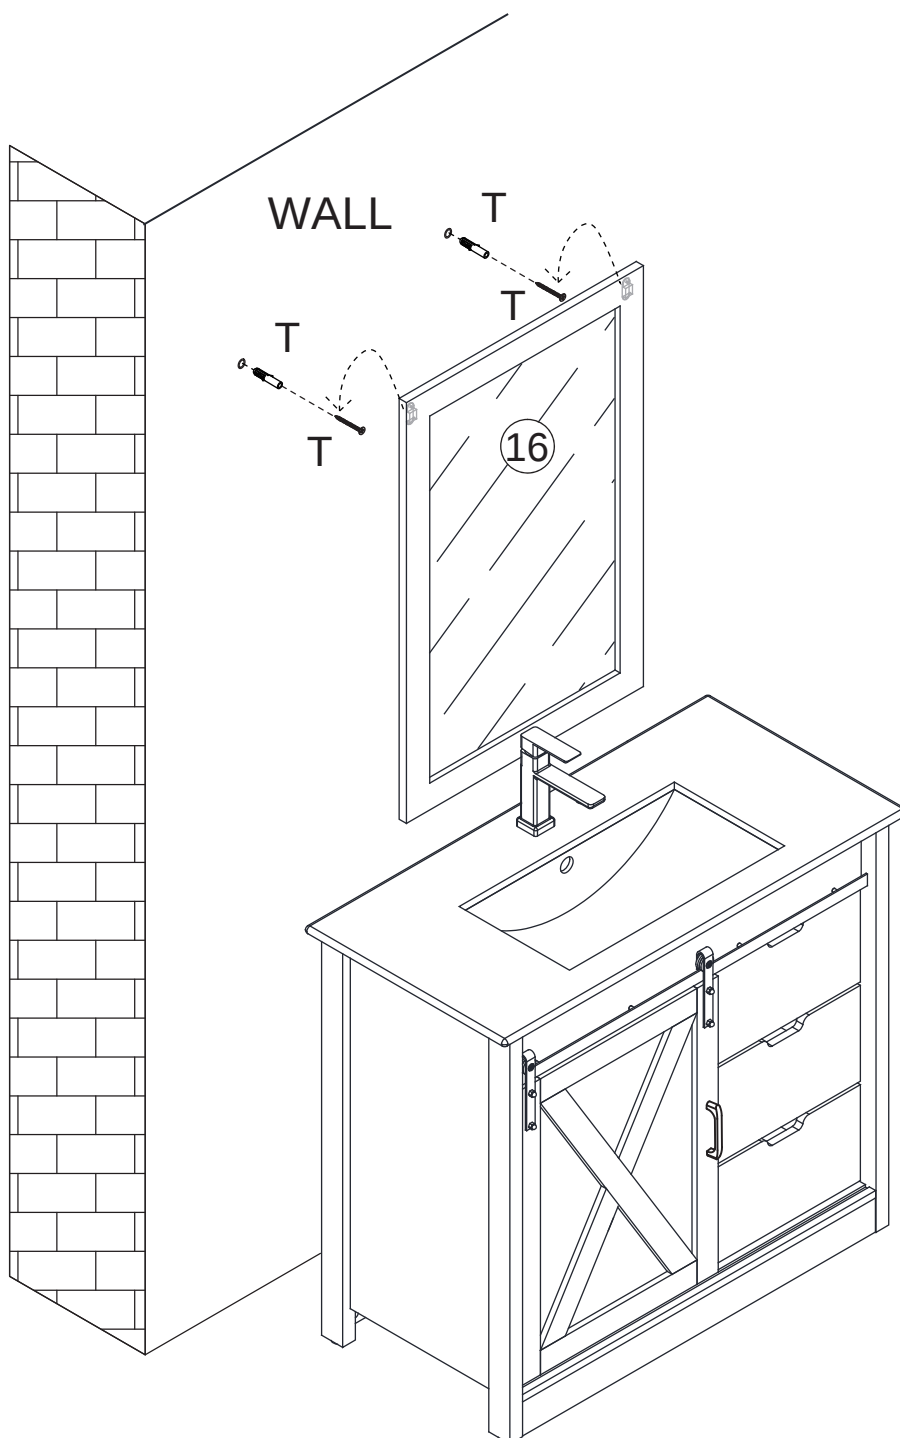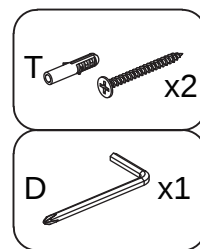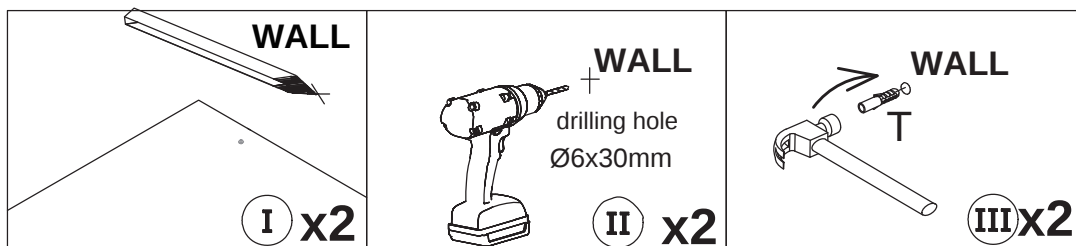

25

J  x67

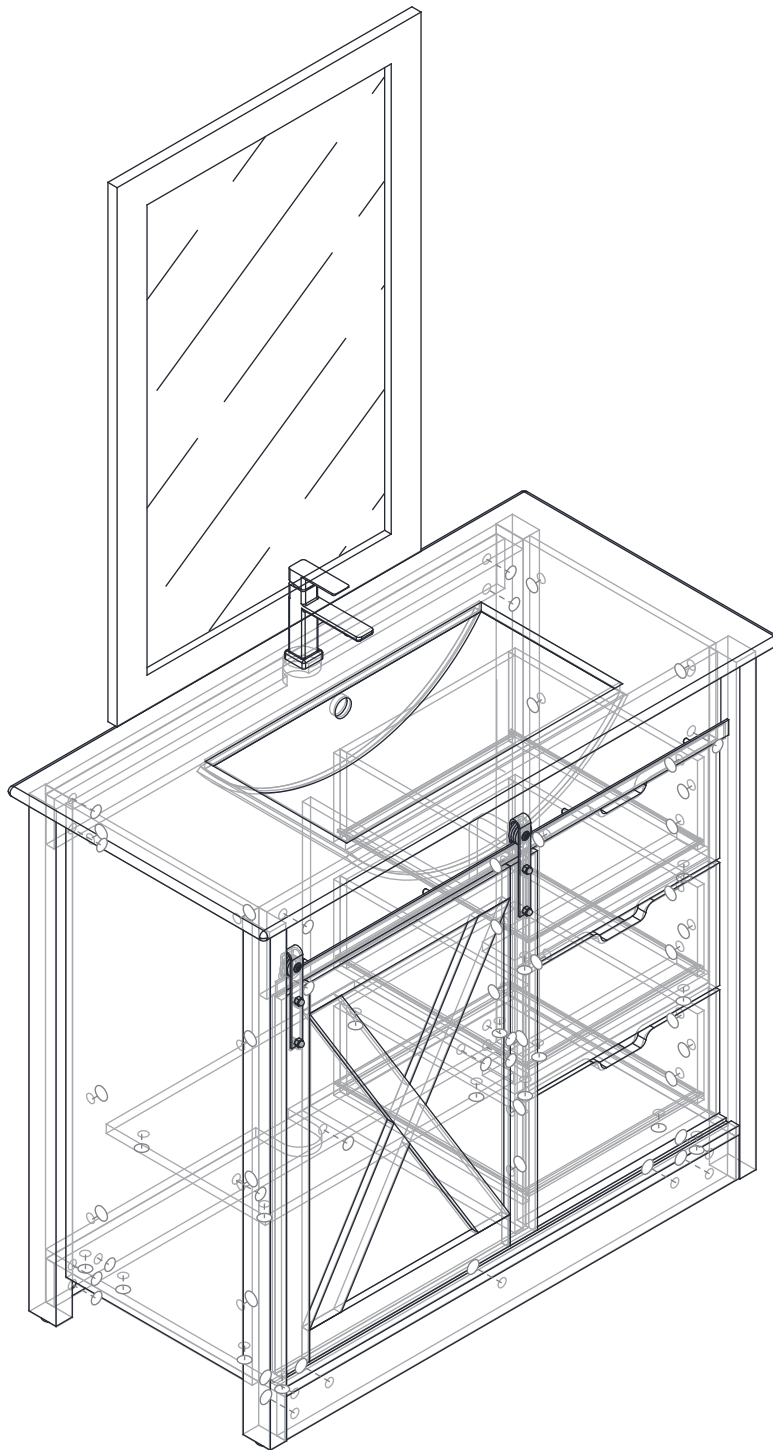

Jx67

Attach a hole sticker to the eccentric wheel

