

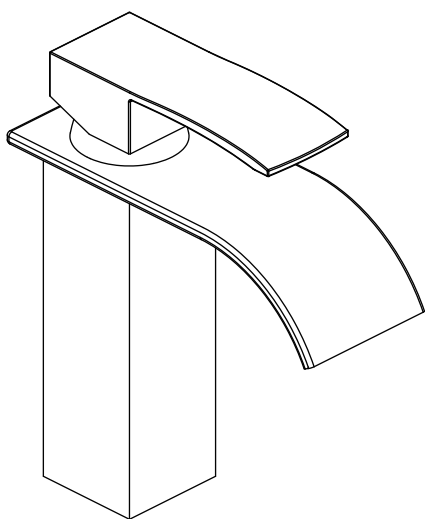
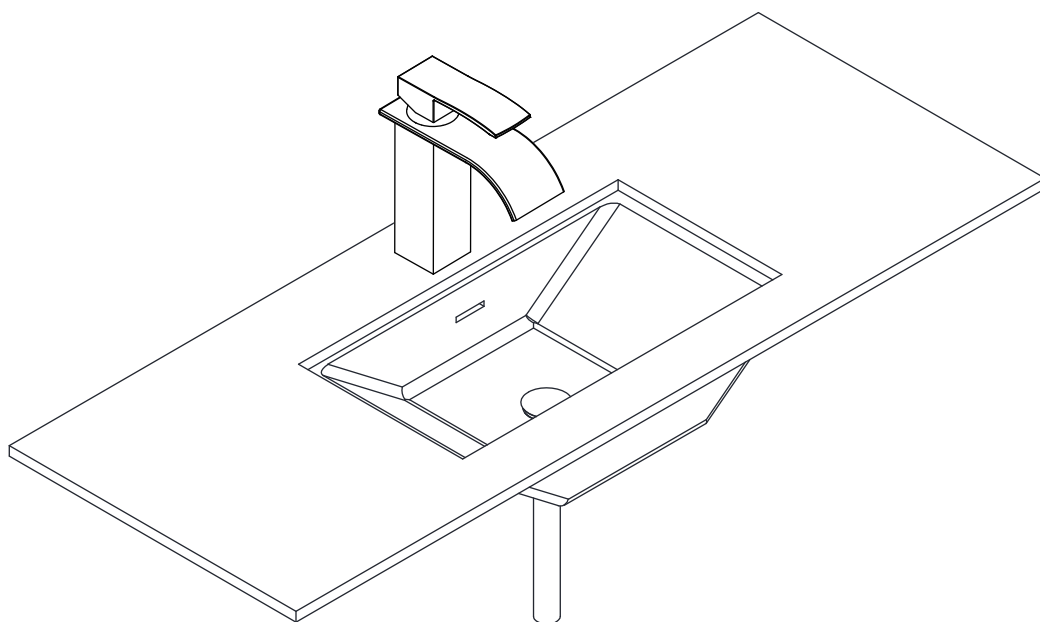
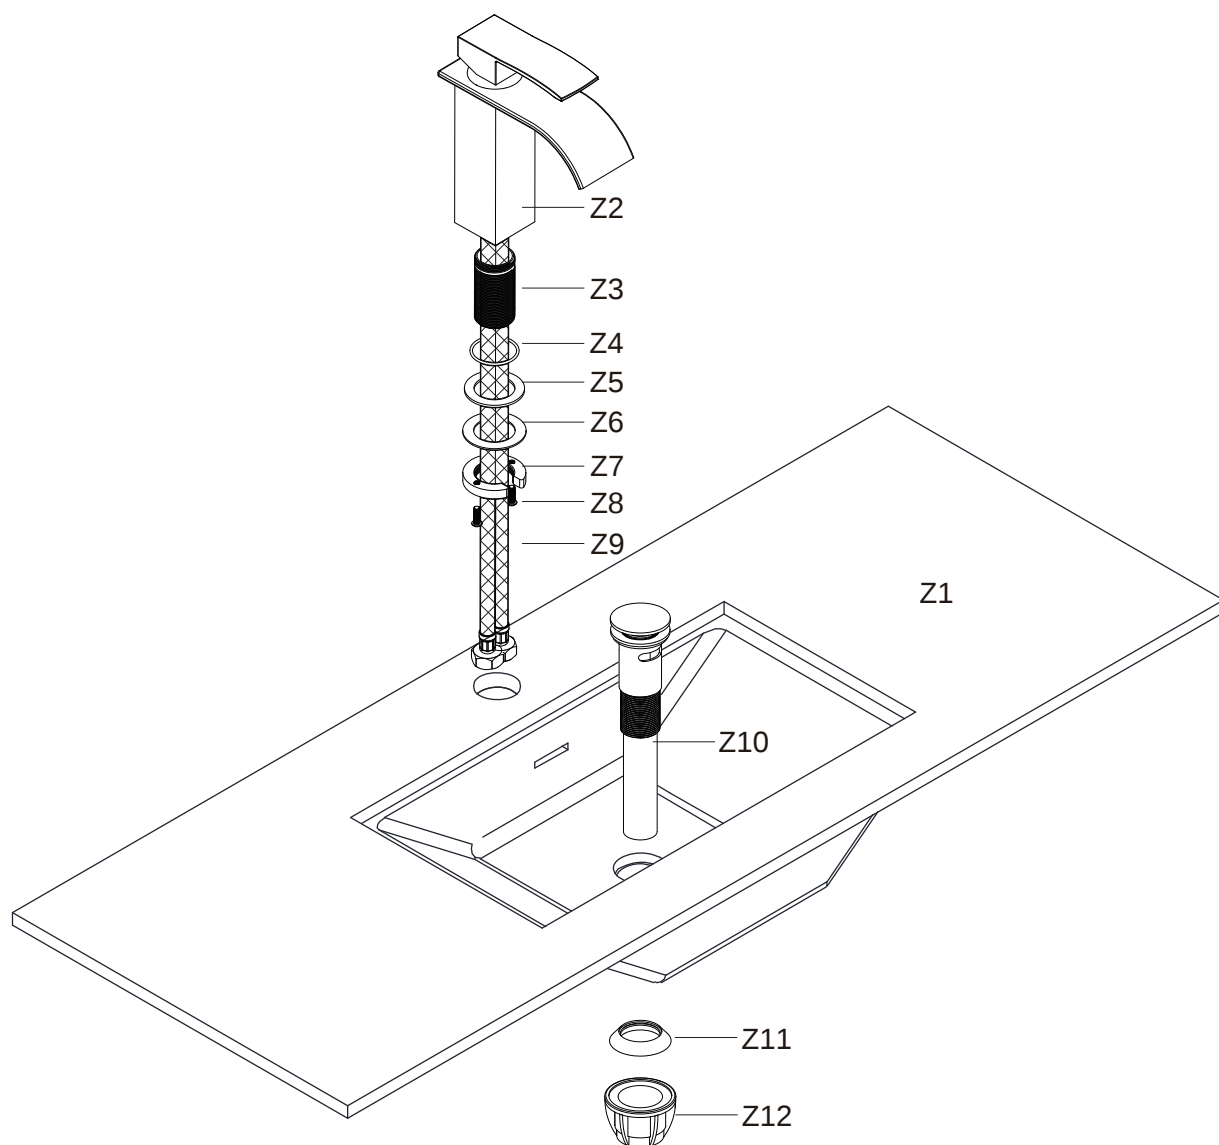



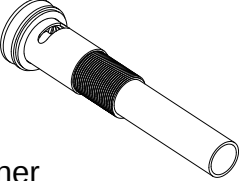


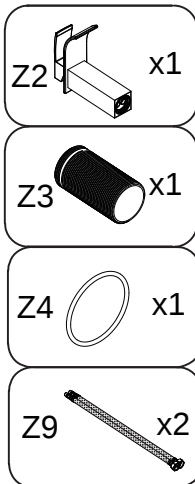



Hardware

 Sink	 Faucet	 Threaded rod	 Plastic small waterstop ring
Z1 1pc	Z2 1pc	Z3 1pc	Z4 1pc
 Plastic large waterstop ring	 Metal gasket	 Faucet nut	 Screw
Z5 1pc	Z6 1pc	Z7 1pc	Z8 2pcs
 Water pipe	 Drainer	 Waterstop ring for drainer	 Nut for drainer
Z9 2pcs	Z10 1pc	Z11 1pc	Z12 1pc

1


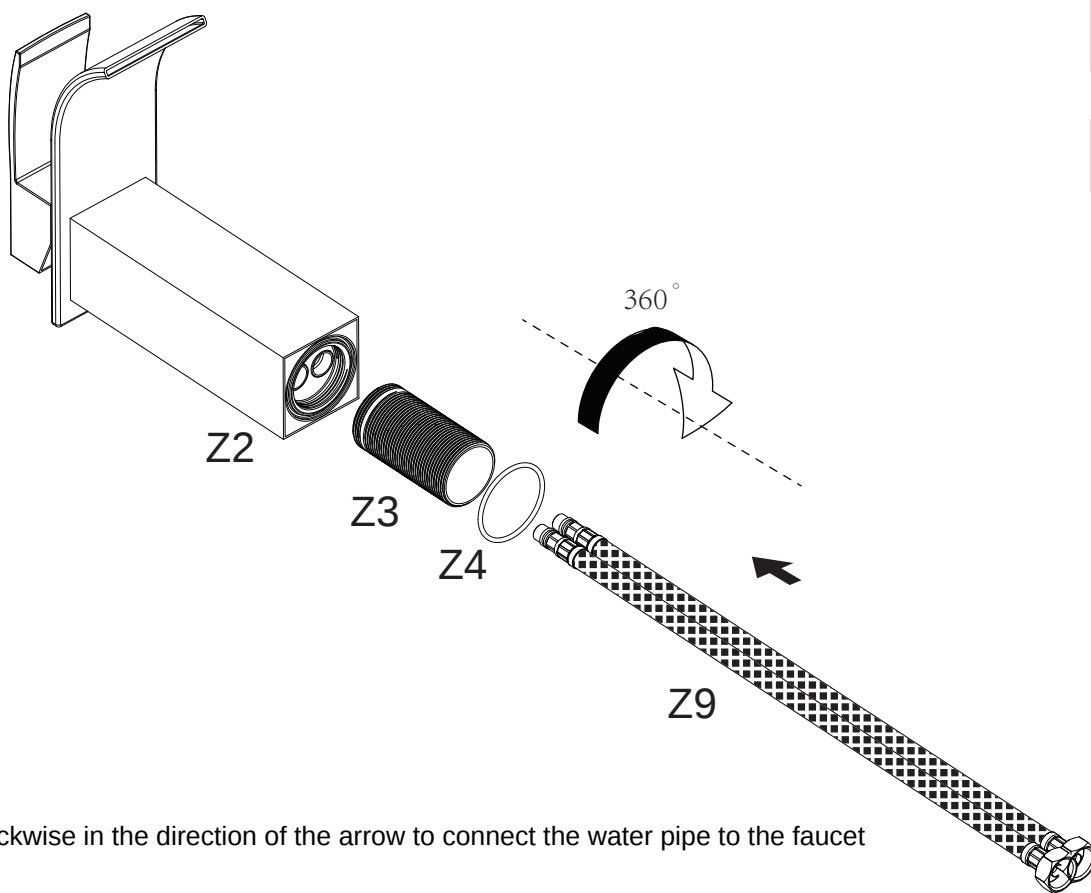


2

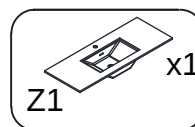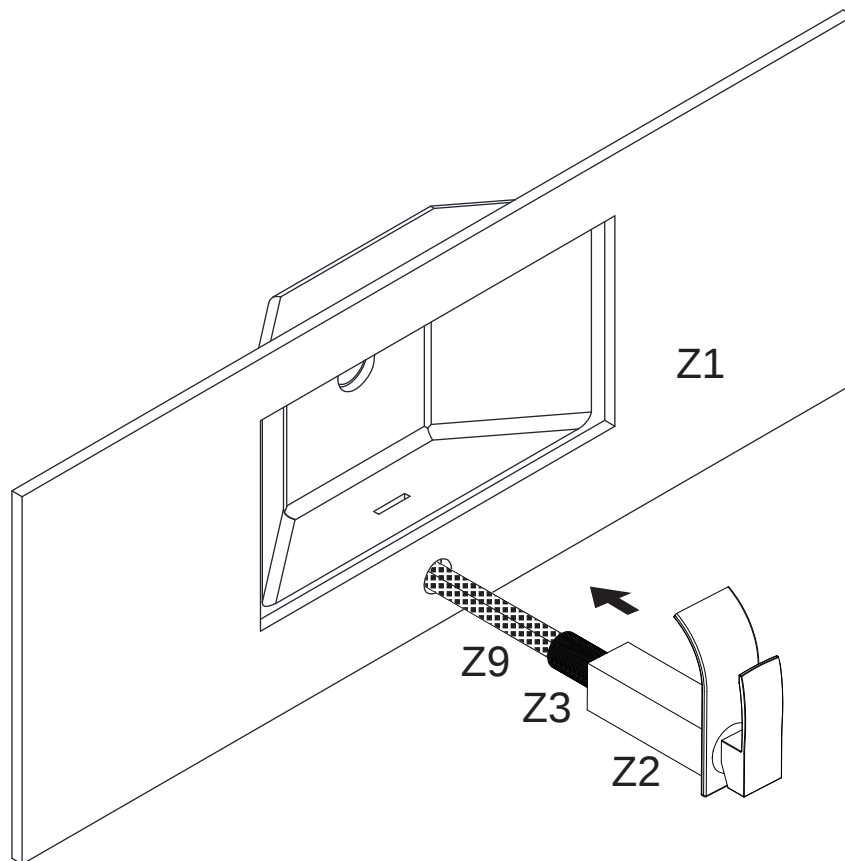



Put Z4 in the bottom of Z2, Then place the assembled Z9,Z3& Z2 vertically into the Z1 sink

3

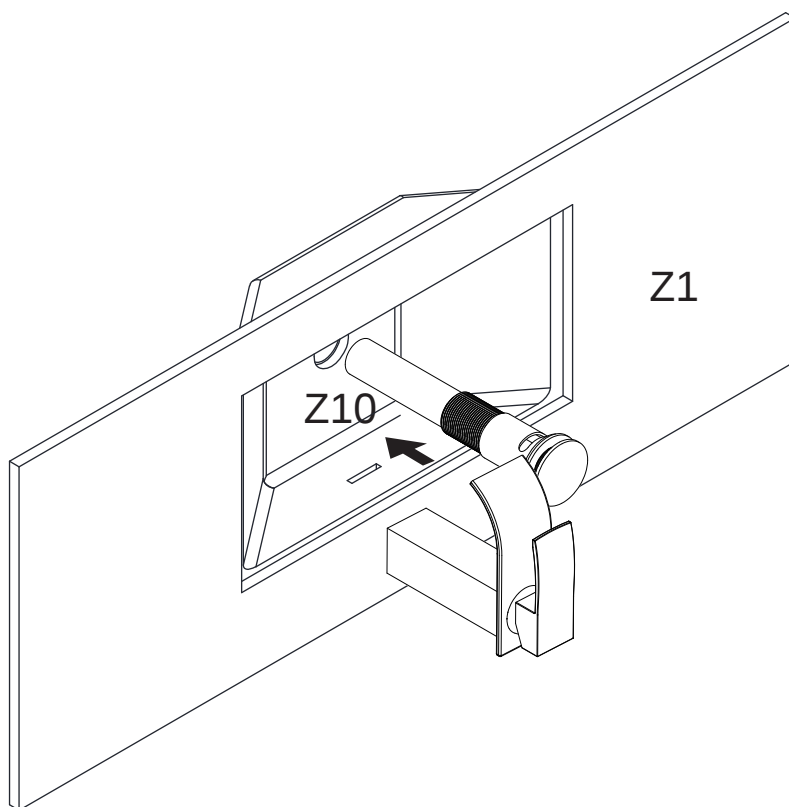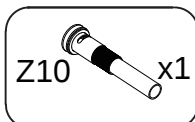


Insert Z10 into the sink

4

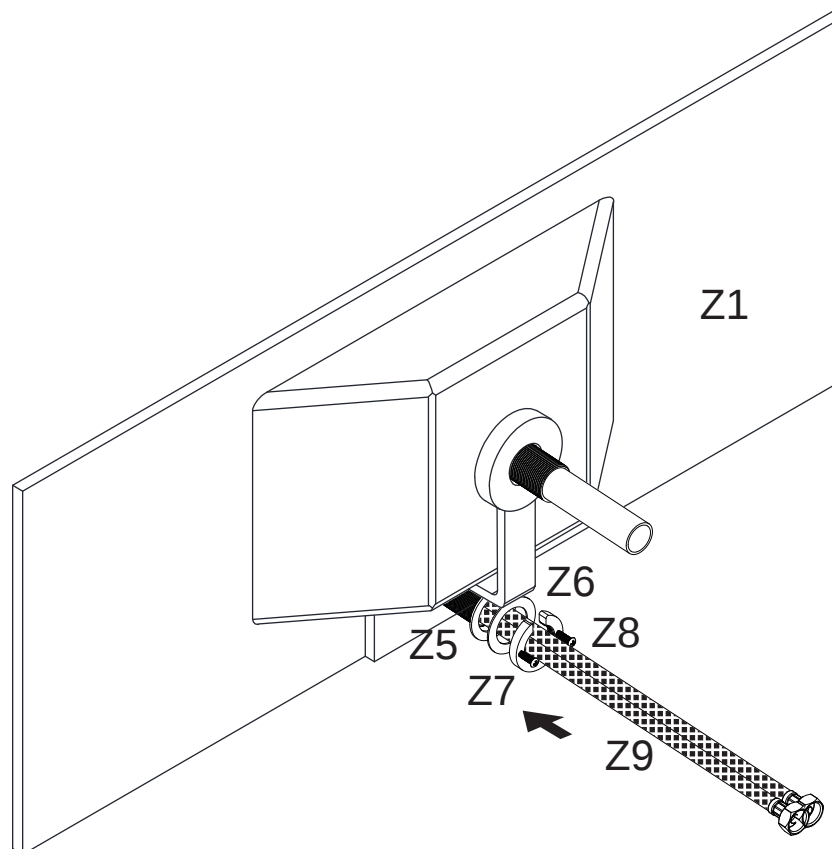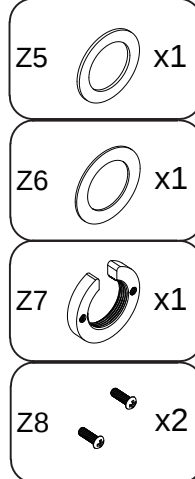

Tighten Z9 pipes with Z2 though Z3. Insert Z5,Z6 & Z7 along with Z3, then put Z8 into Z7 to fix all the parts with Z1

5

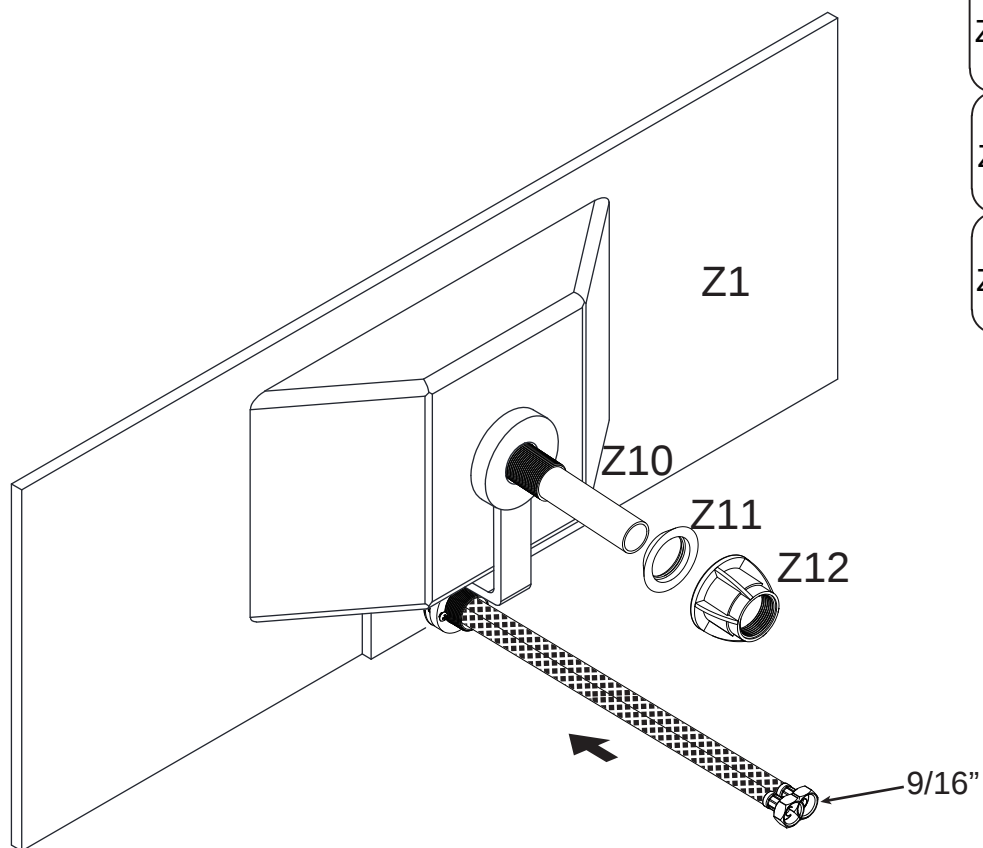

Insert Z10 to Z1, then connect Z11 with Z10, and tighten Z12 clockwise in Z10's body to fix with Z1 carefully

6

