



DJ0755-120CM

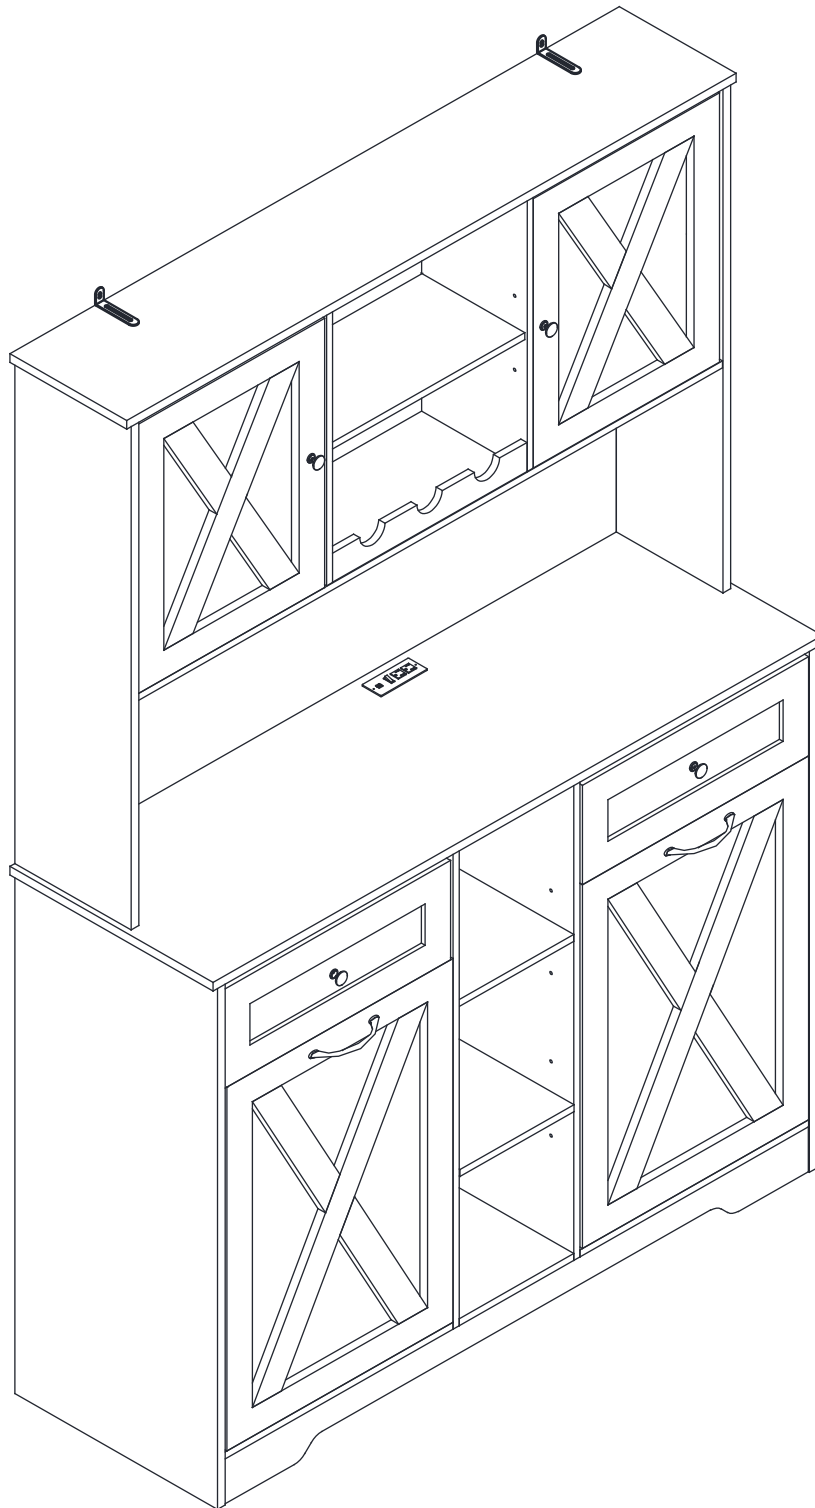

Installation Video QR





DJ0755-120CM
<https://vimeo.com/1058055556>

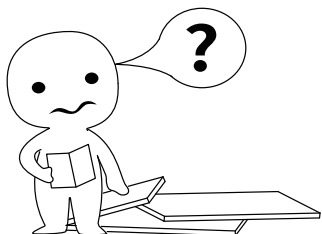



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

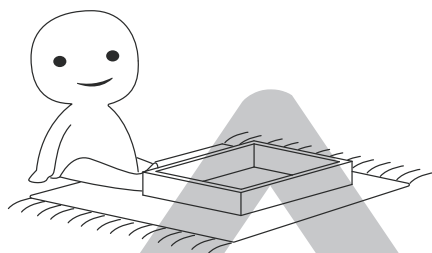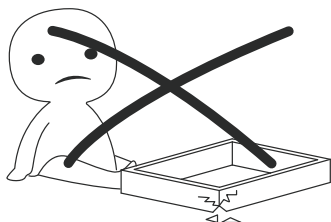




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

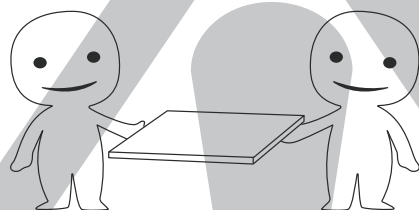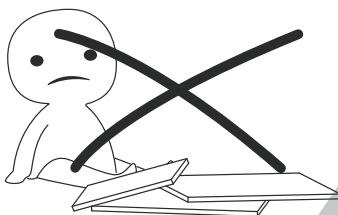

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

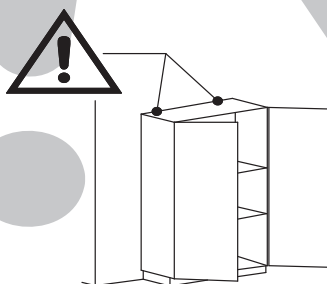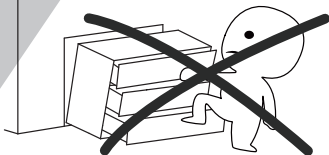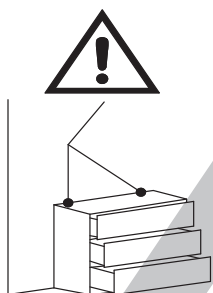

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


'SAFETY TIPS:

Static charge may cause dust on foam- clean with a dry or damp cloth.

























Small foam strands may represent - handle gently and dispose of properly.

Do not burn or incinerate.















Check local recycling guidelines.

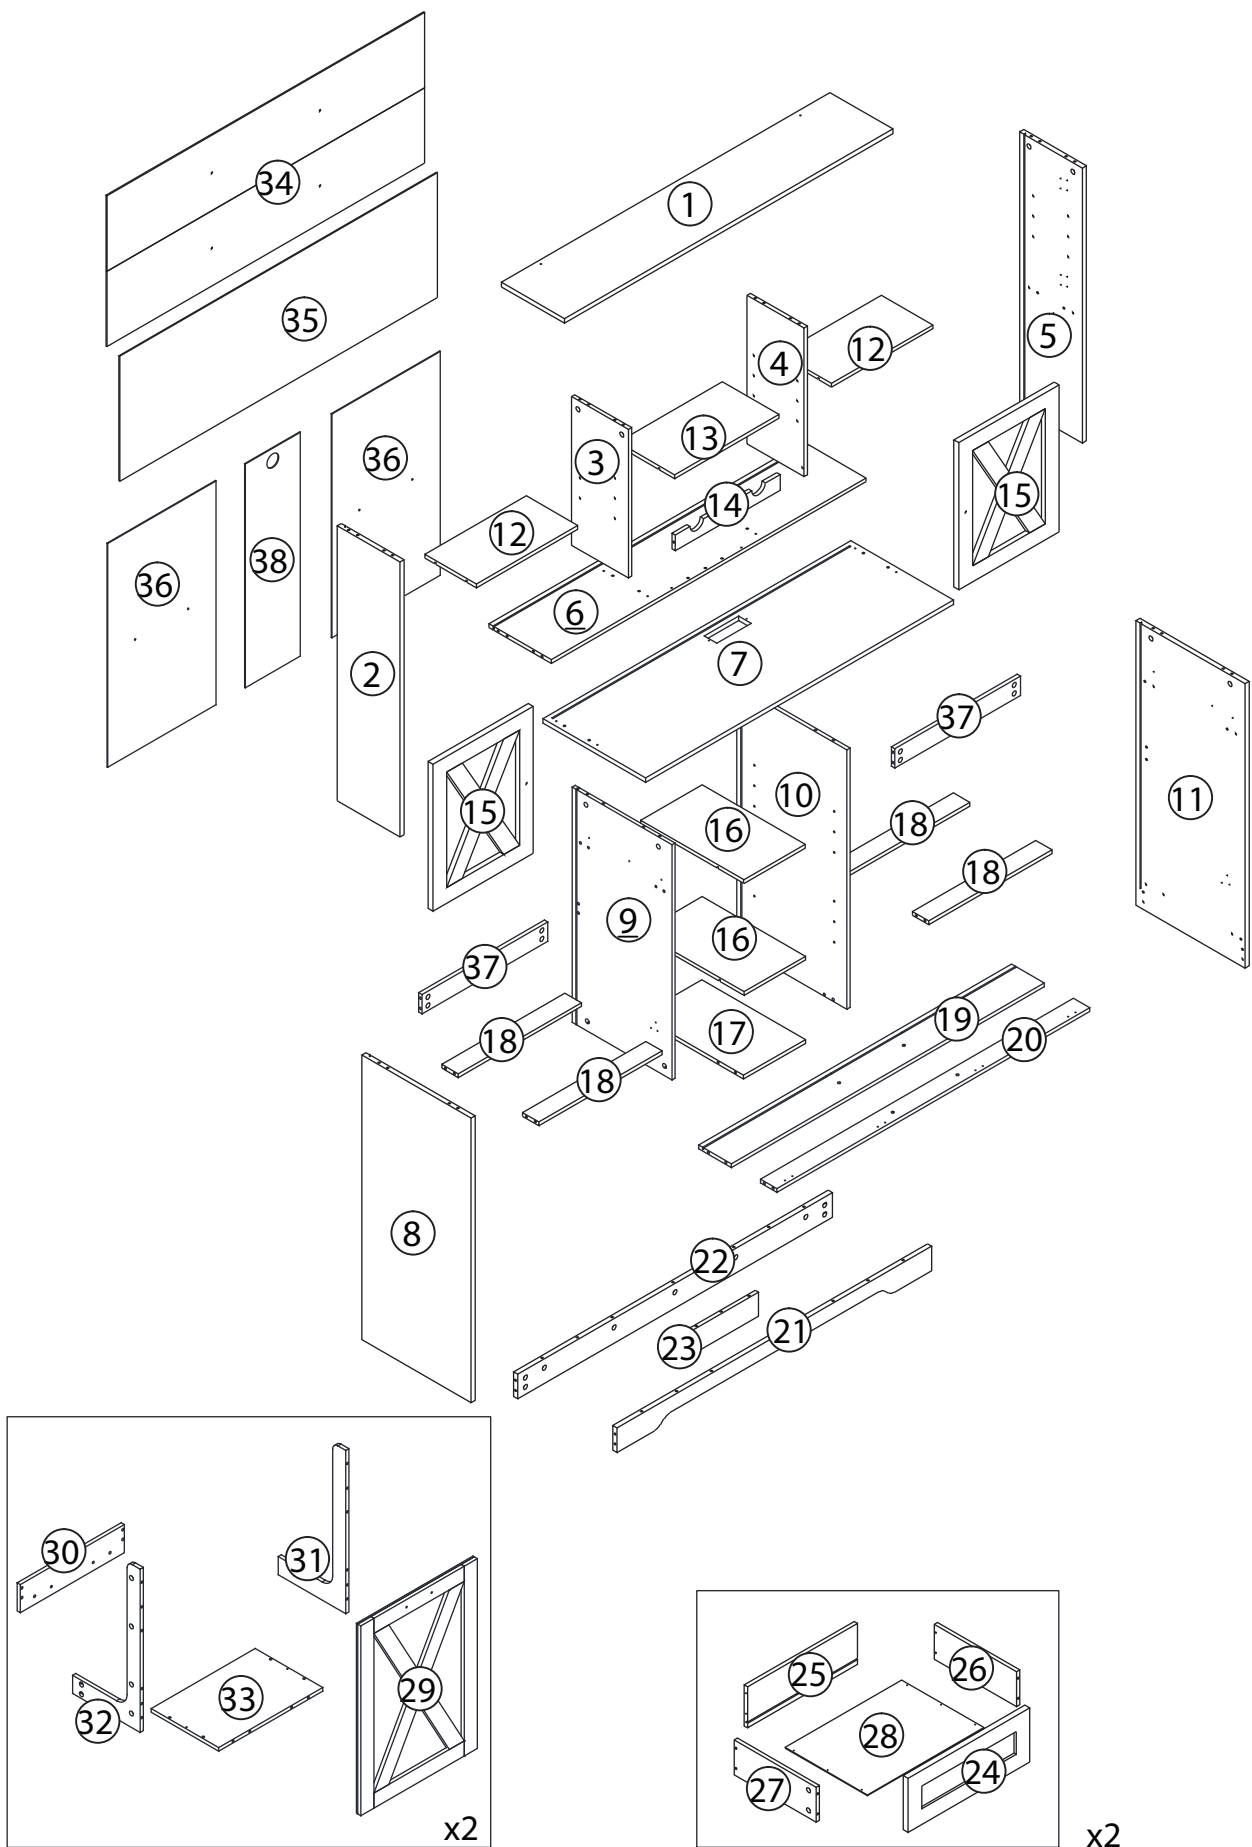













Parts and Operation Elements

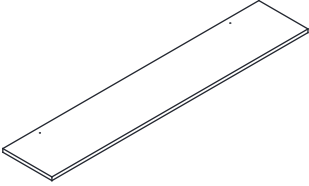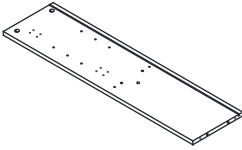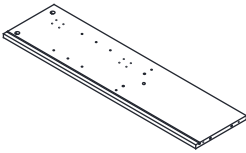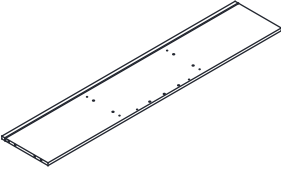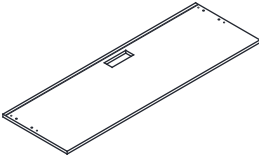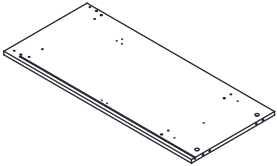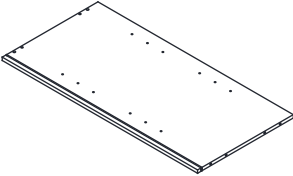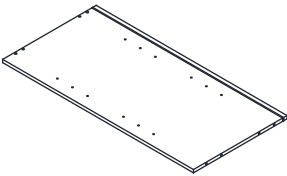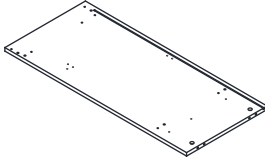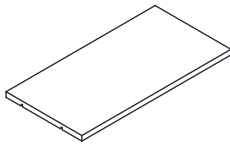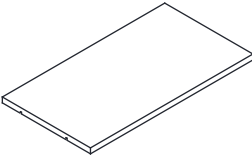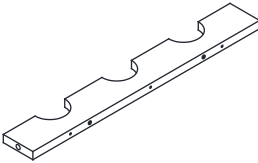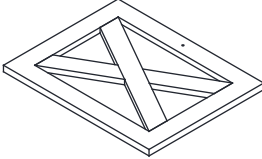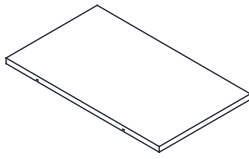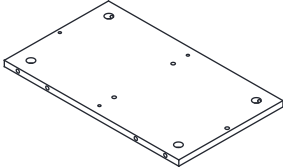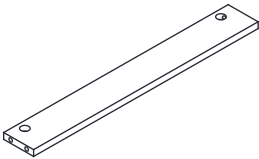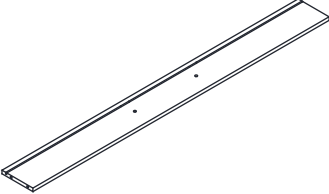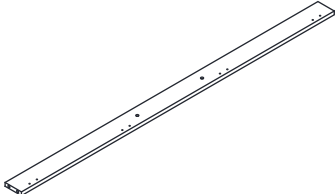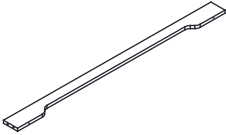
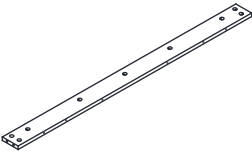

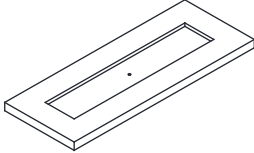
			
① 1pc	② 1pc	③ 1pc	④ 1pc
			
⑤ 1pc	⑥ 1pc	⑦ 1pc	⑧ 1pc
			
⑨ 1pc	⑩ 1pc	⑪ 1pc	⑫ 2pcs
			
⑬ 1pc	⑭ 1pc	⑮ 2pcs	⑯ 2pcs
			
⑰ 1pc	⑱ 4pcs	⑲ 1pc	⑳ 1pc
			
㉑ 1pc	㉒ 1pc	㉓ 1pc	㉔ 2pcs

Parts and Operation Elements

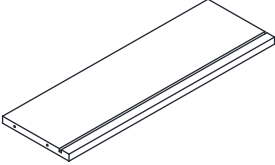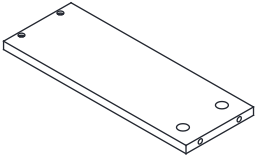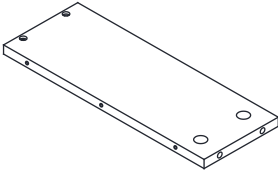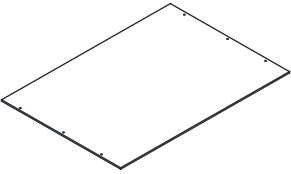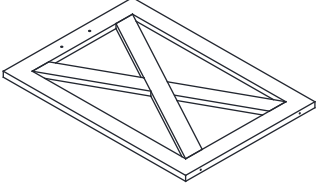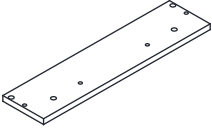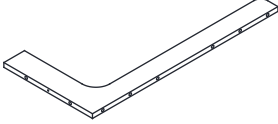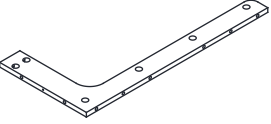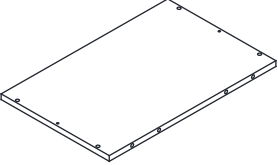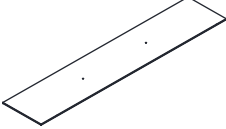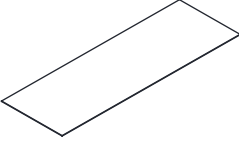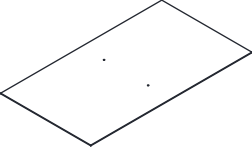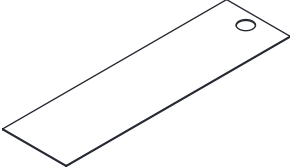			
②5 2pcs	②6 2pcs	②7 2pcs	②8 2pcs
			
②9 2pcs	③0 2pcs	③1 2pcs	③2 2pcs
			
③3 2pcs	③4 1pc	③5 1pc	③6 2pcs
			
③7 2pcs	③8 1pc		





Hardware

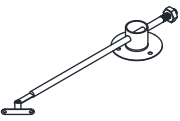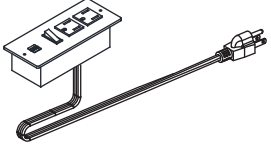							
A	108+2pcs	B	108+2pcs	C	77+2pcs	D	8+2pcs
							
E	15+2pcs	F	4pcs	G	46+2pcs	H	1pc
							
I	1pc	J	20+2pcs	K	108+2pcs	L	4pcs
							
M	92+2pcs	N	4pcs	P	4pcs	Q	2pcs
							
R	4pcs	S	8+2pcs	T	2set		
							
U	2pcs	V	2pcs	W	6pcs	X	1pc
							
Y	2pcs	Z	40+2pcs	DR	2pcs	DL	2pcs

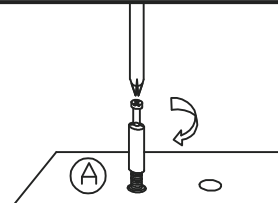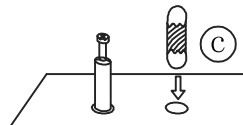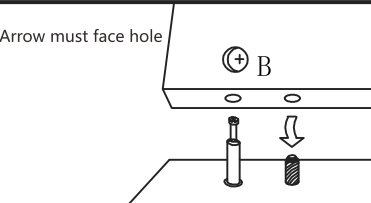
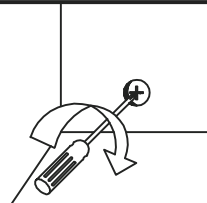
			
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.

Hardware


 350mm Slide Rail		 350mm Slide Rail		 Two-hole magnetic sheet		 SPARE BAG
CL	2pcs	CR	2pcs	a	2pcs	Please put the hardware of +2 in this self sealing bag

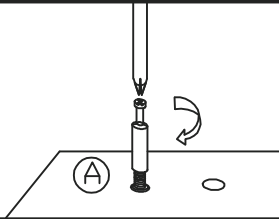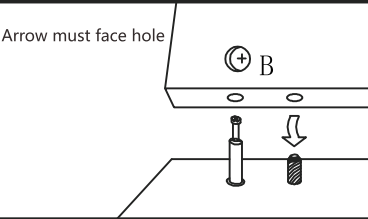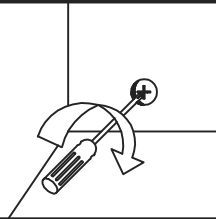		Arrow must face hole 	
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.


1

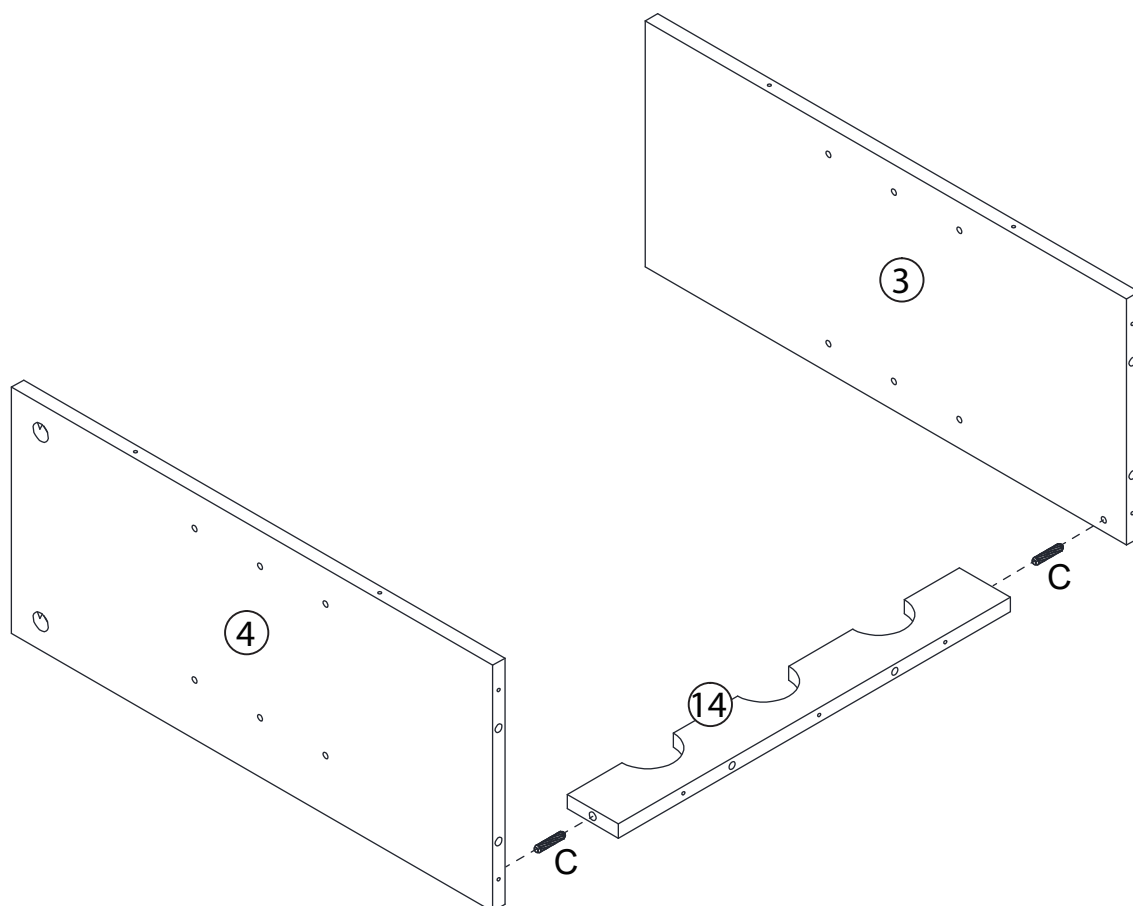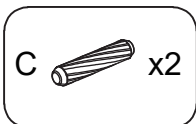

2

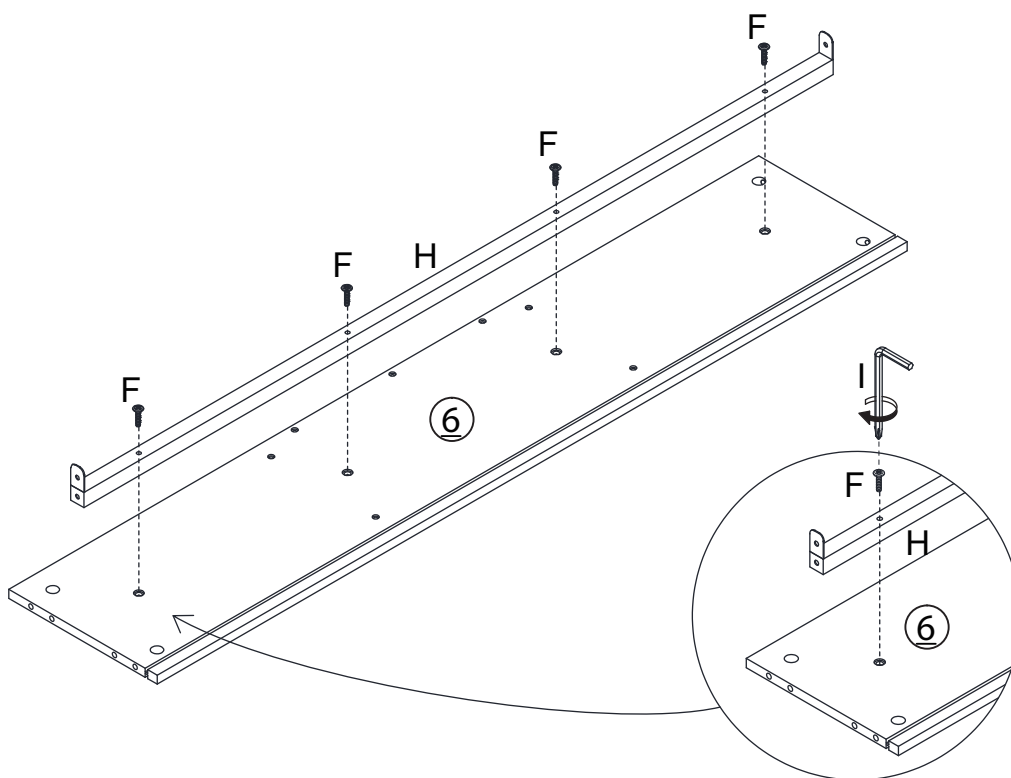


F  x4
6x30mm

H  x1

I  x1

3

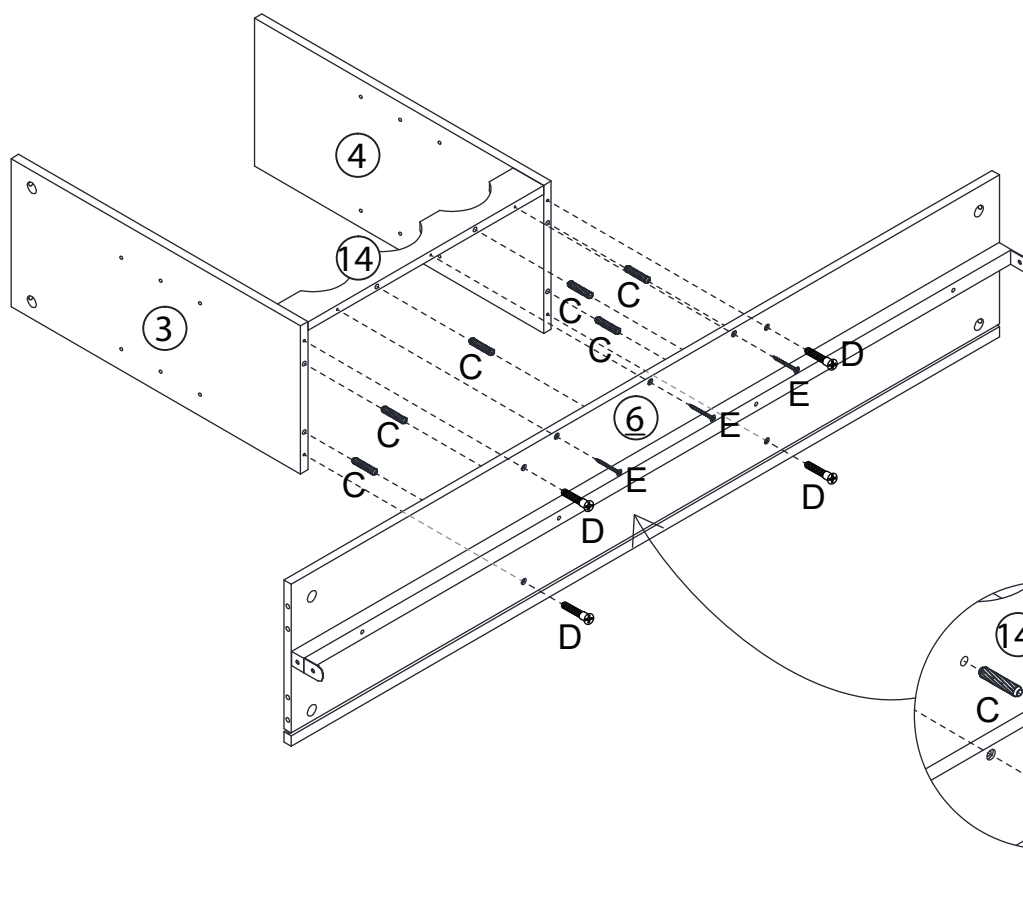





C  x6

E  x3
4x30mm

I  x1


D  x4
5x40mm

4

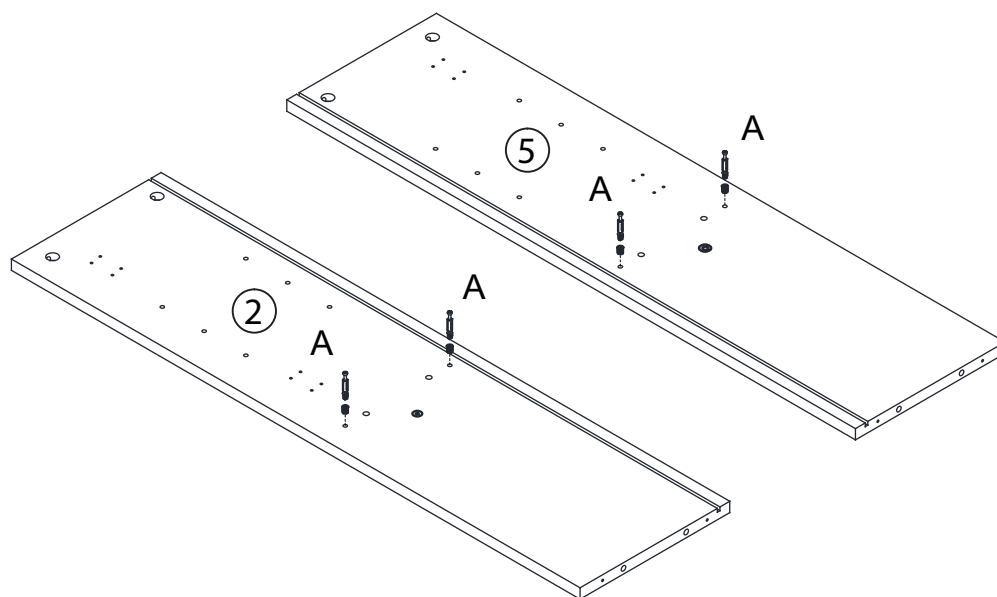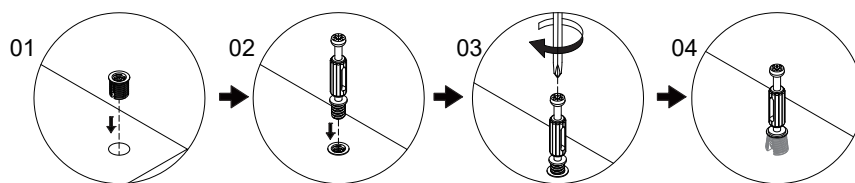


5




01

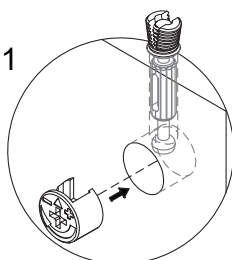


02

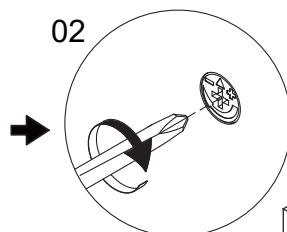


03

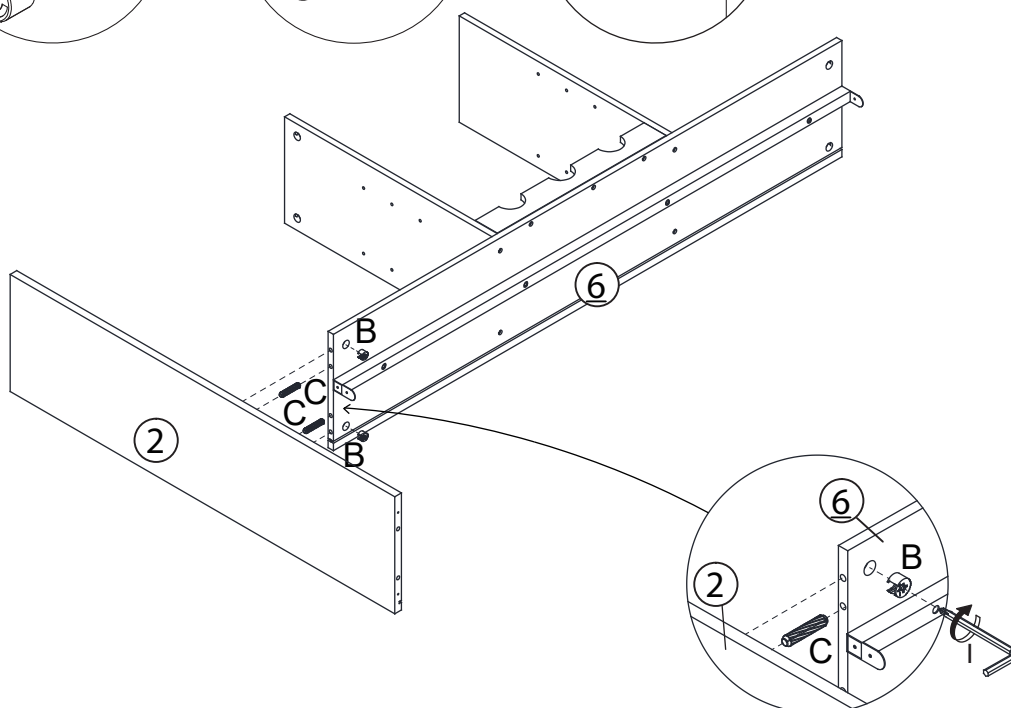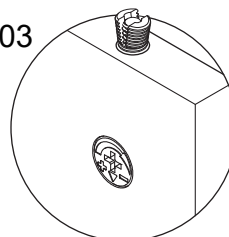




6

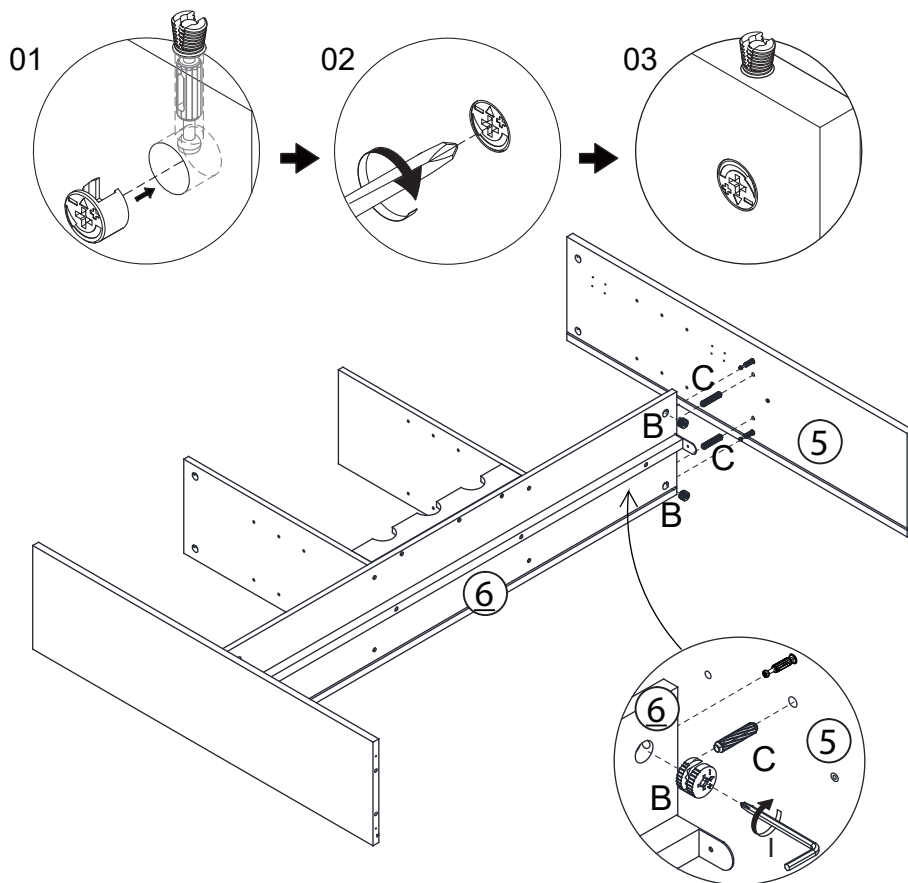




7

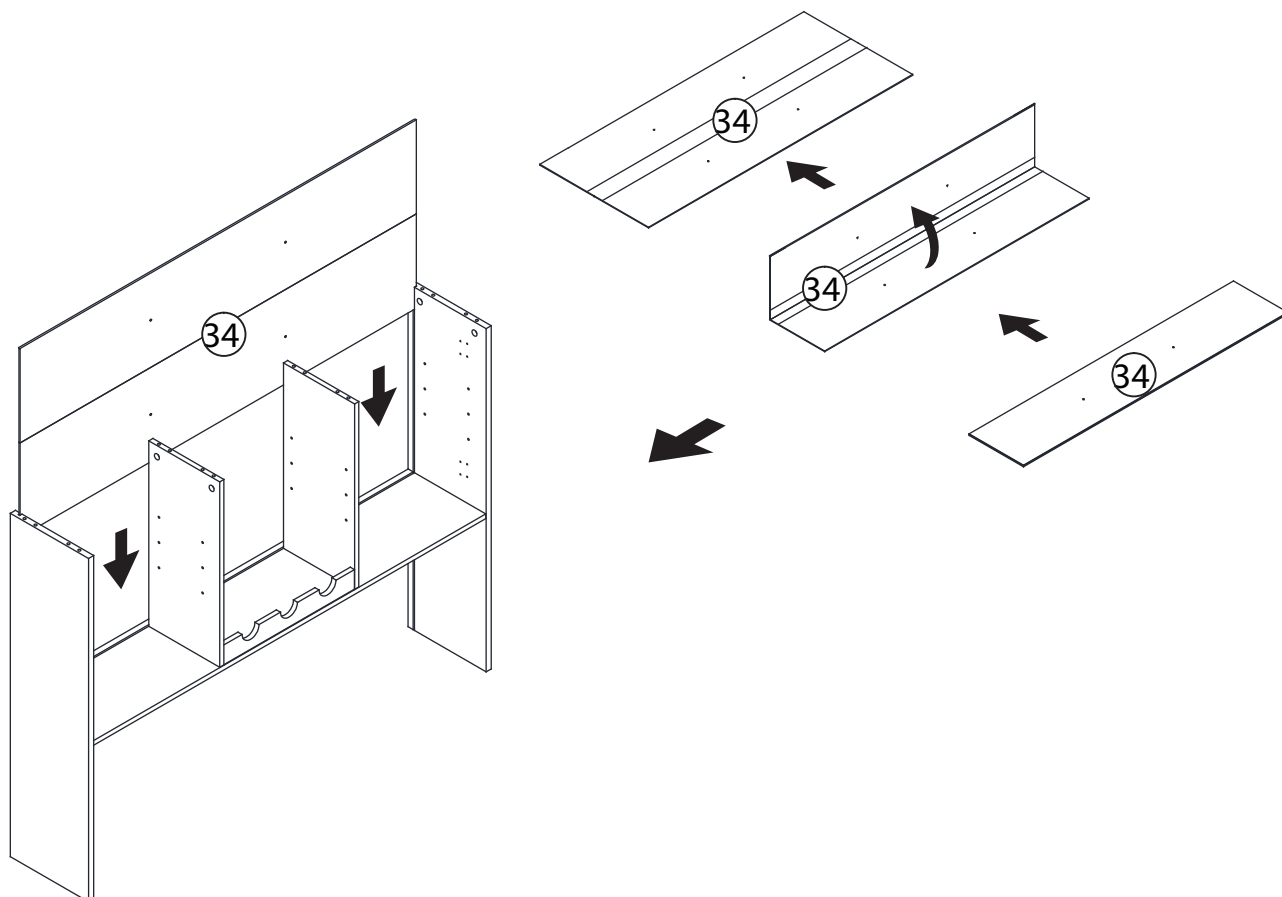


8

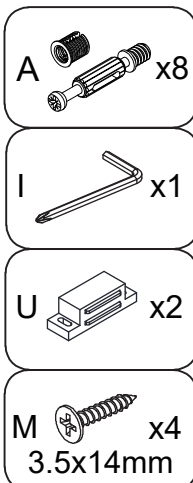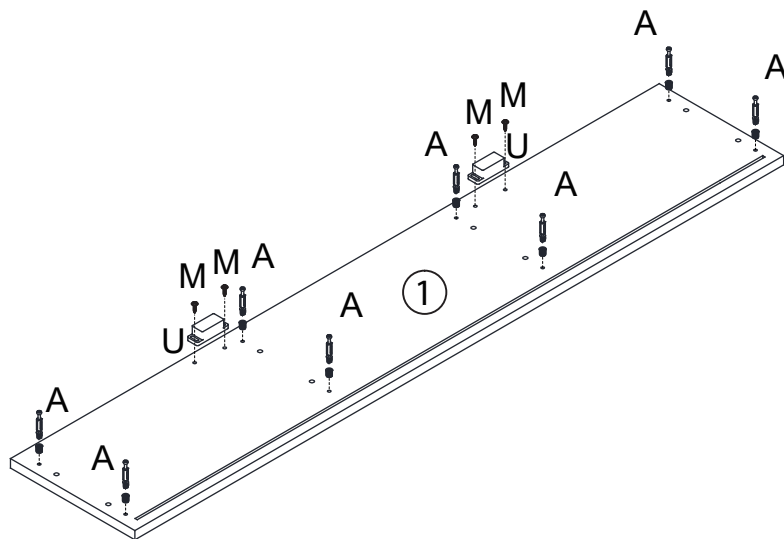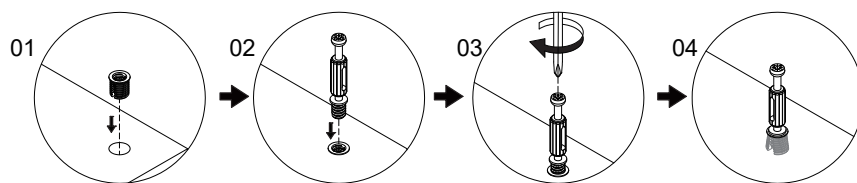





9

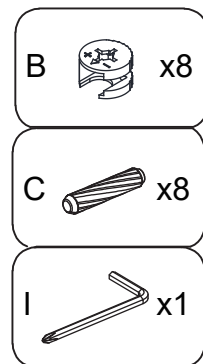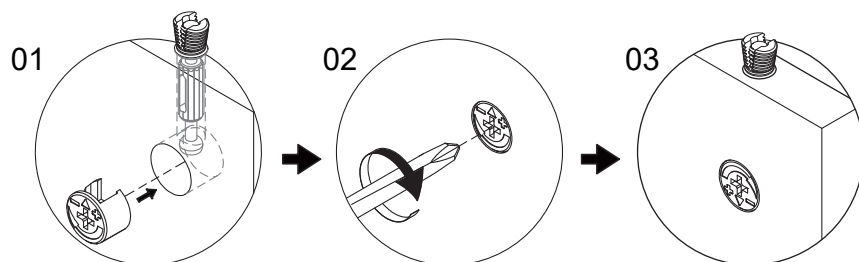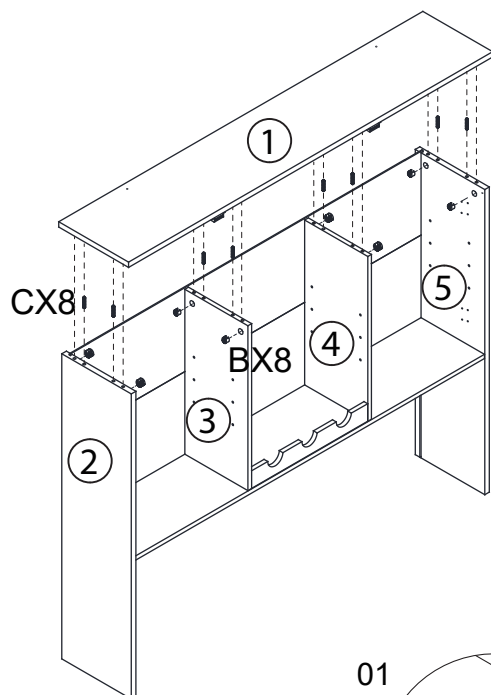


10

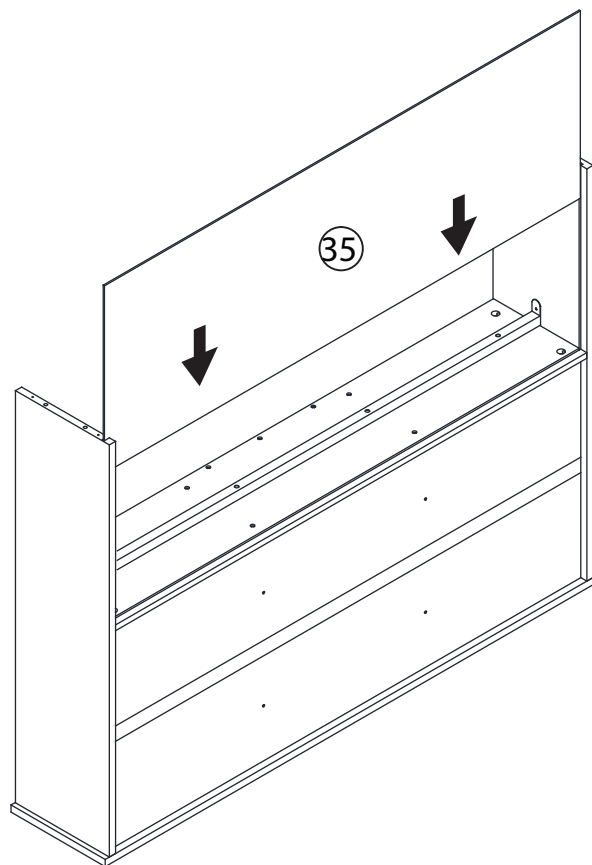


11

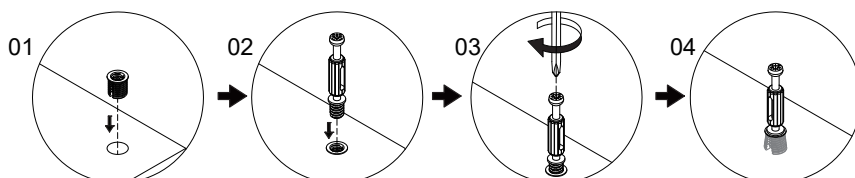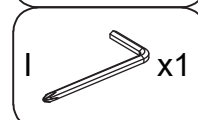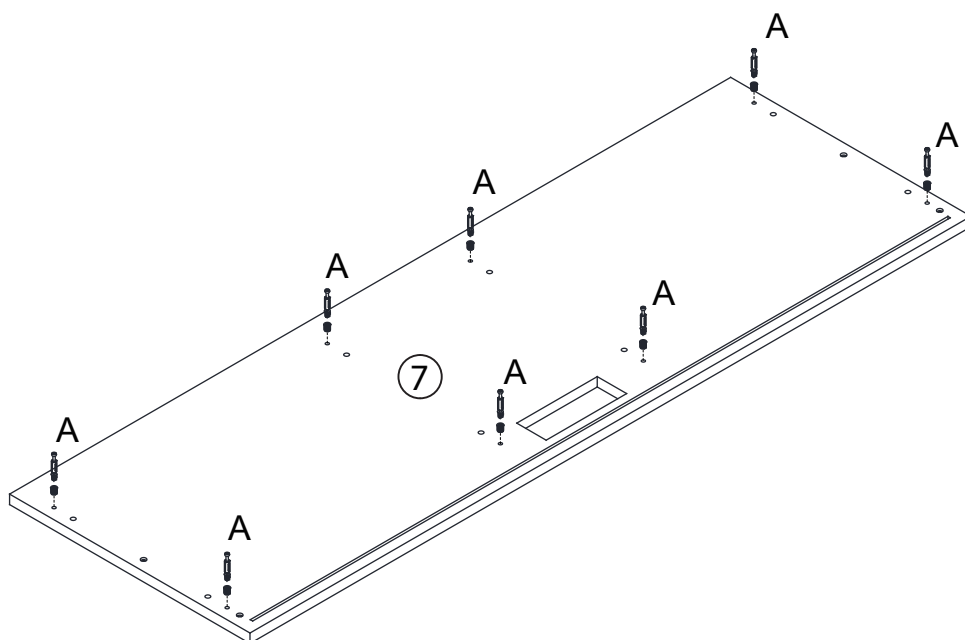

12

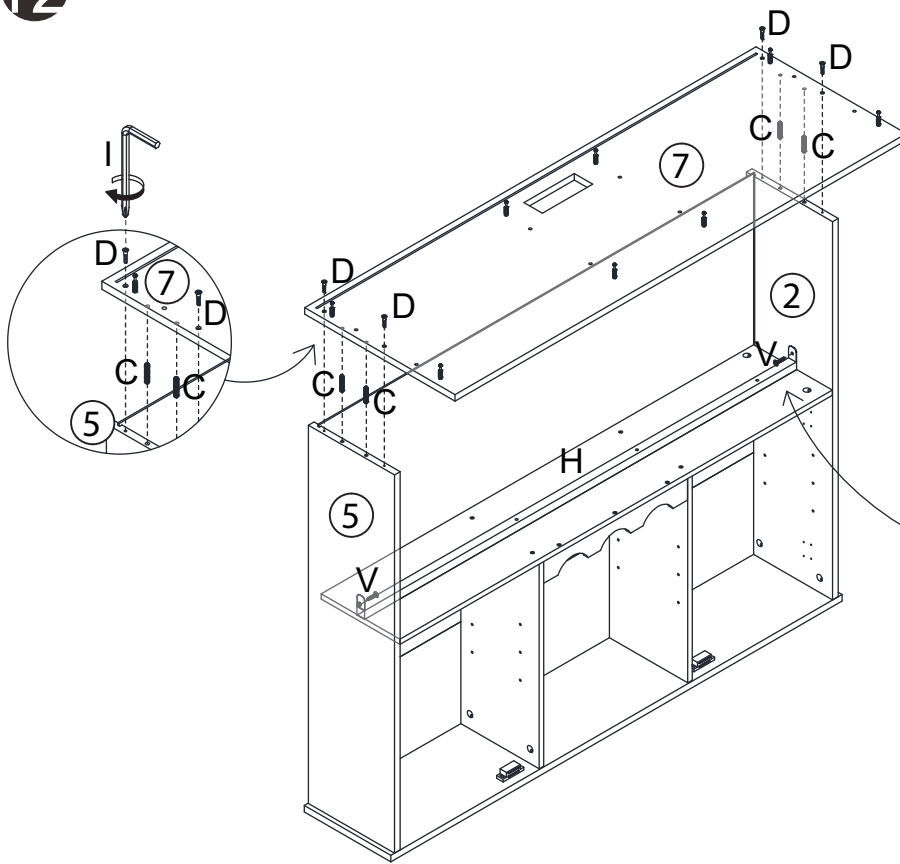


C  x4

D  x4
5x40mm

V  x2
6x10mm


I  x1

13







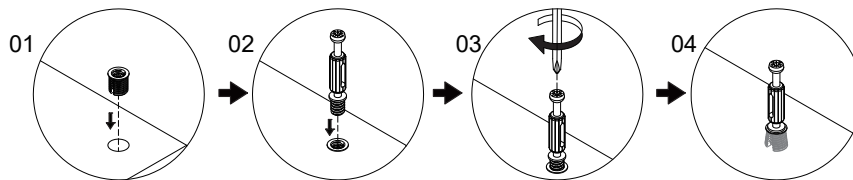


A  x4







I  x1

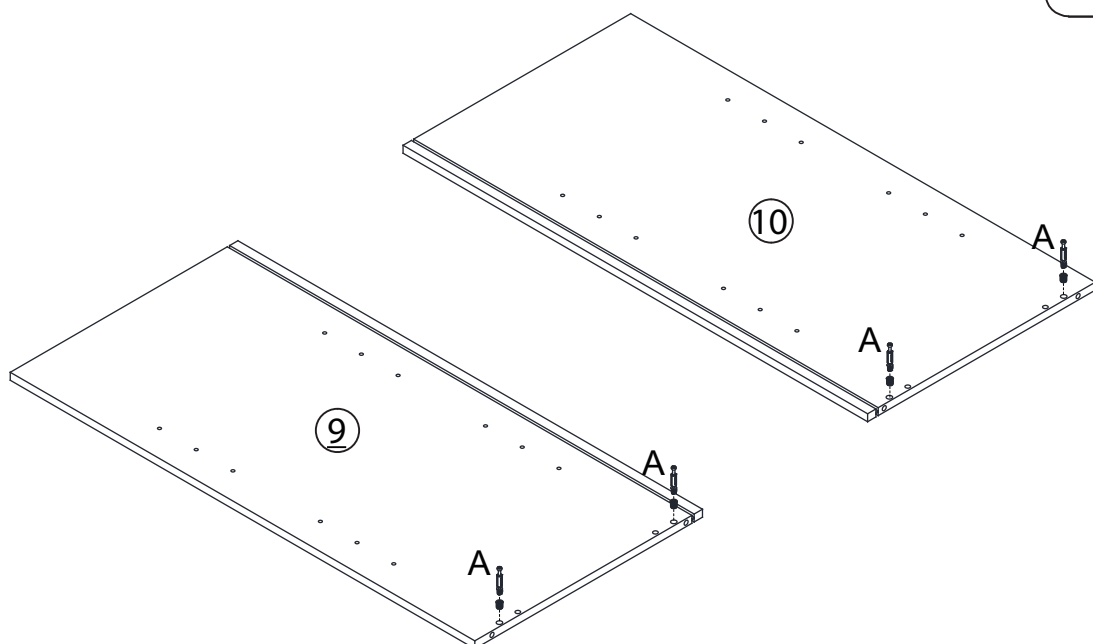


14

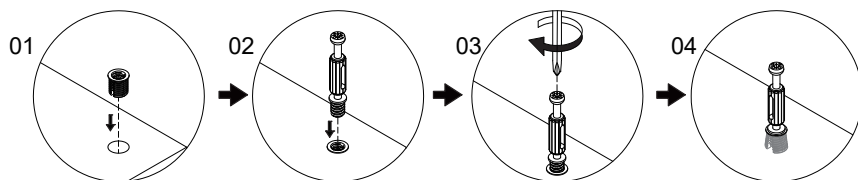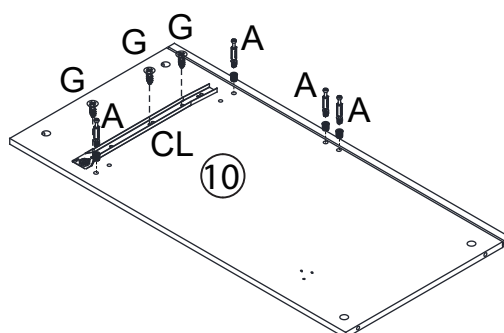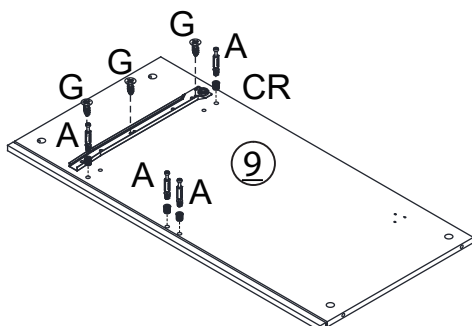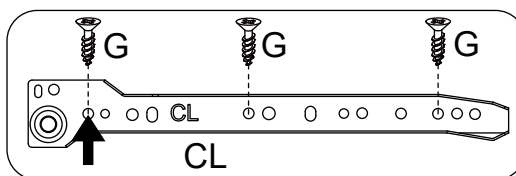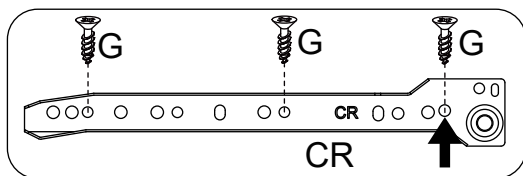


15

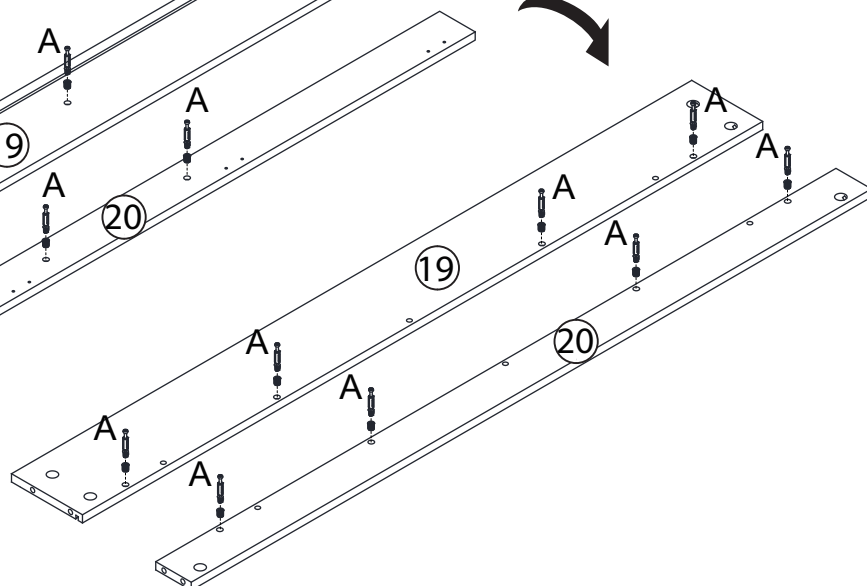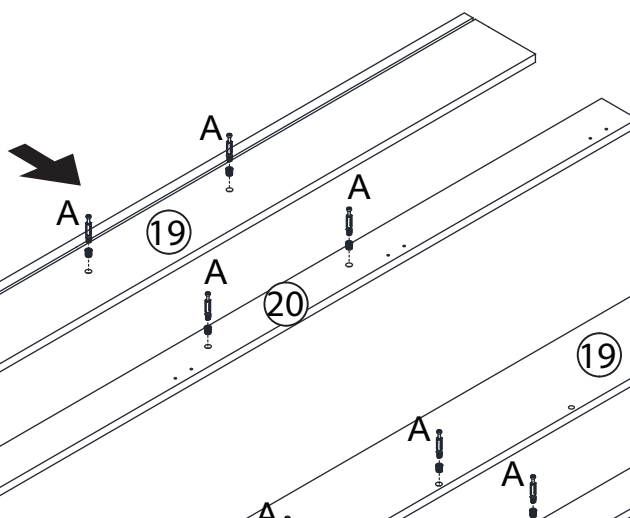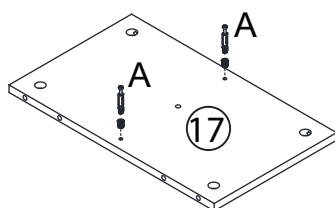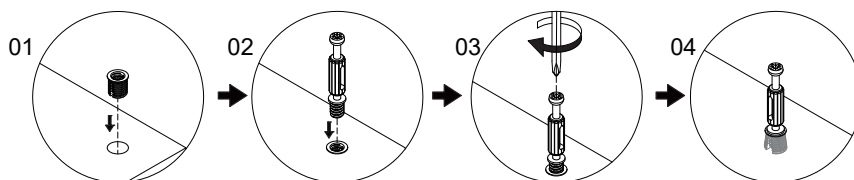



16

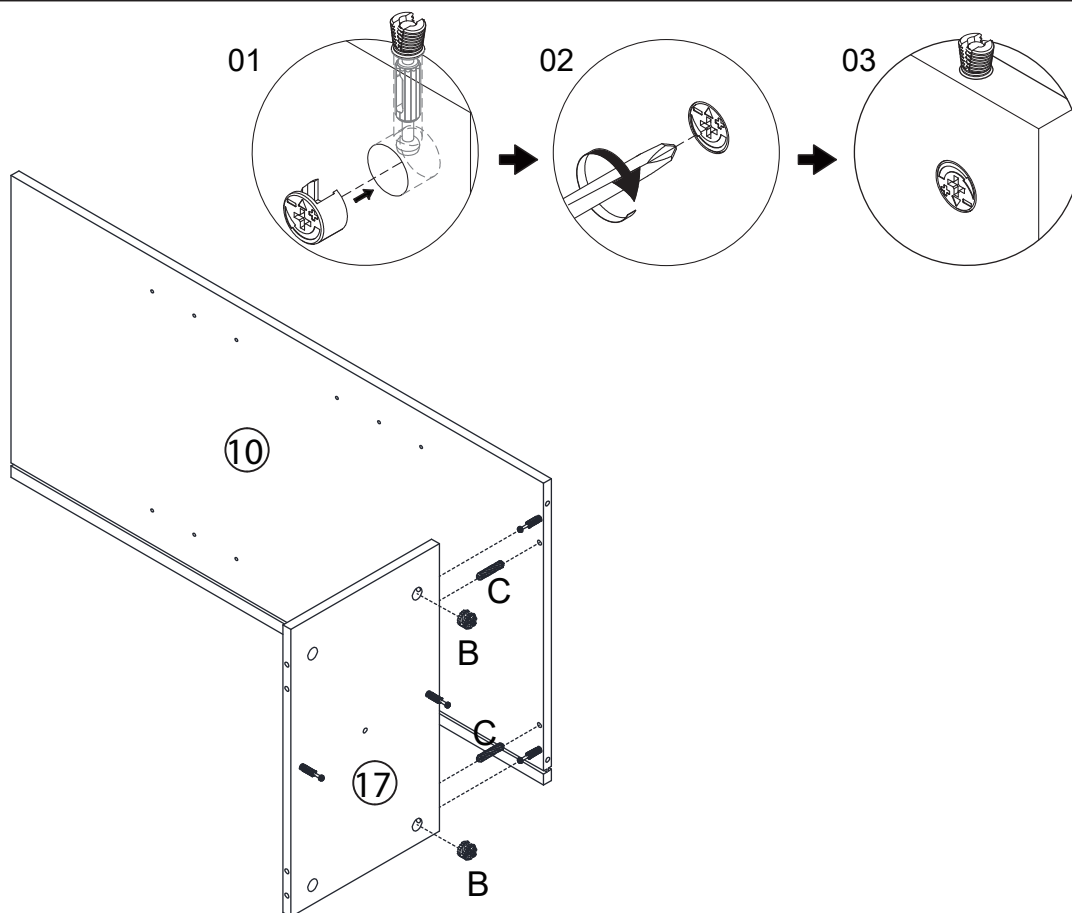

- B  x2
- C  x2
- I  x1


17

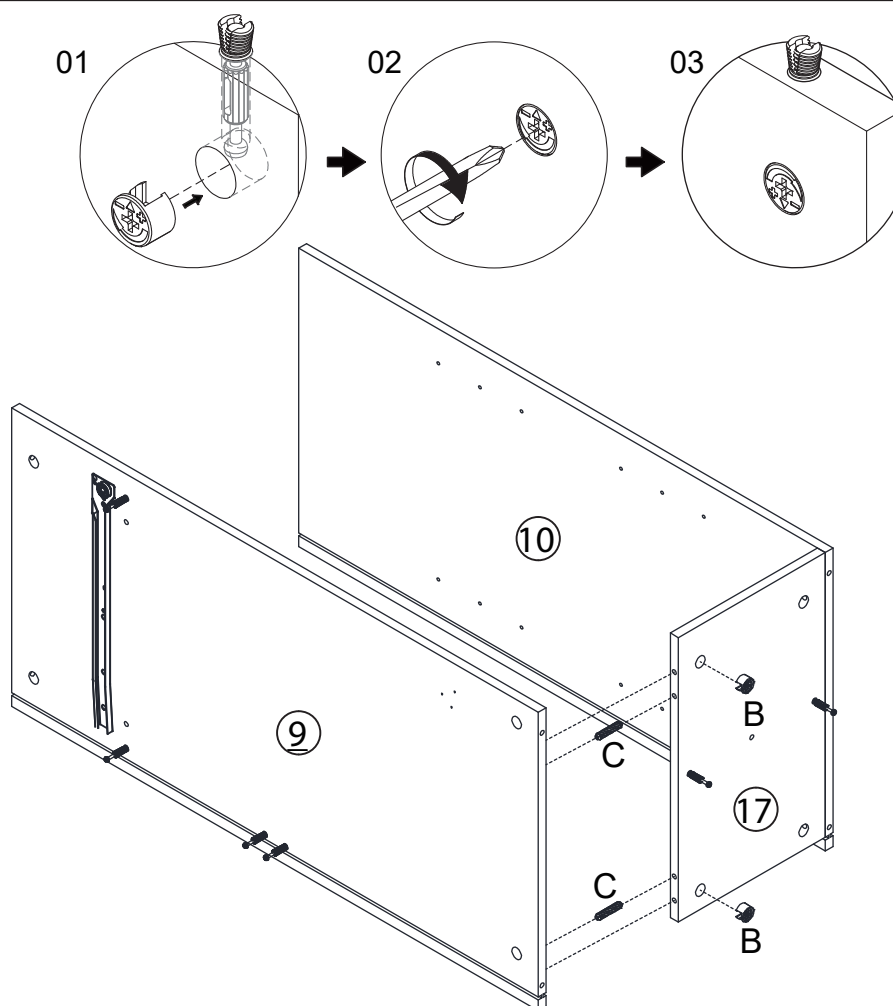


- B  x2
- C  x2
- I  x1

18


01

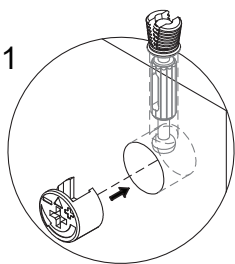

02

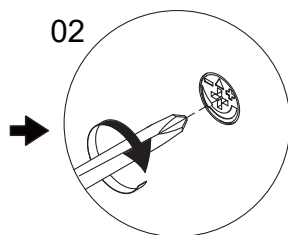



03

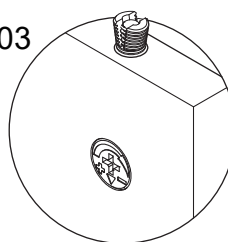

B  x8


C  x6

I  x1

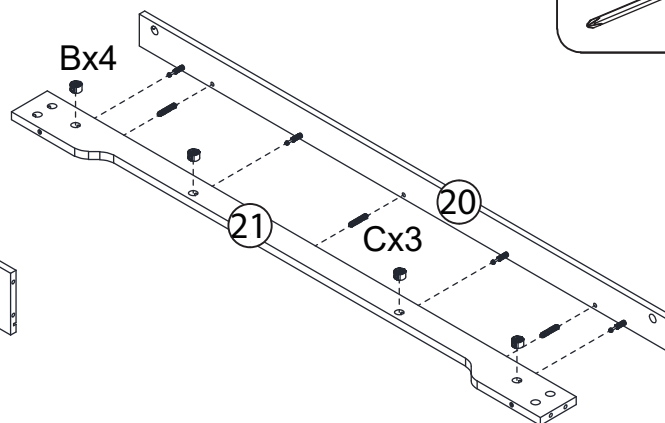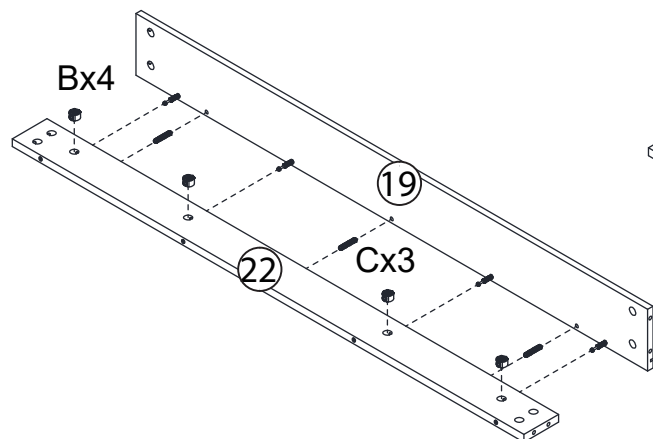


19


01

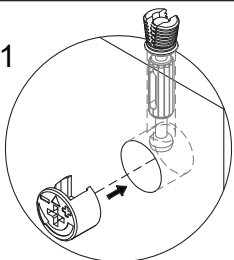


02

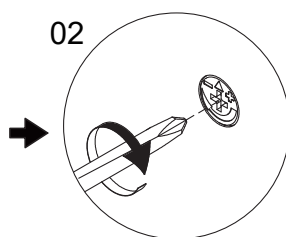


03


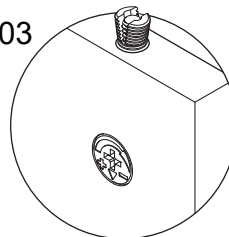


B  x4




I  x1

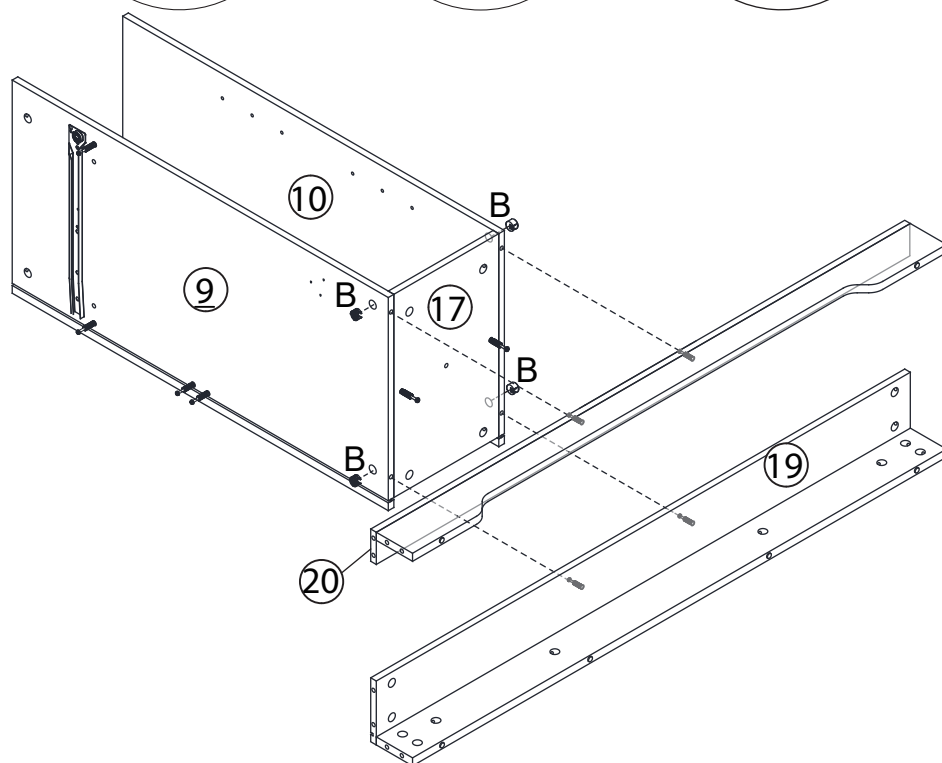


20

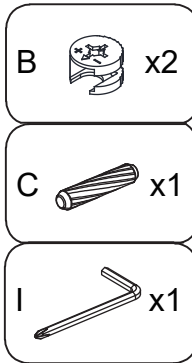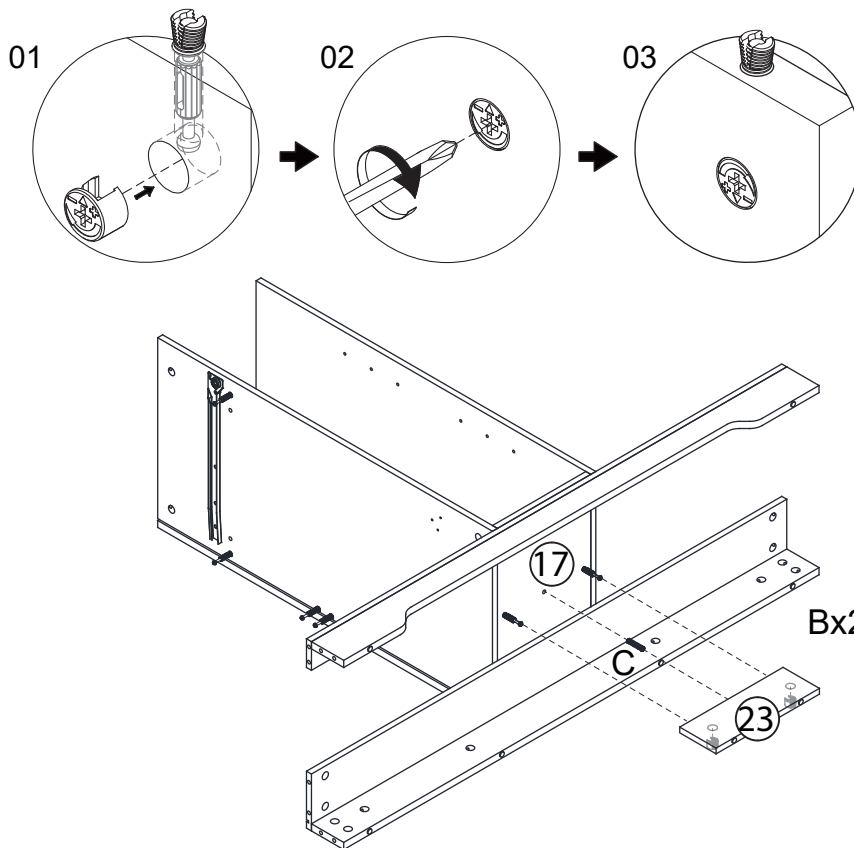


21

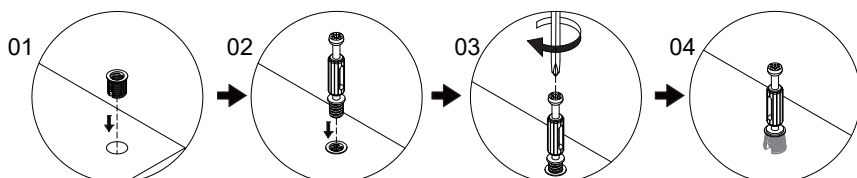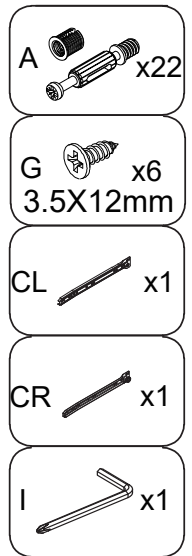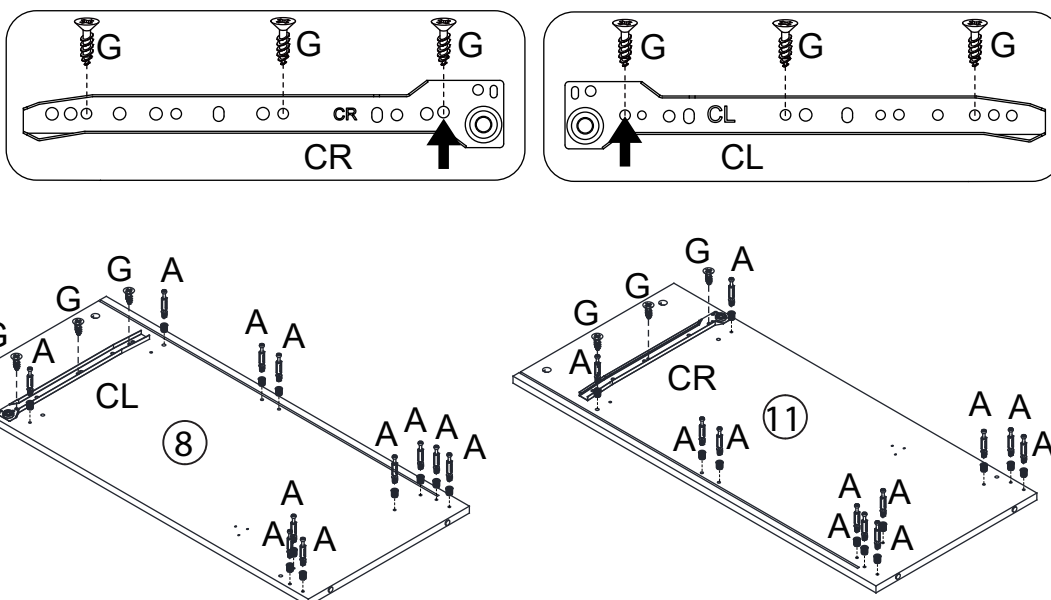


22

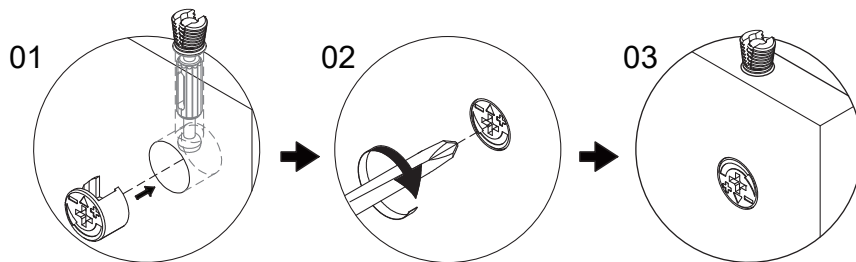


- B  x4
- C  x2
- I  x1

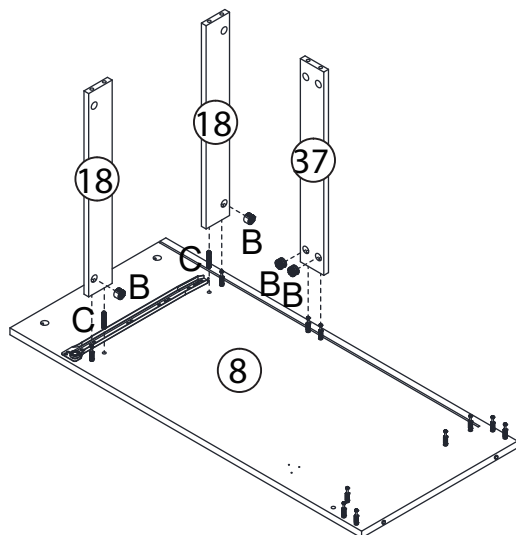




23

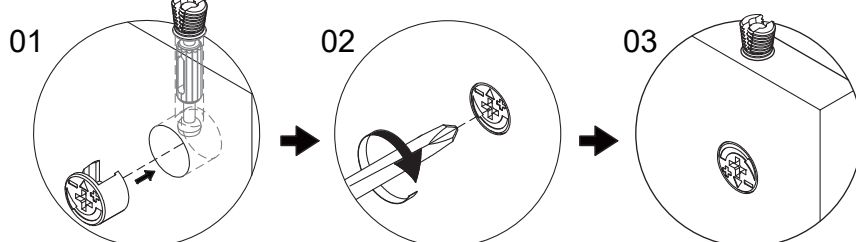





- B  x11
- C  x3
- I  x1

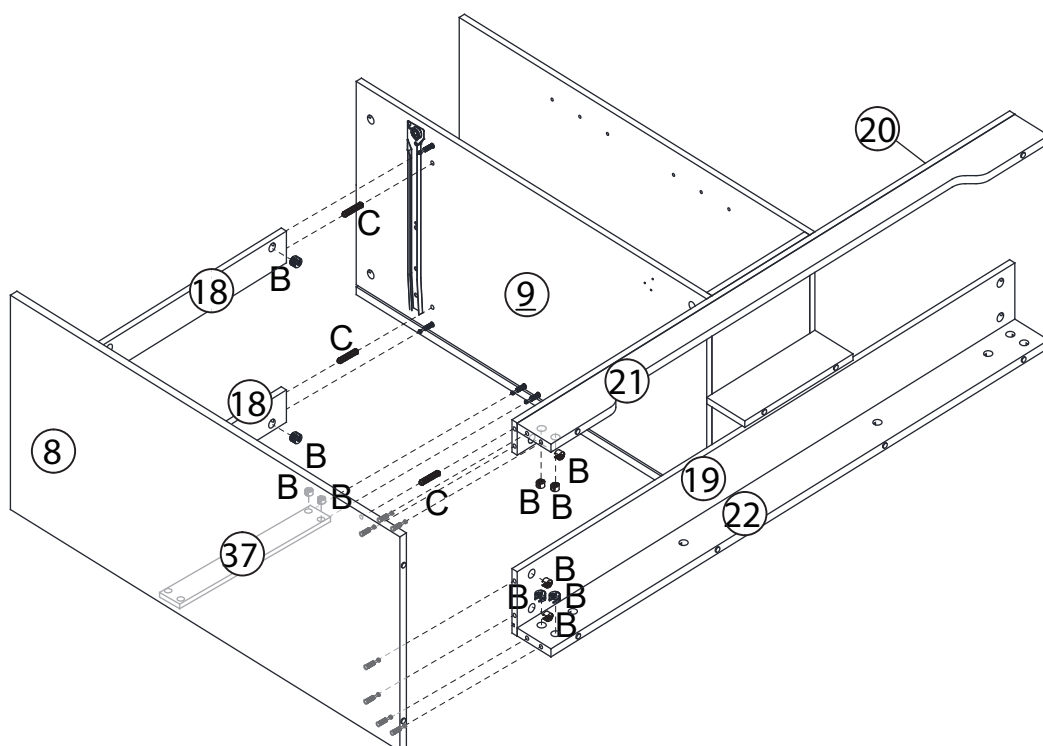


24

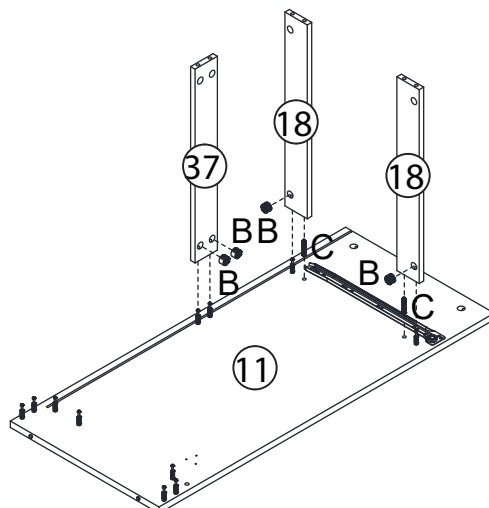
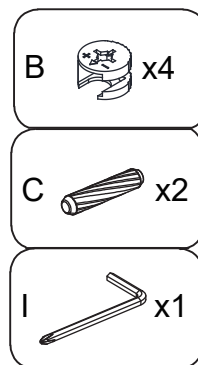
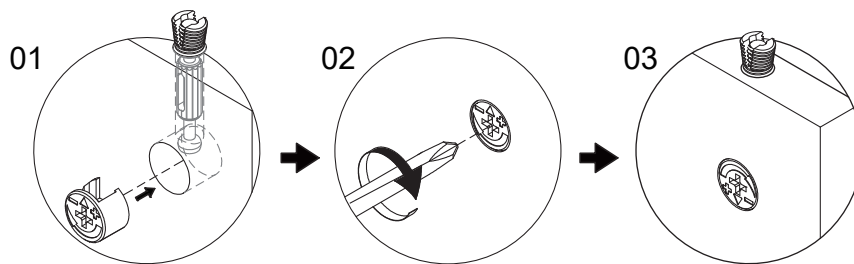


25

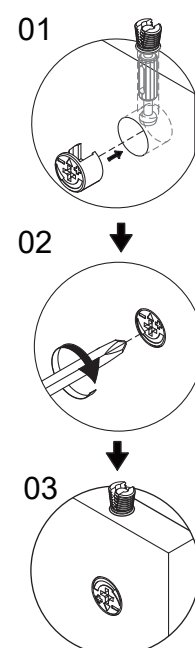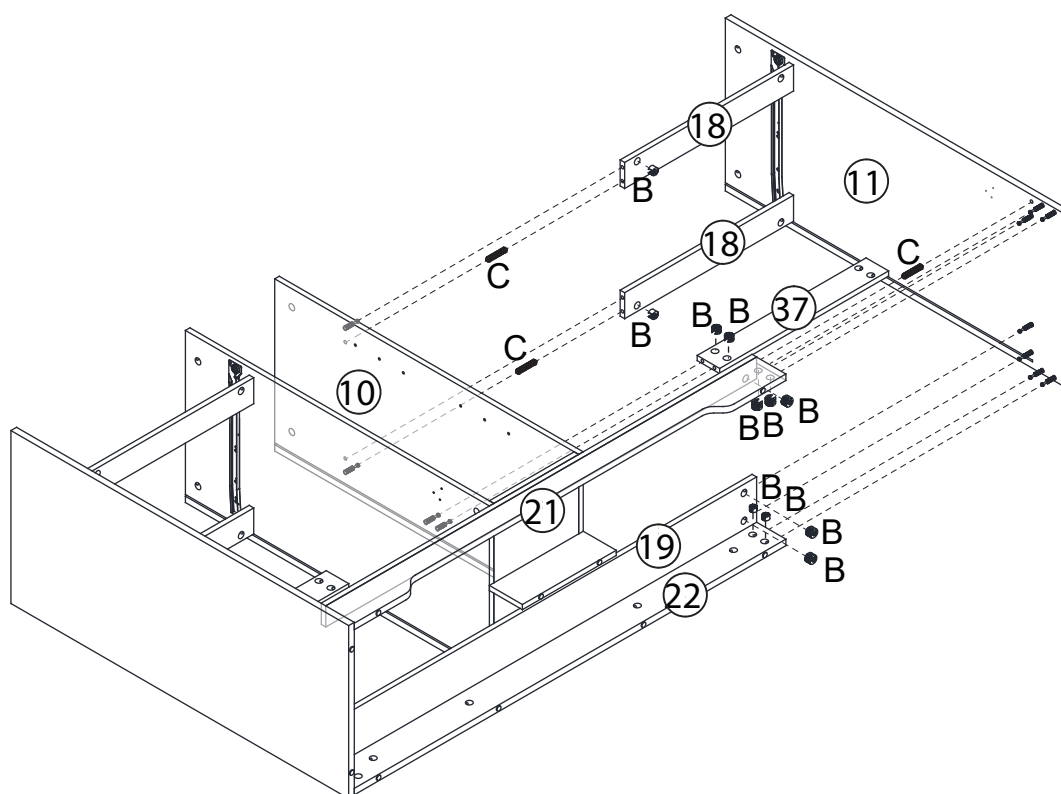
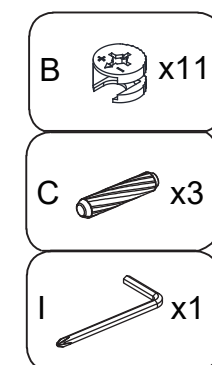
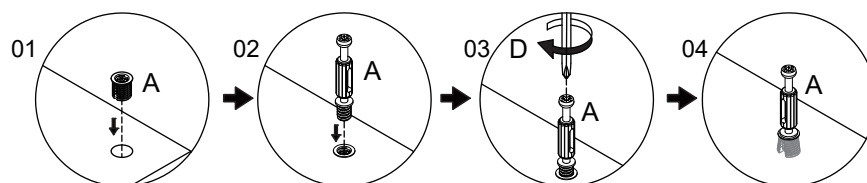


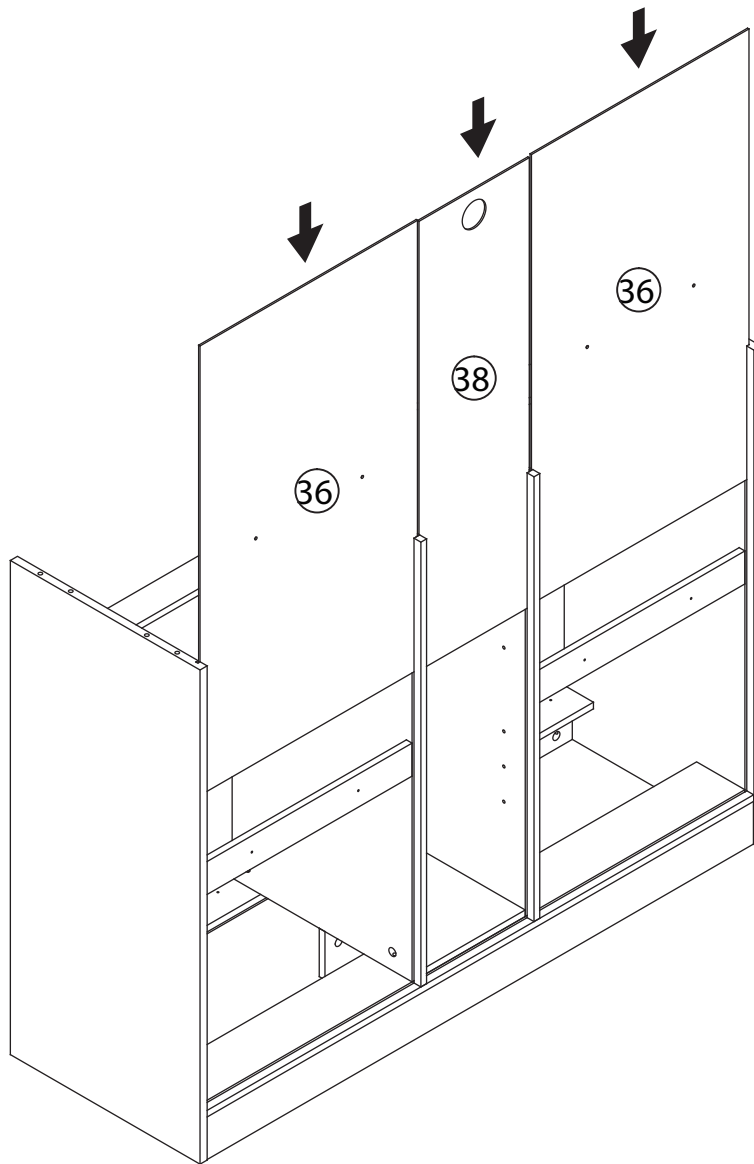





27

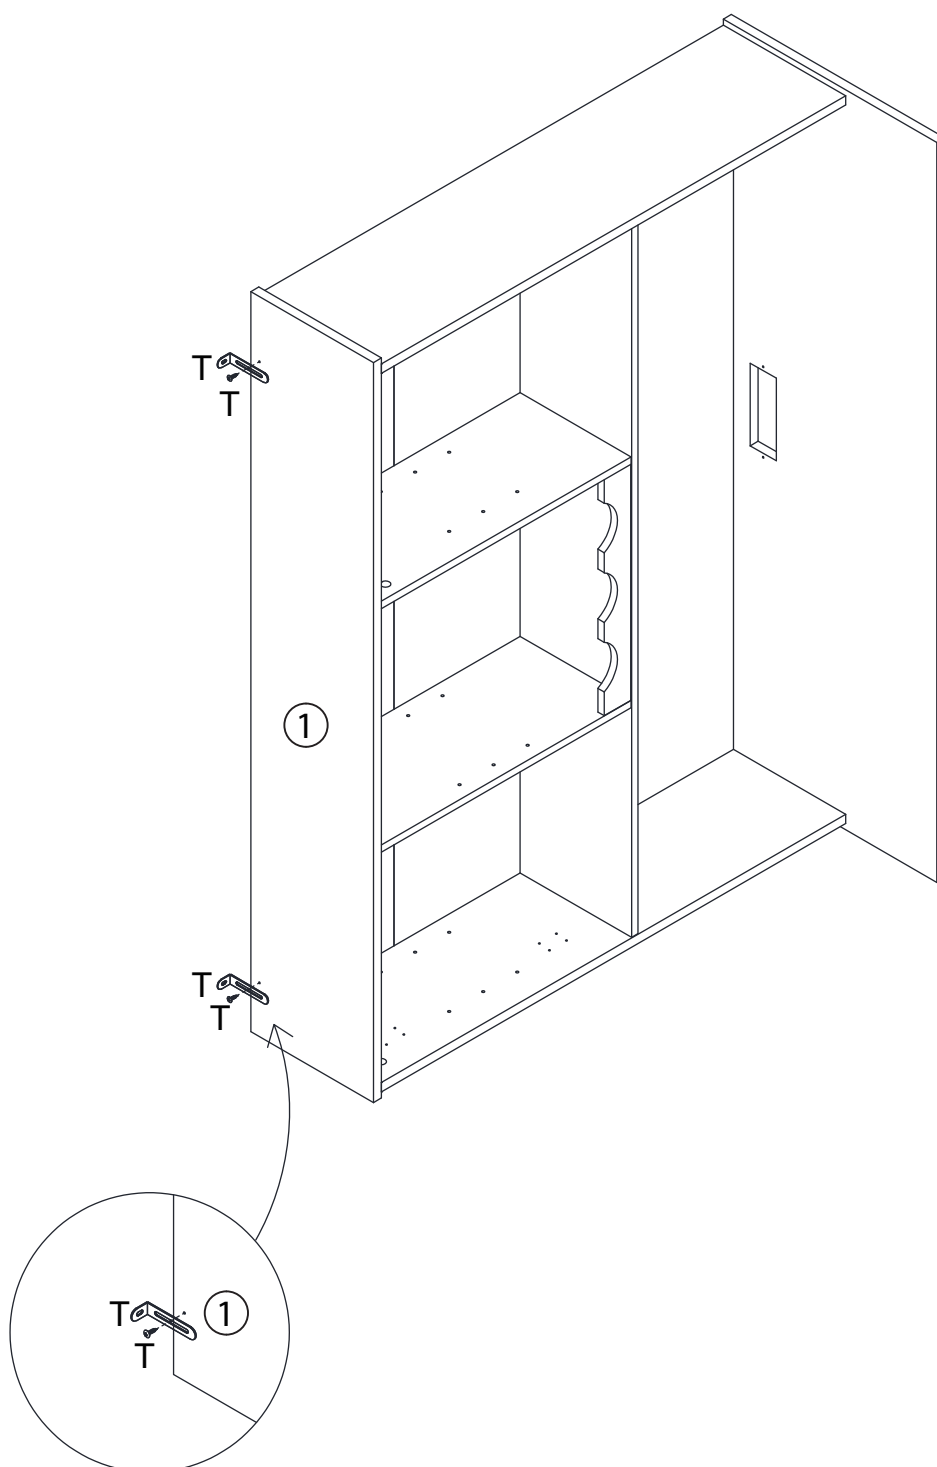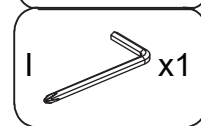



28

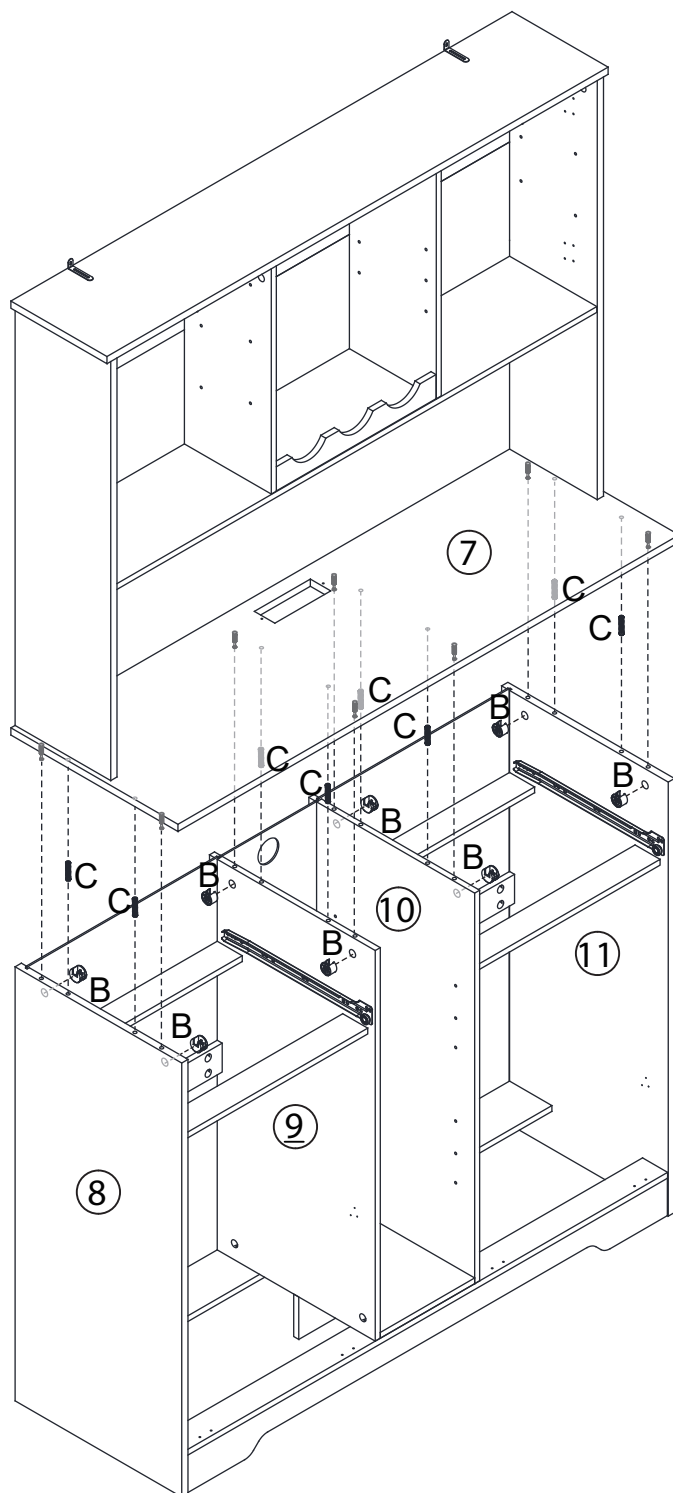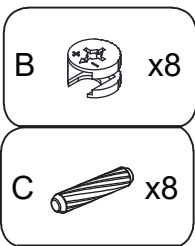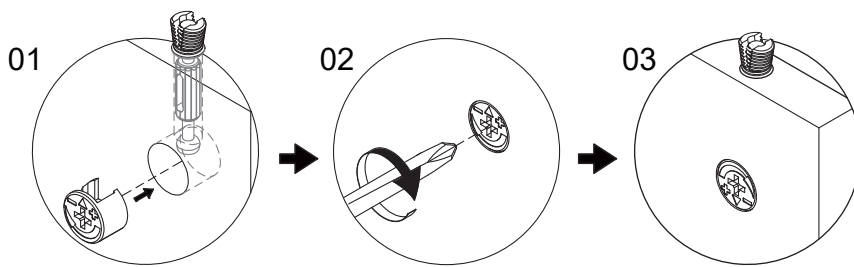

29

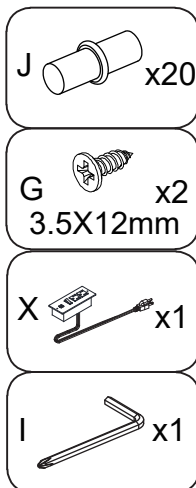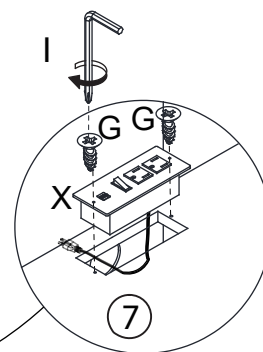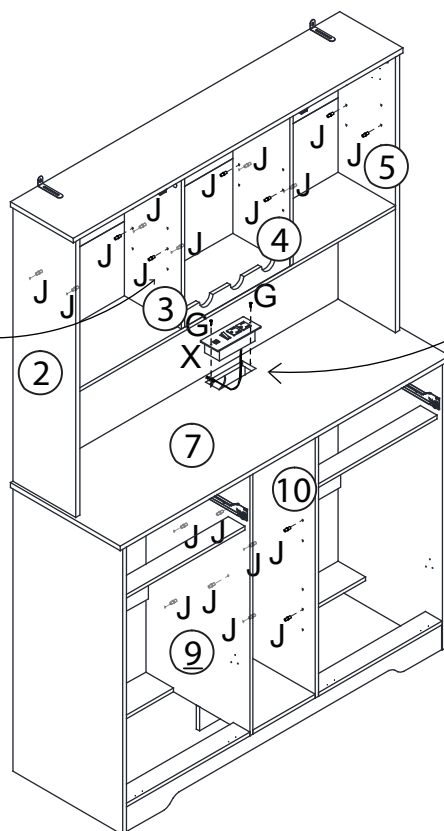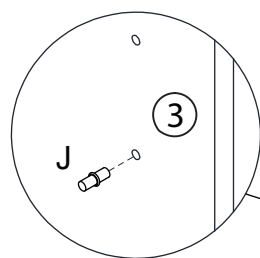


30

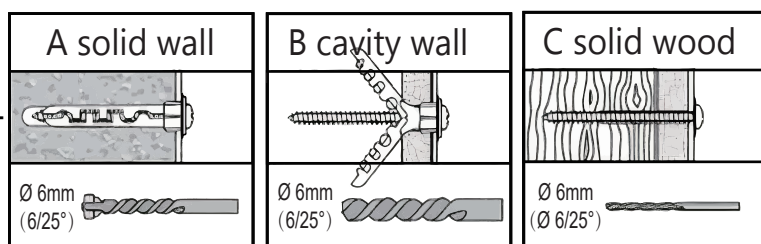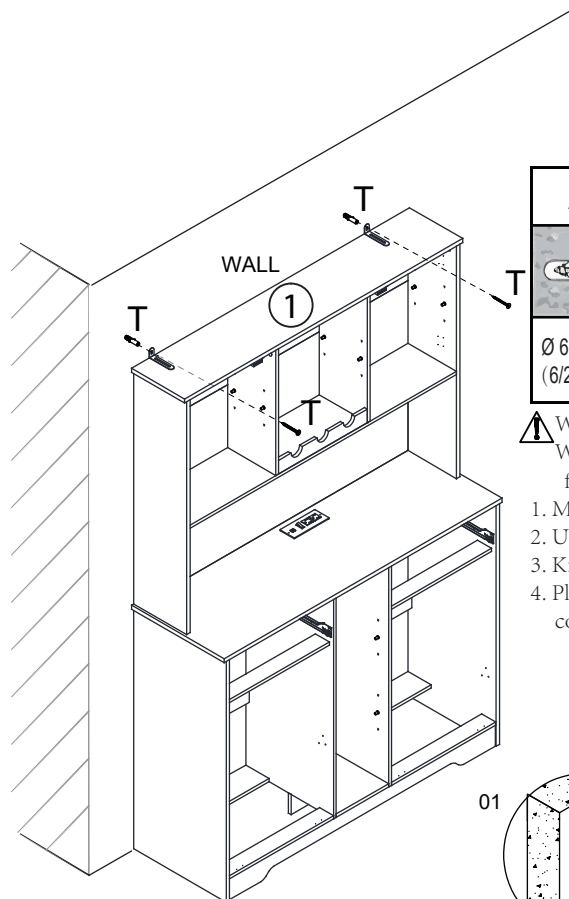


⚠ Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.




1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

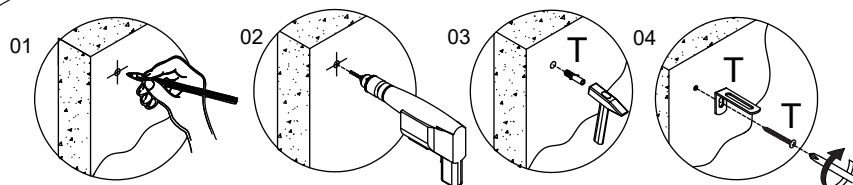



31

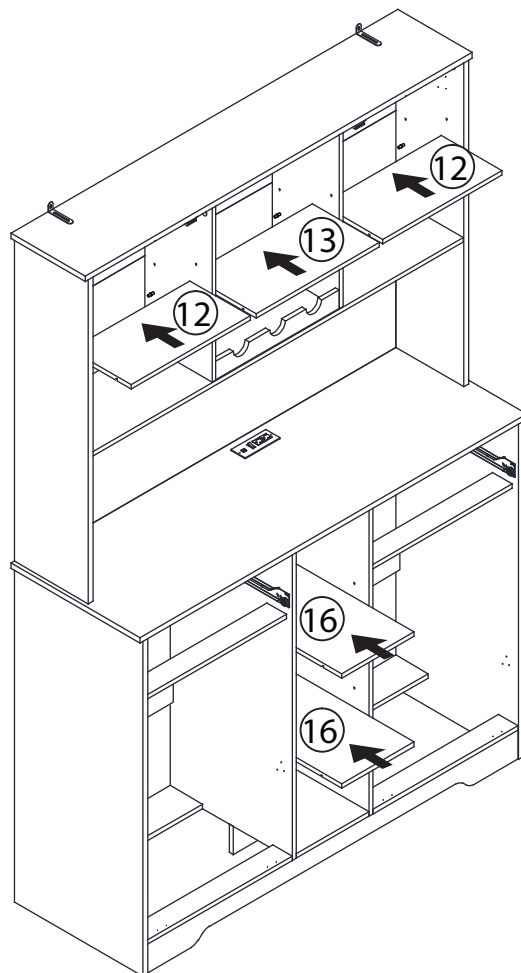




32

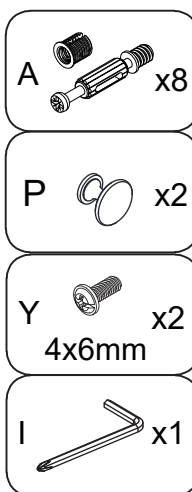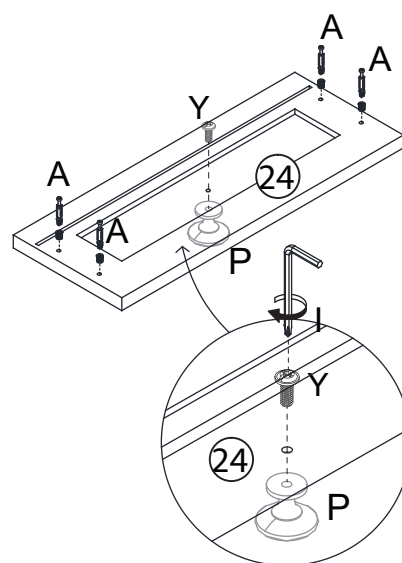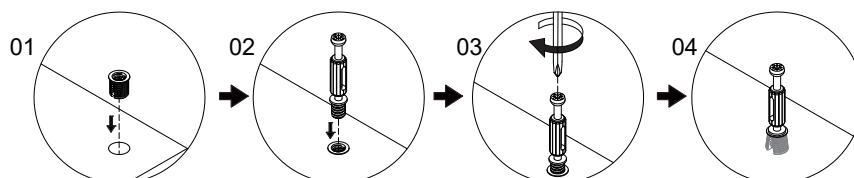



33

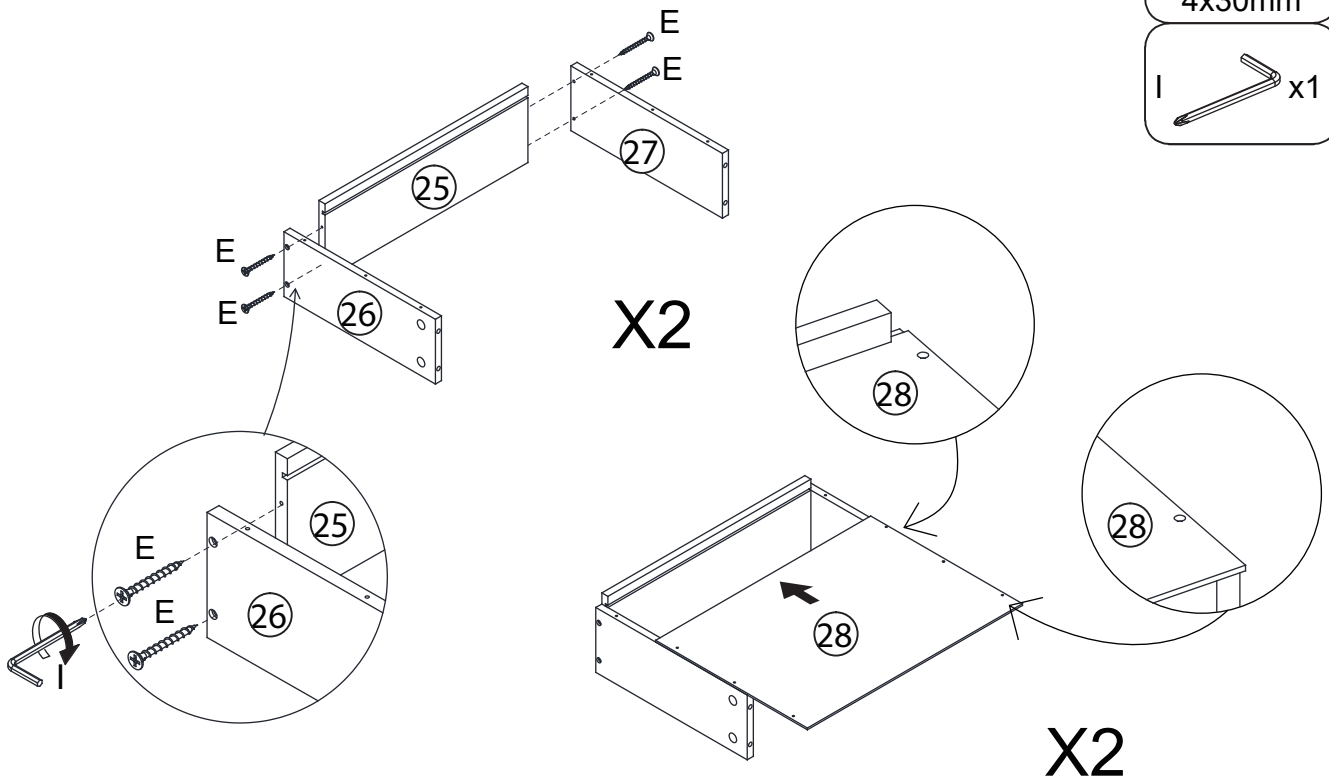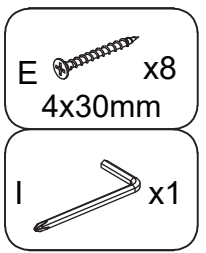

34

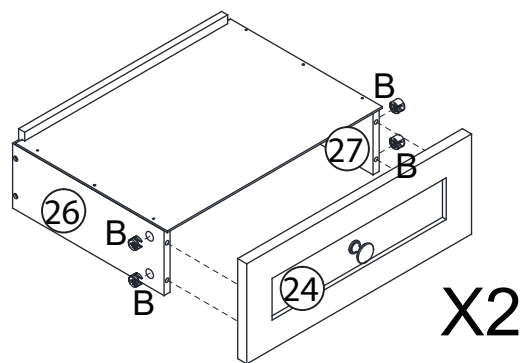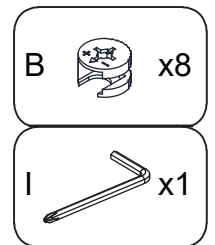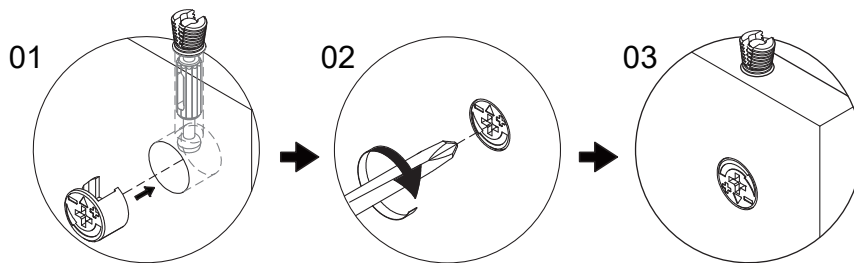

35

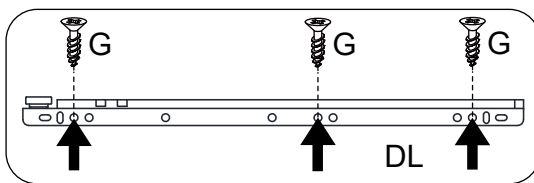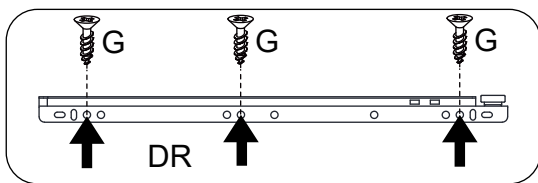


G x12
3.5X12mm

DR x2


DL x2

I x1

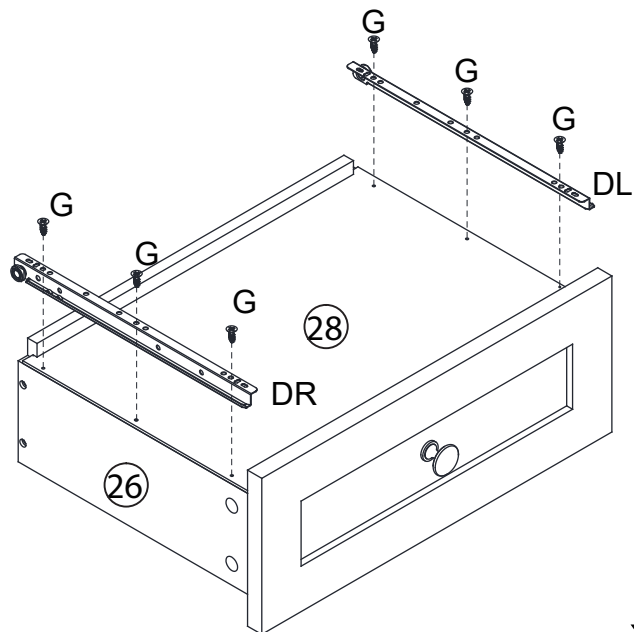


X2

36

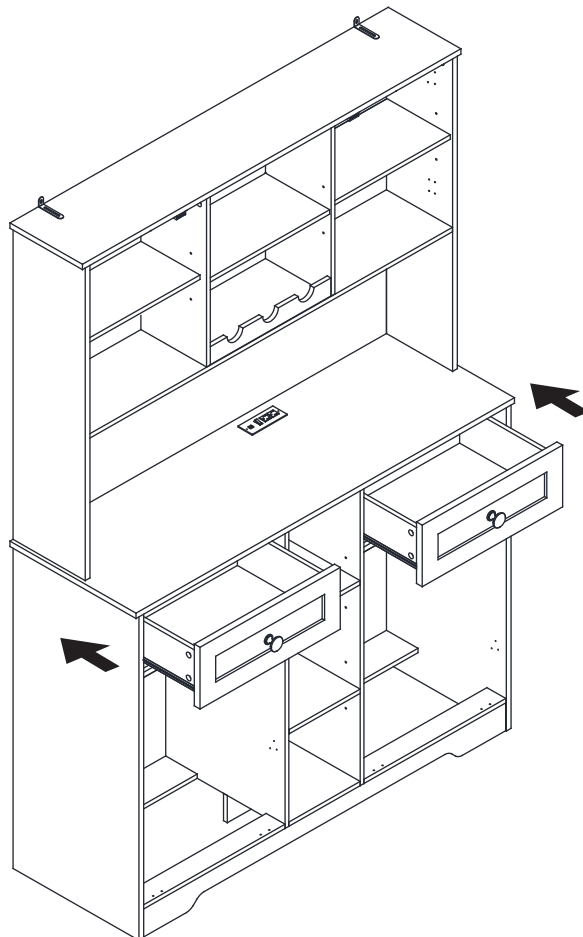

37

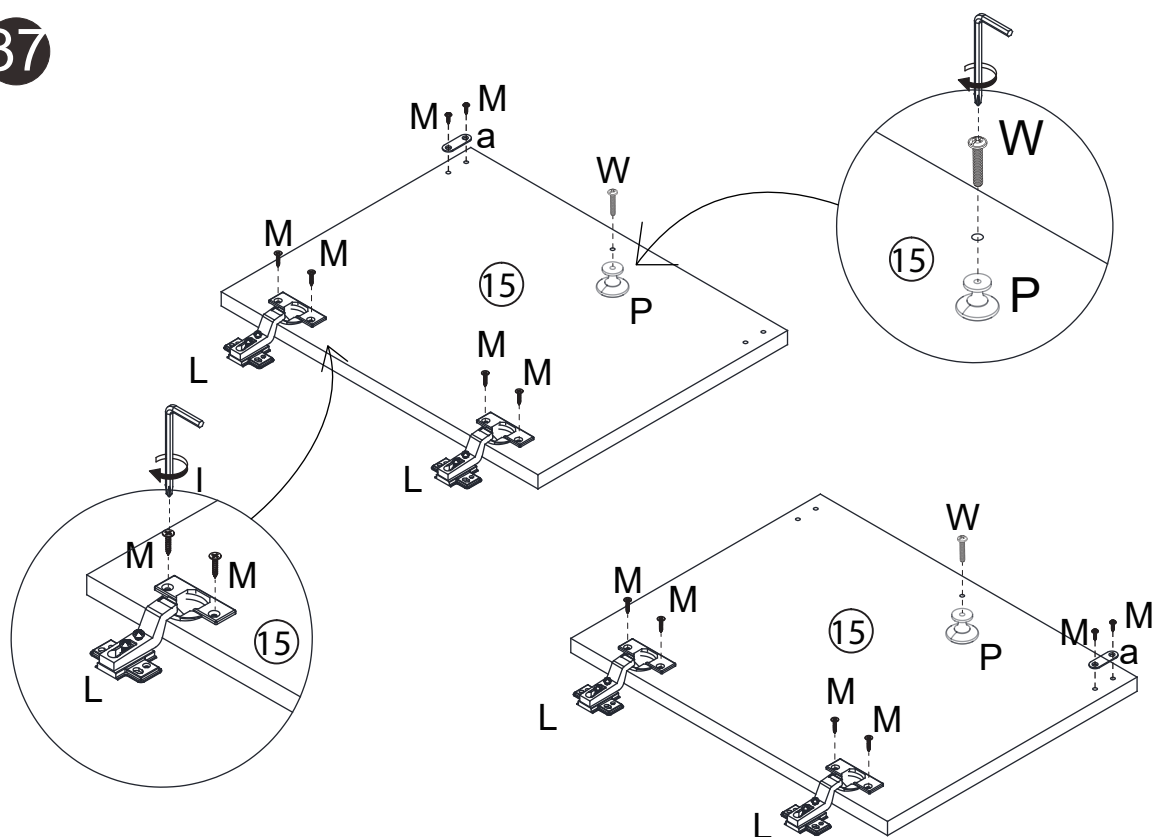

L  x4

P  x2


W  x2

I  x1

a  x2


M  x12
3.5x14mm

38

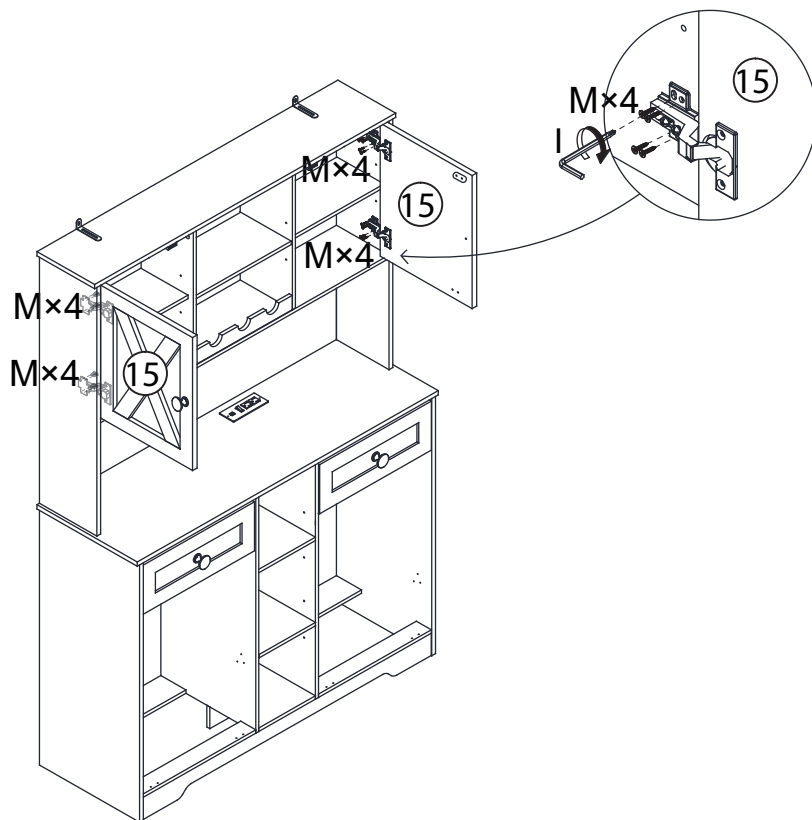



M  x16
3.5x14mm

I  x1

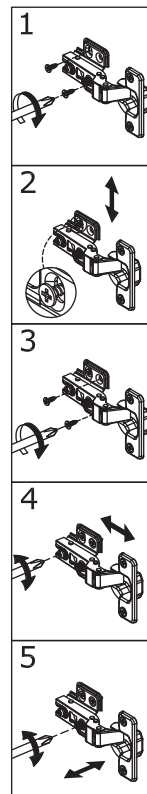


39

- I  x1
- E  x4
4x30mm
- C  x8


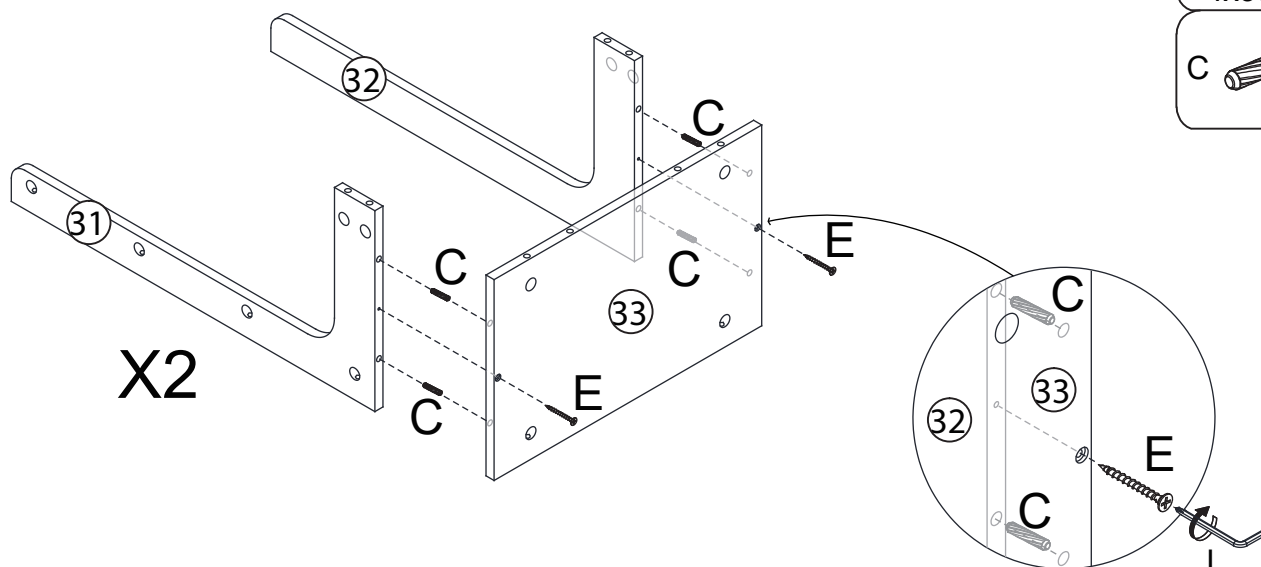


40

- A  x12
- B  x12
- C  x4
- I  x1

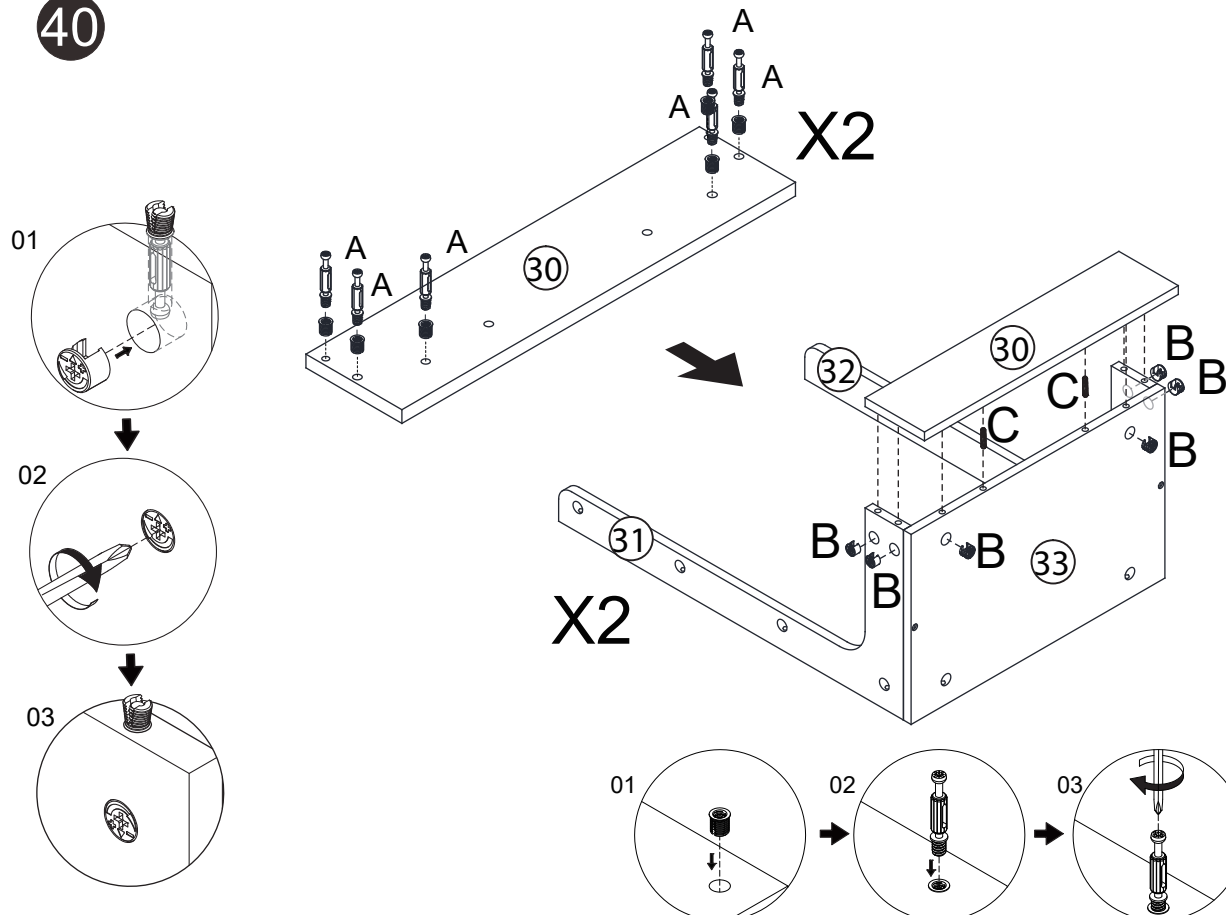

41

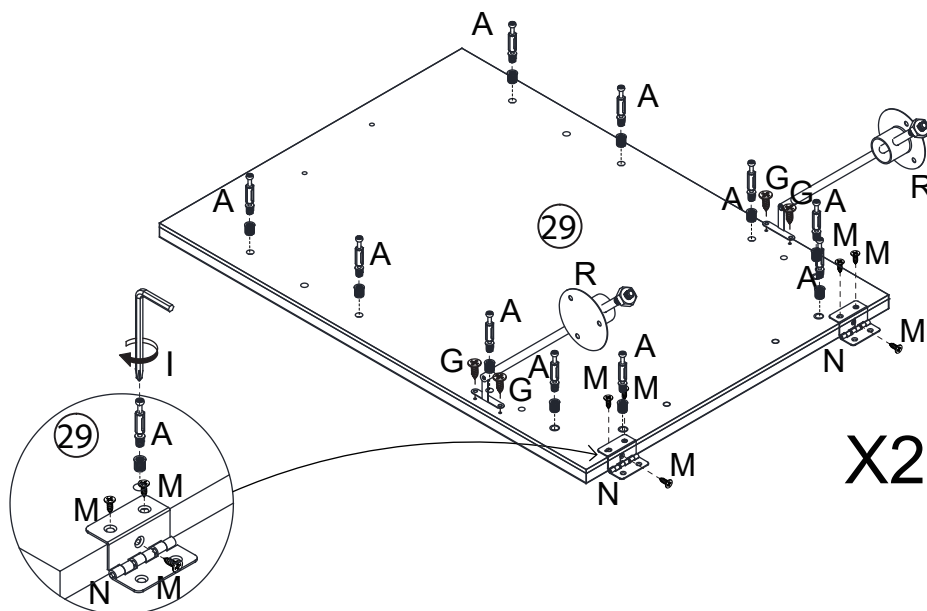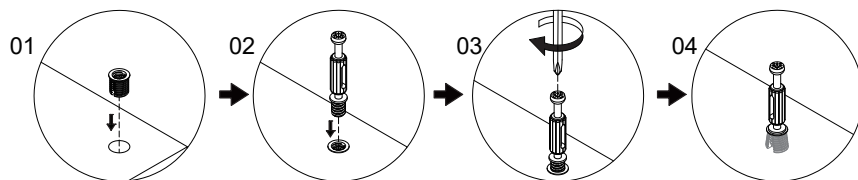

M  x12
3.5x14mm

A  x20


N  x4

I  x1

G  x8
3.5x12mm

R  x4

42

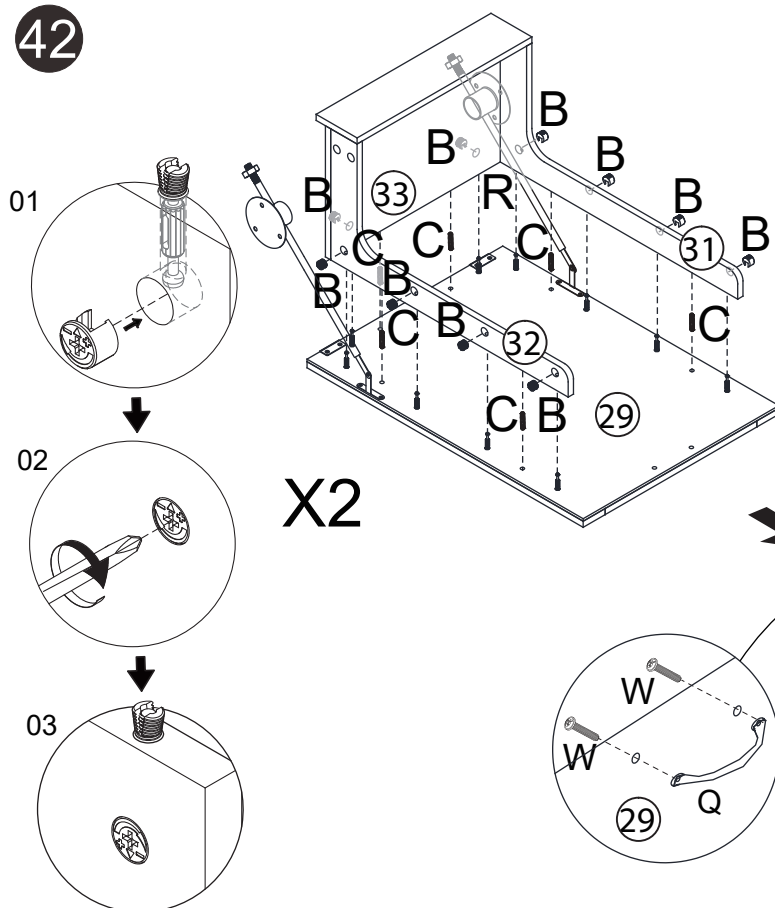


B  x20

C  x12



I  x1

Q  x2


W  x4
4x22mm

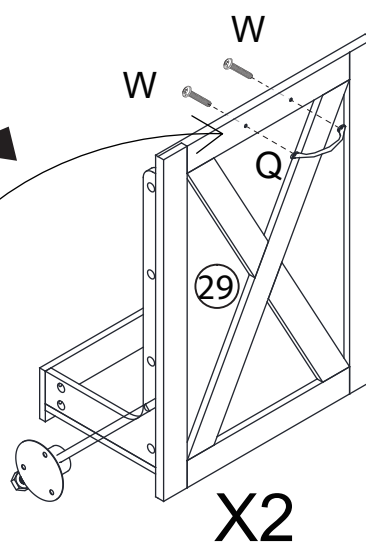



44

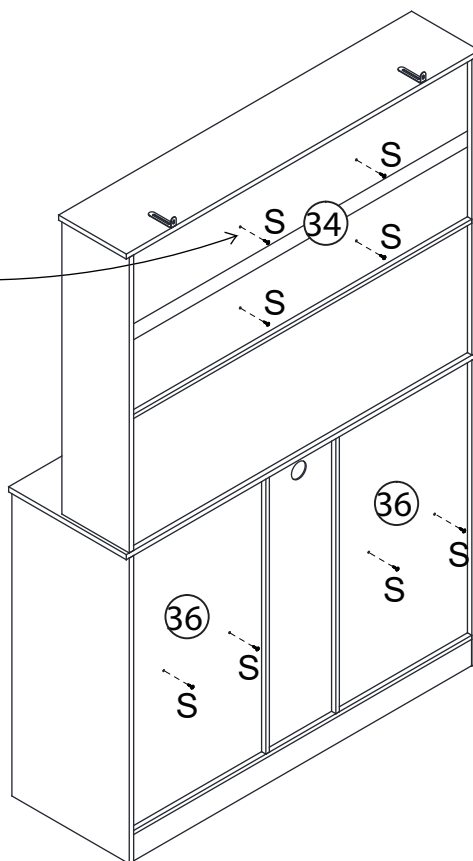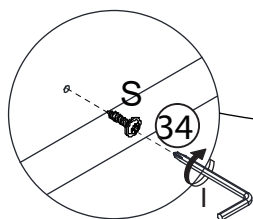

S  x8
3x12mm

I  x1


45

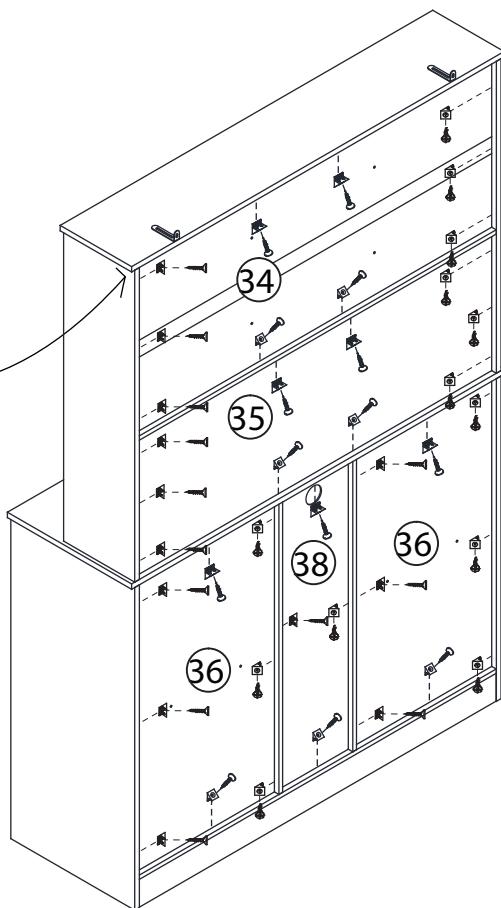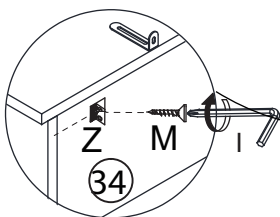

Zx40
Mx40


M  x40
3.5x14mm

Z  x40

I  x1

46

K  x108

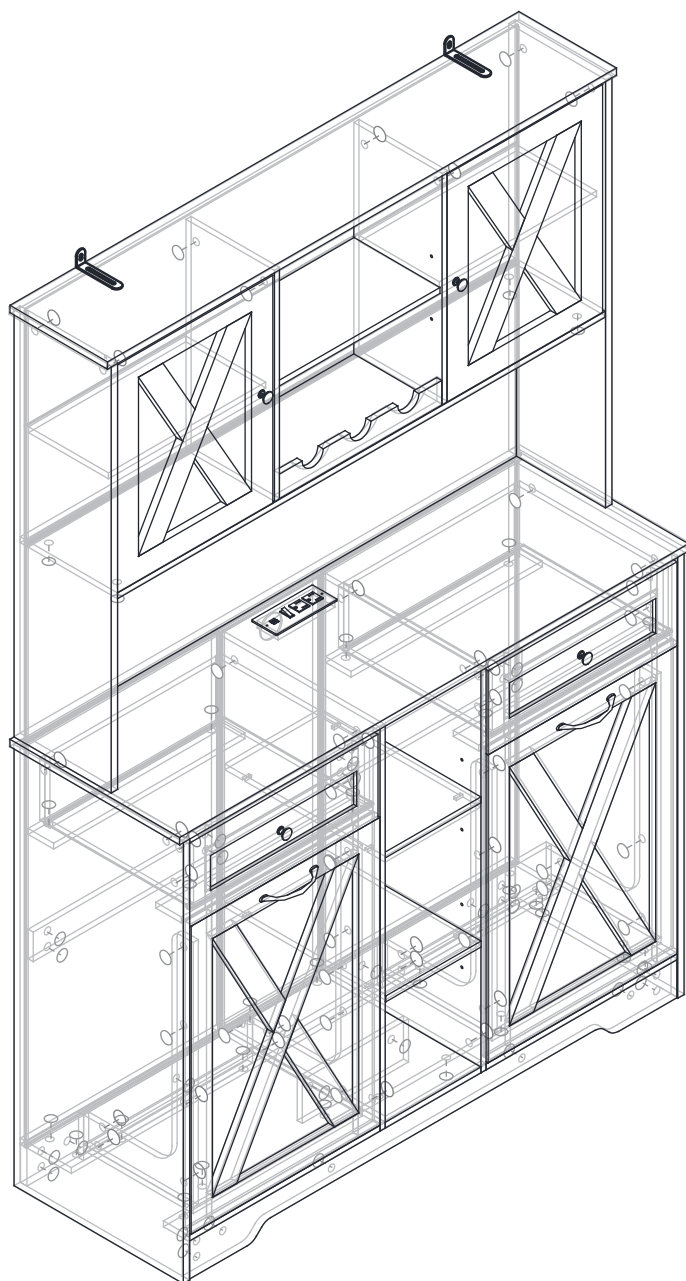

Kx108