

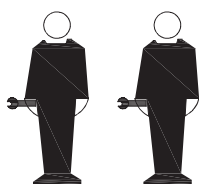



DJ0878 -N

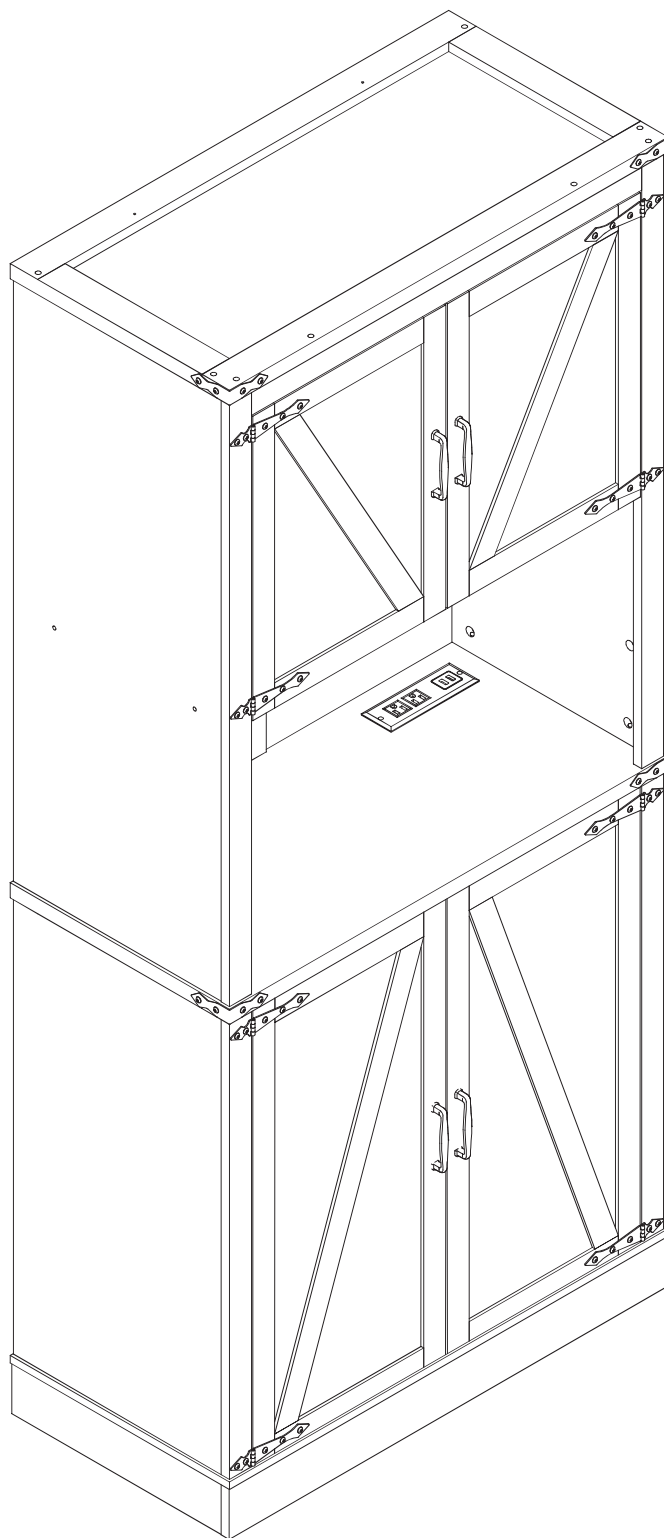


For convenience and safety, we recommend two people to assemble.
If you have any questions, please contact our customer service.

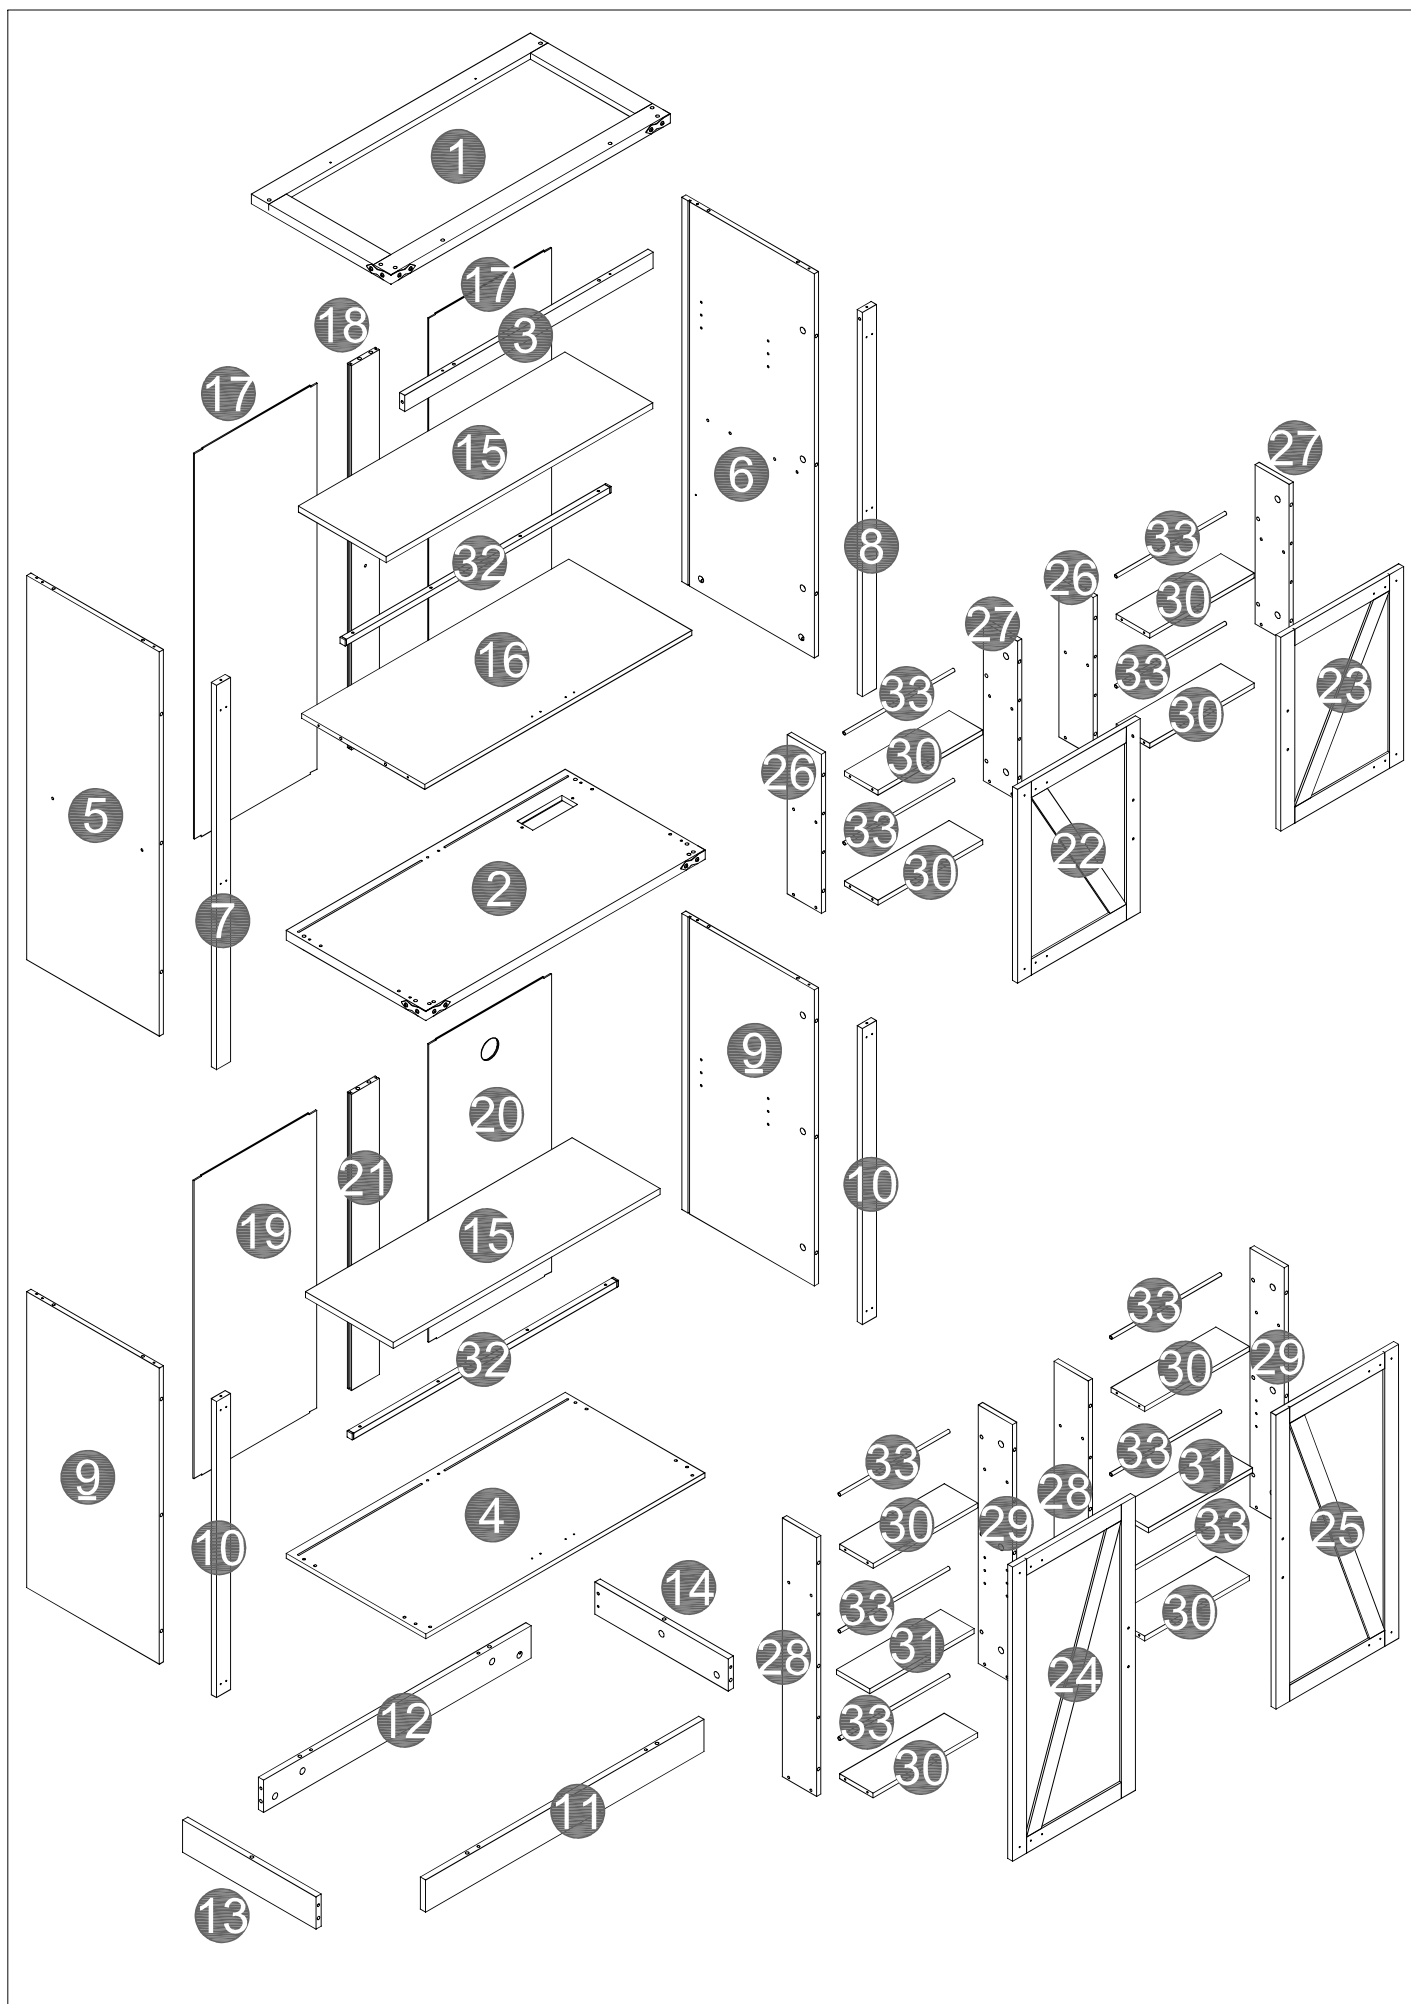


PARTS LIST

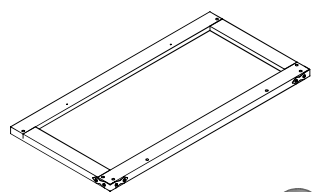


1X1

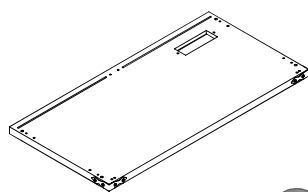


2X1

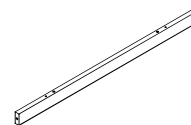


3X1

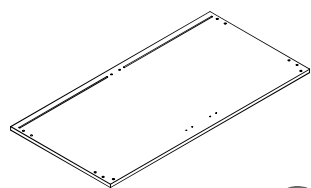

4X1



5X1




6X1



7X1




8X1




9X2




10X2

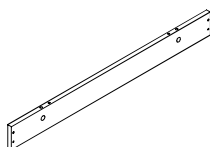


11X1

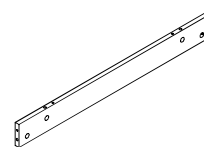


12X1




13X1




14X1

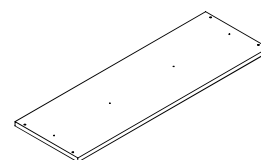

15X2

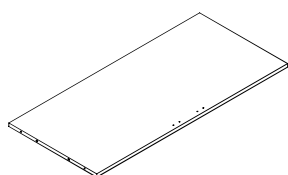

16X1



17X2



18X1

PARTS LIST




19X1




20X1




21X1




22X1




23X1




24X1



25X1




26X2



27X2




28X2




29X2




30X8




31X2

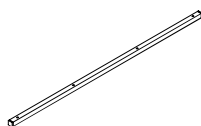




























32X2



33X10

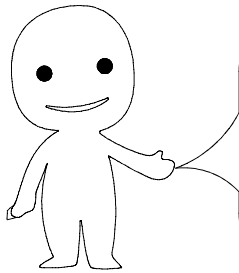

Please prepare the following tools

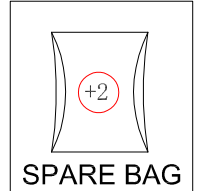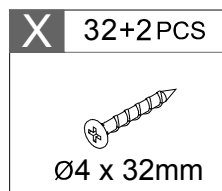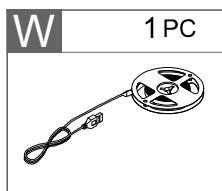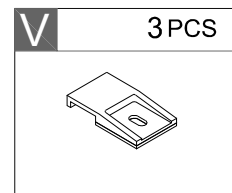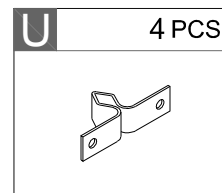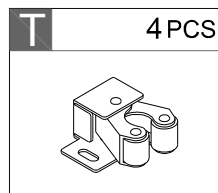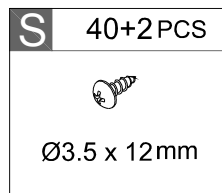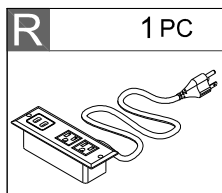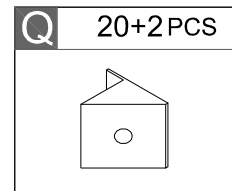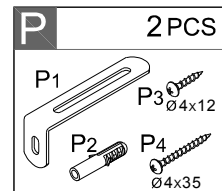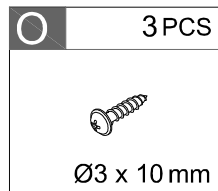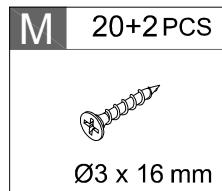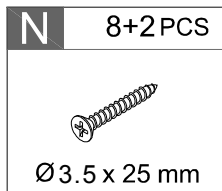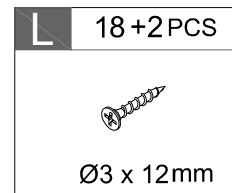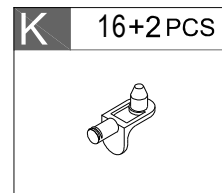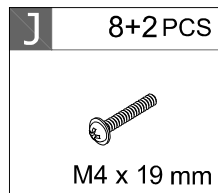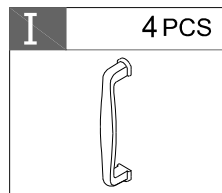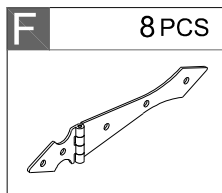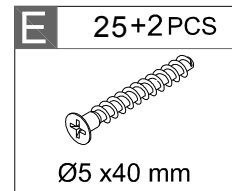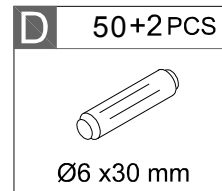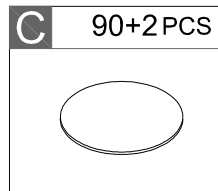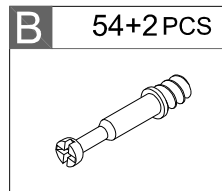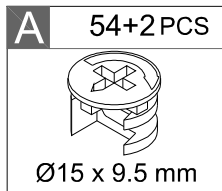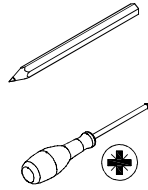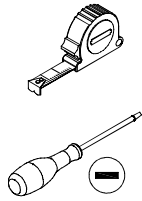

Tips: The number after "+" represents the spare hardware.

IMPORTANT NOTES:


The item you are purchasing is a large furniture product that requires a large number of components to assemble.

Please take all parts boxes out of the packaging and place them in order. So that you can follow the steps in the installation manual to find the corresponding parts box and quantity of need when installing. Please do not take too many parts to prevent the parts from scattering.



Please be patient and follow the instructions step by step for installation. If you have any problems during the installation process, you can ask our customer service to help you solve them!




SAFETY TIPS:

Static charge may cause dust on foam – clean with a dry or damp cloth. Small foam strands may be present – handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.



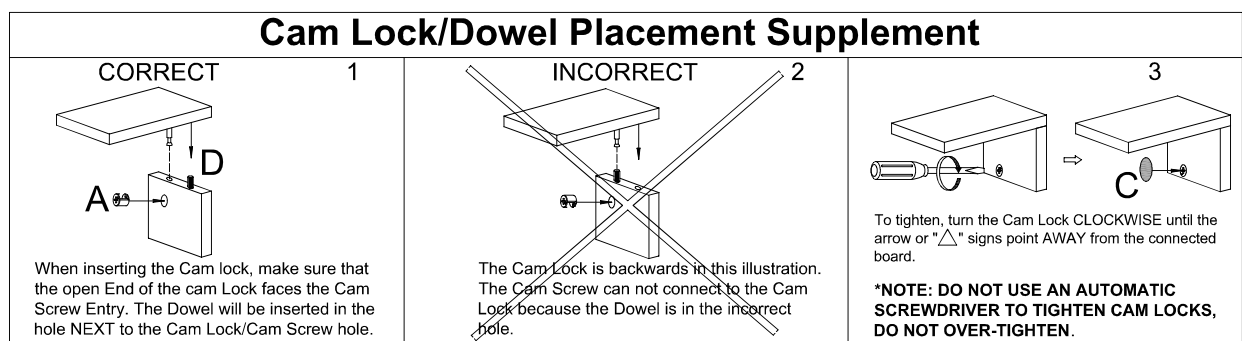



1

A	6 PCS	B	6 PCS
			

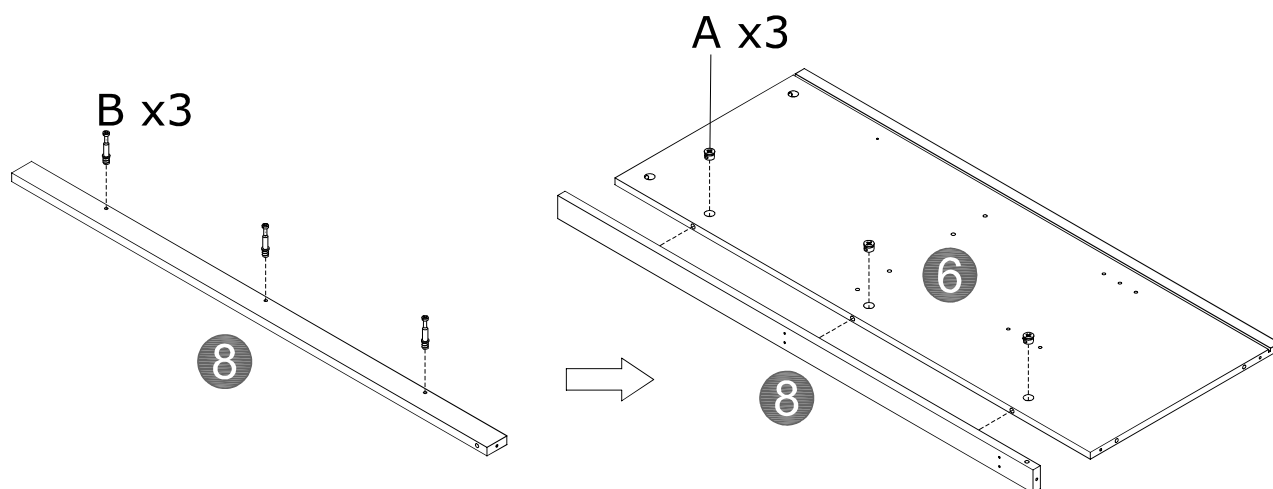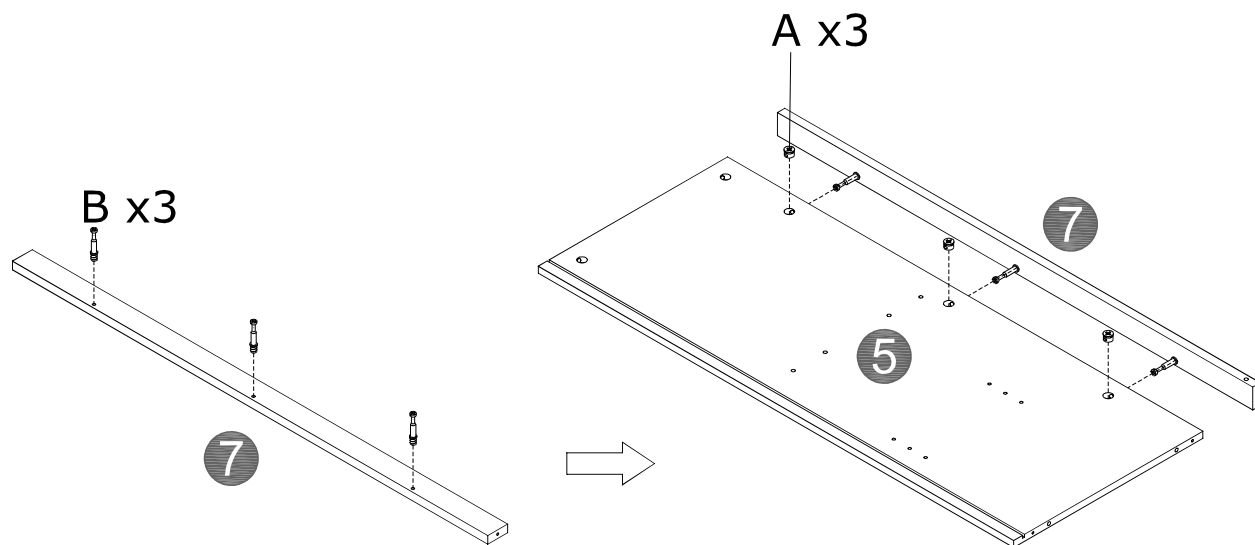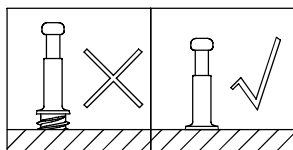

2

D	3 PCS	E	2 PCS	L	4 PCS	T	2 PCS
							

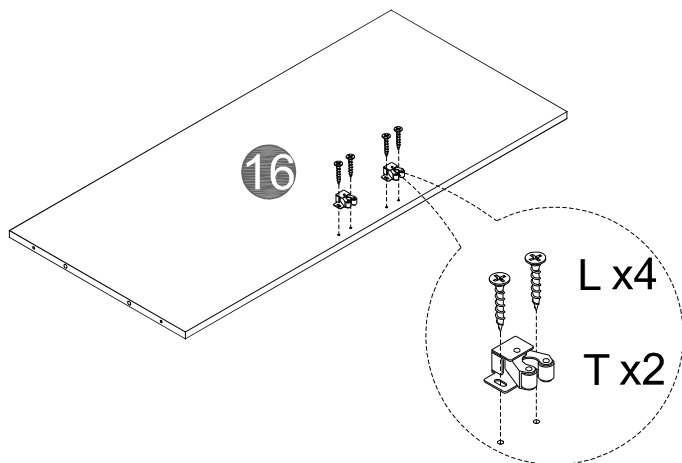


Align the screw with the pilot hole, then tighten it.








First, insert wooden dowel D into the designated side hole, followed by the installation of other components.

Note: Here is a hole.


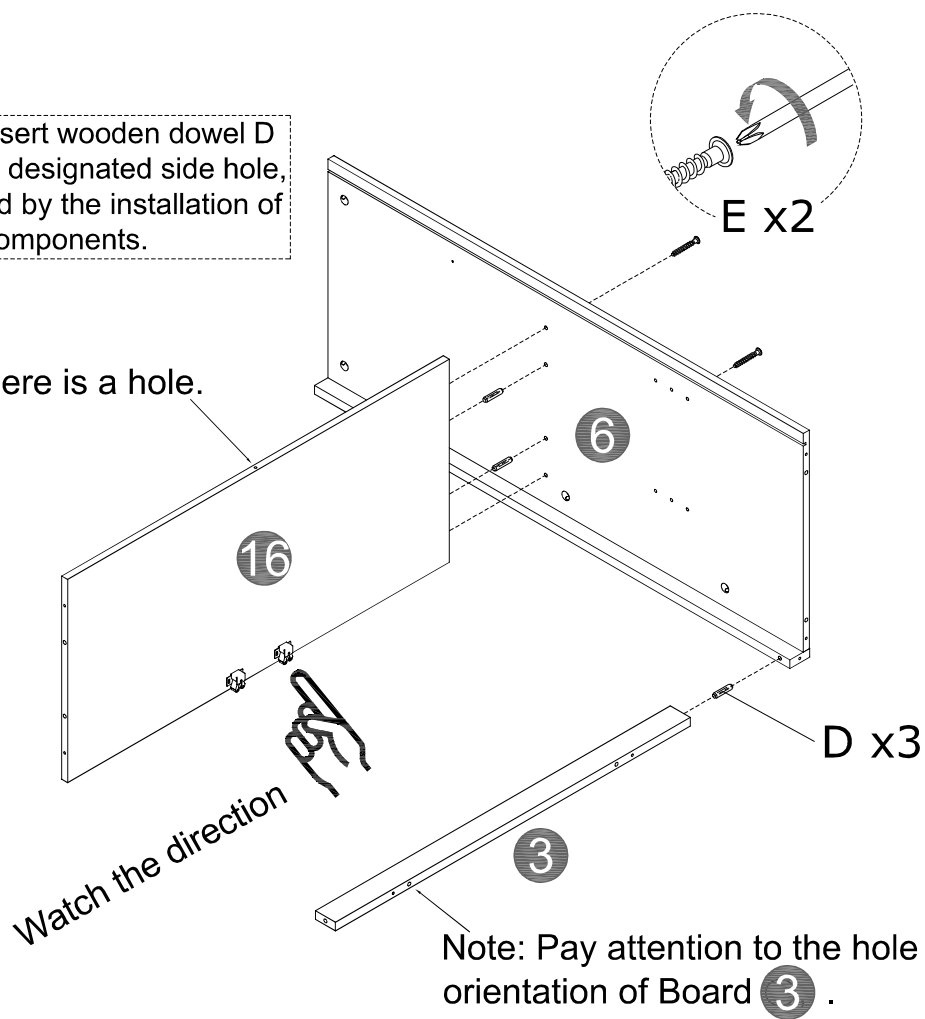



3

B	2 PCS	D	3 PCS	E	2 PCS
					

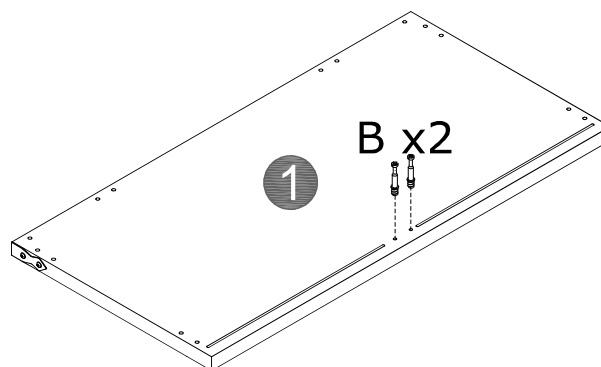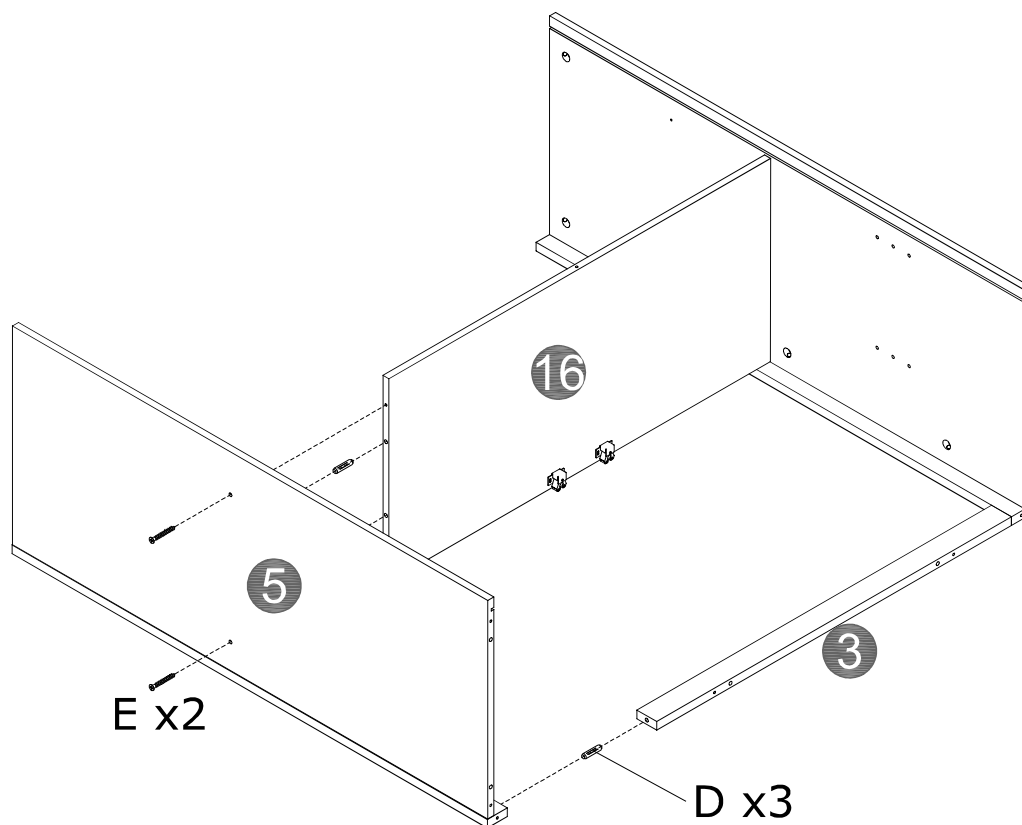

4



D	6 PCS	E	8 PCS
			

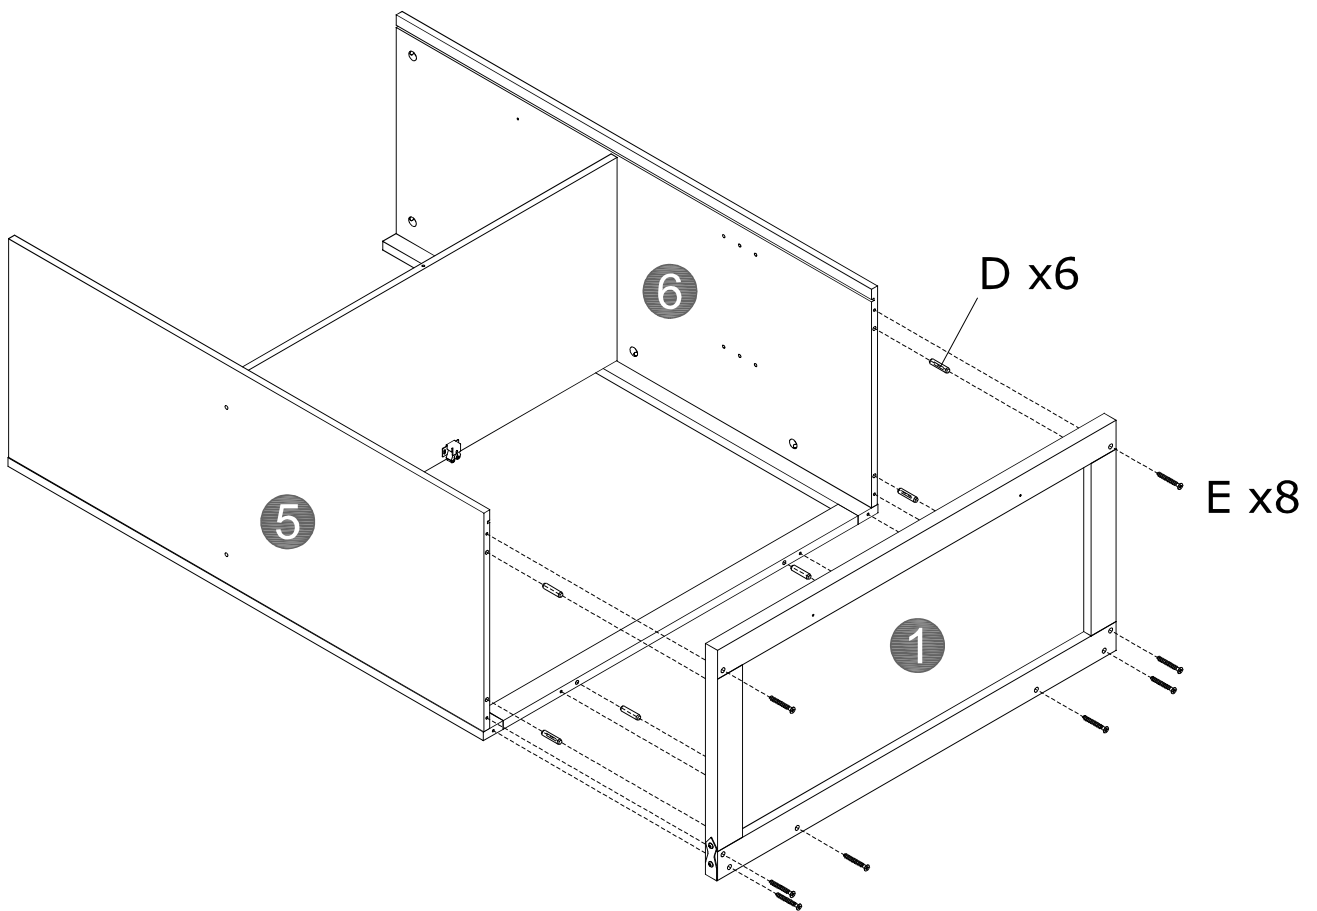


Watch out for the direction of the board pieces and align them accurately with the holes.

5

W	1 PC	V	3 PCS	O	3 PCS

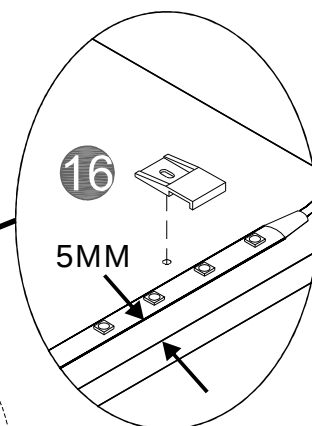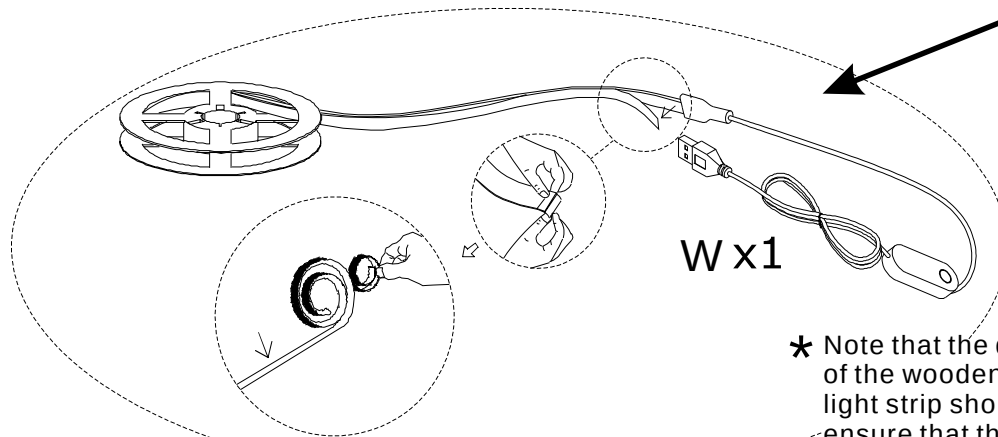


✱ Note that the distance between the edge of the wooden board and the attached light strip should be 5 millimeters to ensure that the light strip is within the range of the snap fastener.

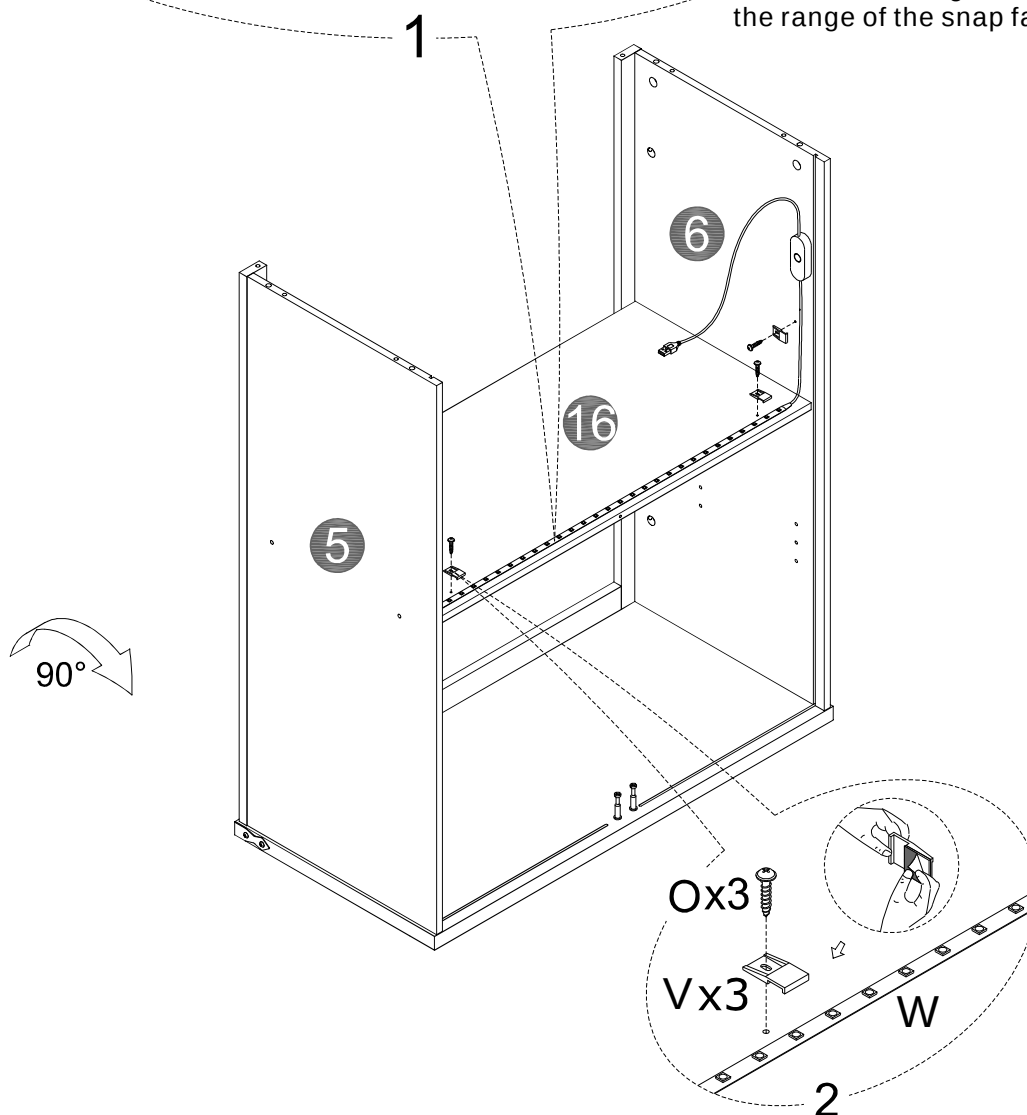




A	2 PCS	E	1 PCS

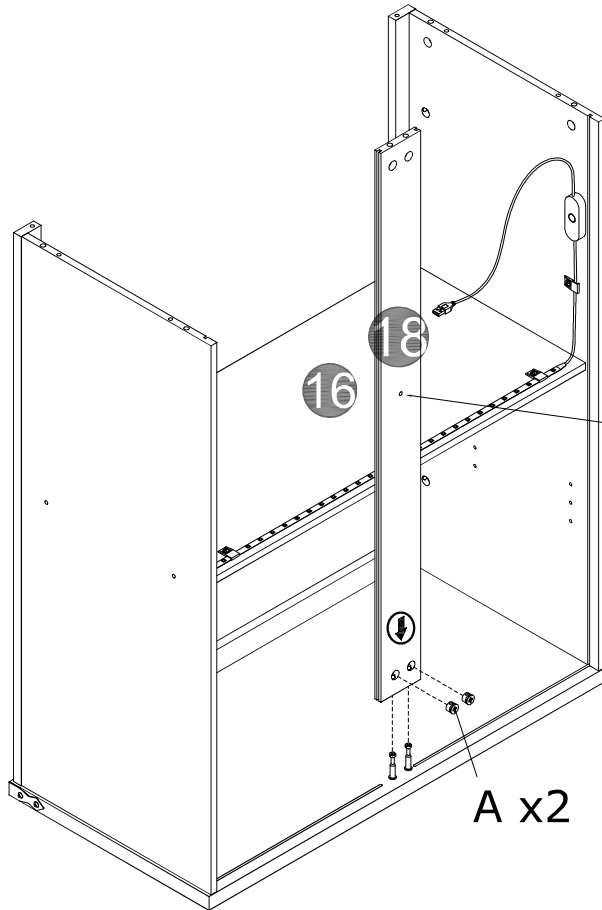

Note: The hole positions on Board 18 correspond to those on Board 16.

A x2

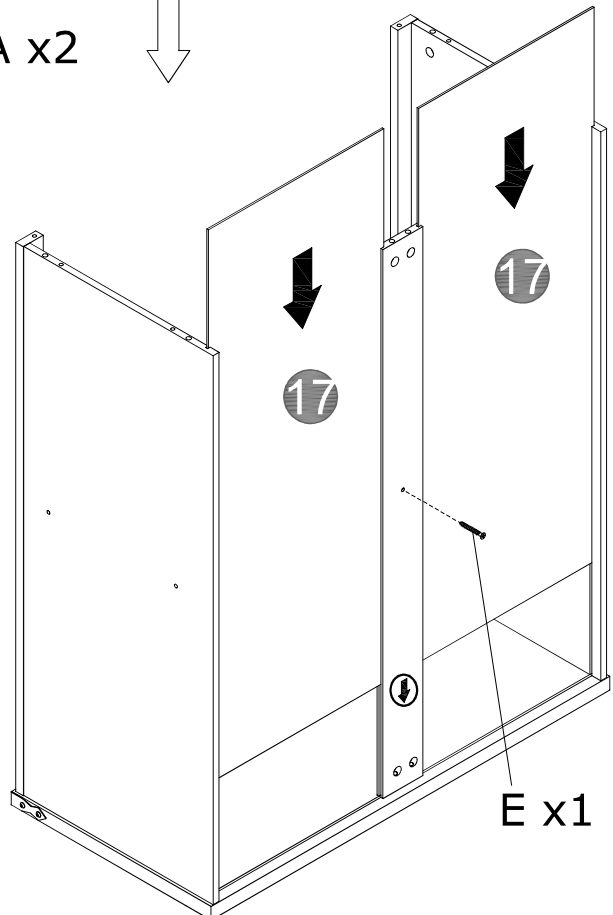




E x1






Ensure the back board is inserted into the slot.





A	6 PCS	B	8 PCS

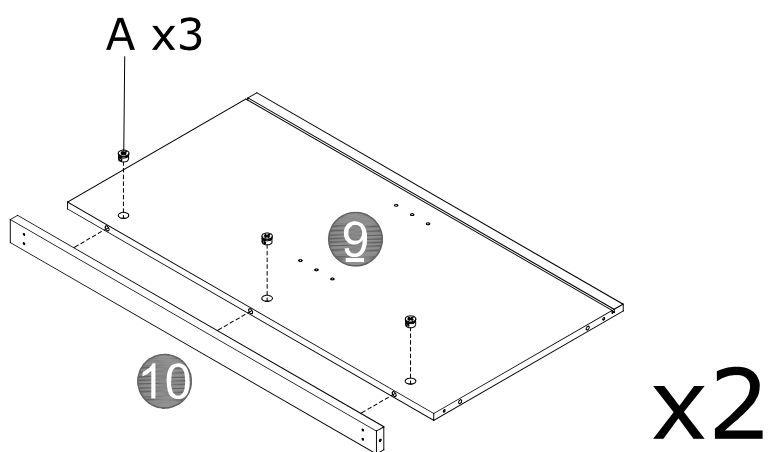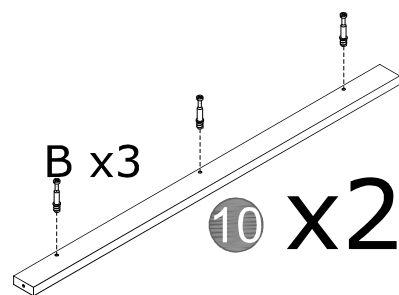
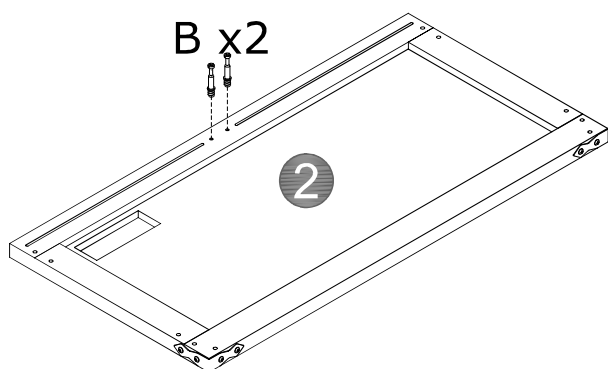





A	2 PCS	D	4 PCS	E	6 PCS
					

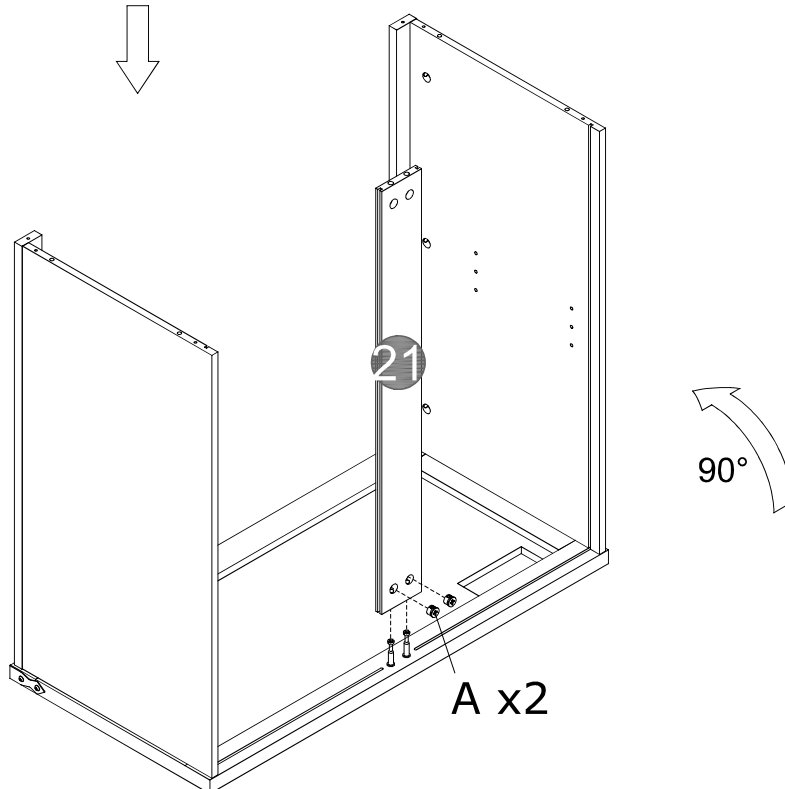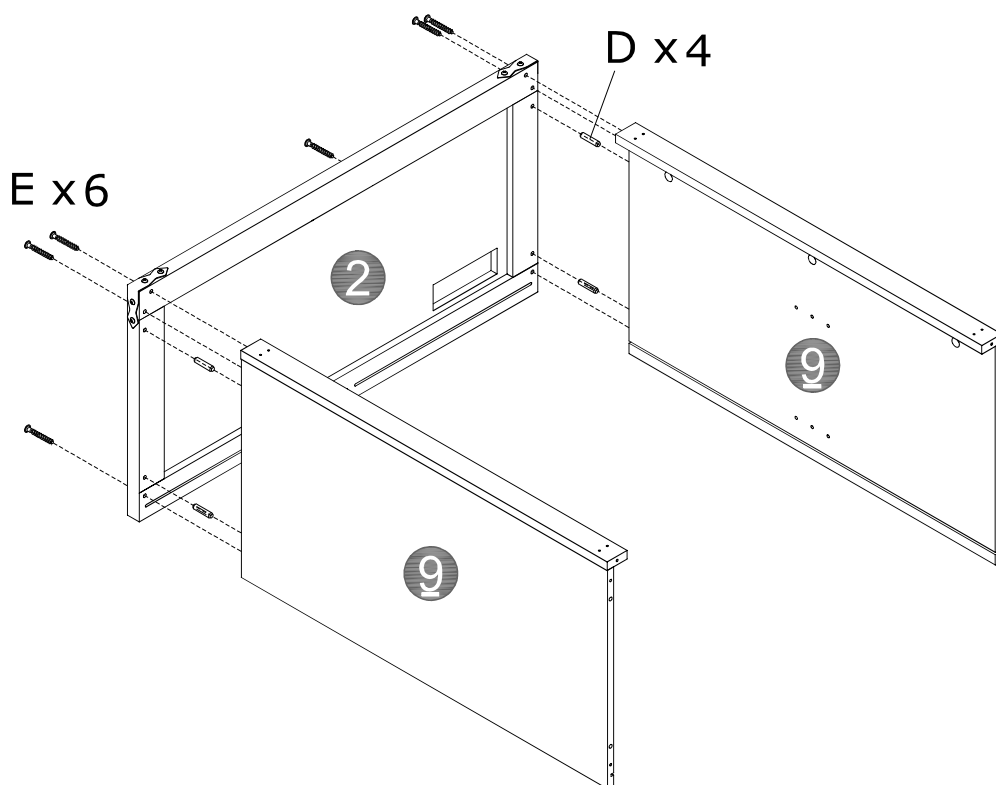




B	2 PCS	L	4 PCS	T	2 PCS
					




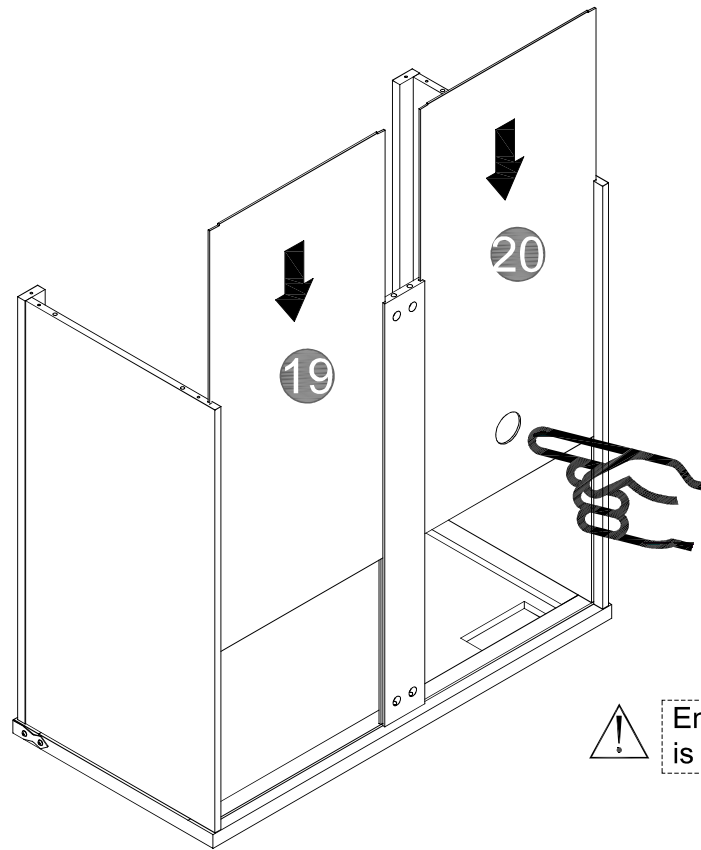



Ensure the back board is inserted into the slot.

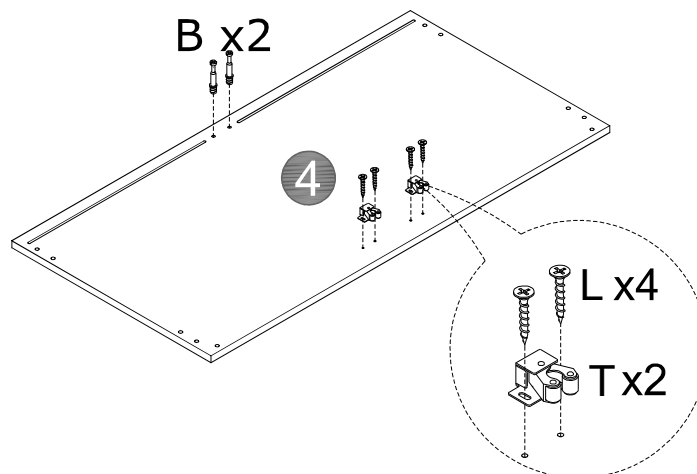


Align the screw with the pilot hole, then tighten it.

10




A	2 PCS	B	6 PCS	D	4 PCS	E	6 PCS
							




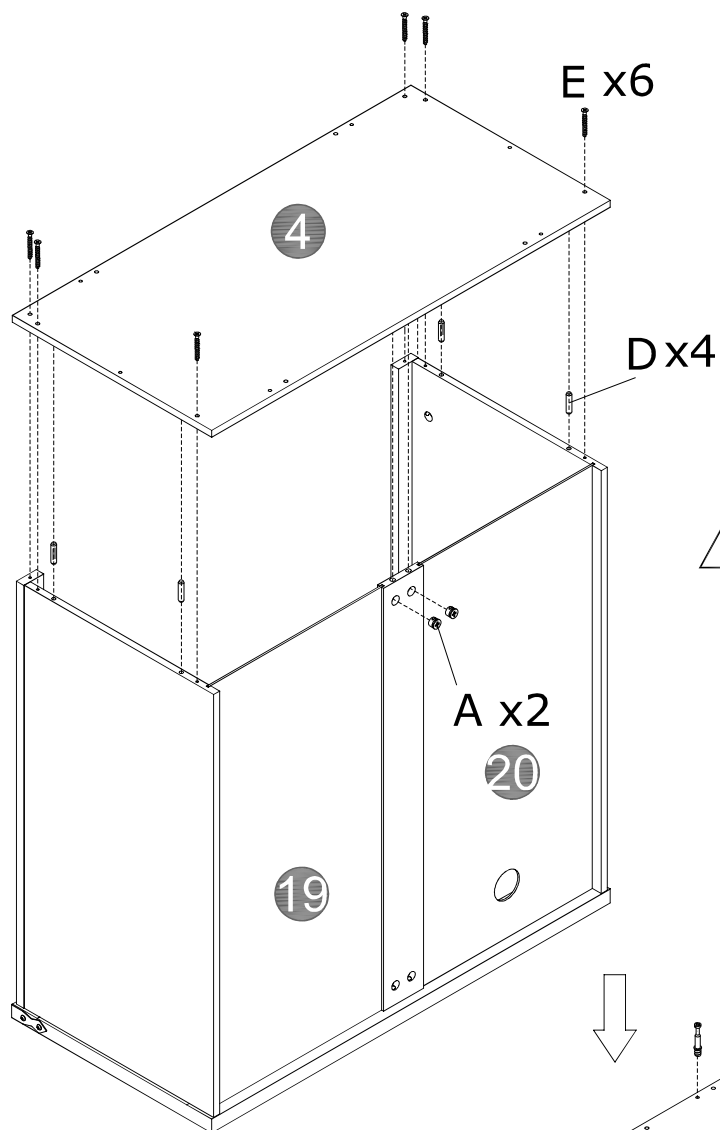


Ensure the back board is inserted into all four slots, then tighten the screws.

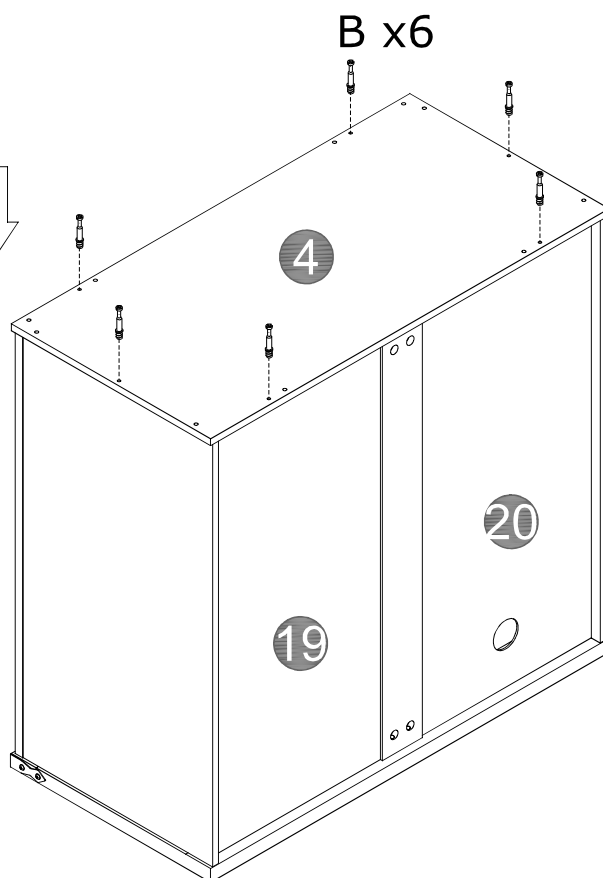


1 1



A	4 PCS	B	4 PCS	D	4 PCS
					

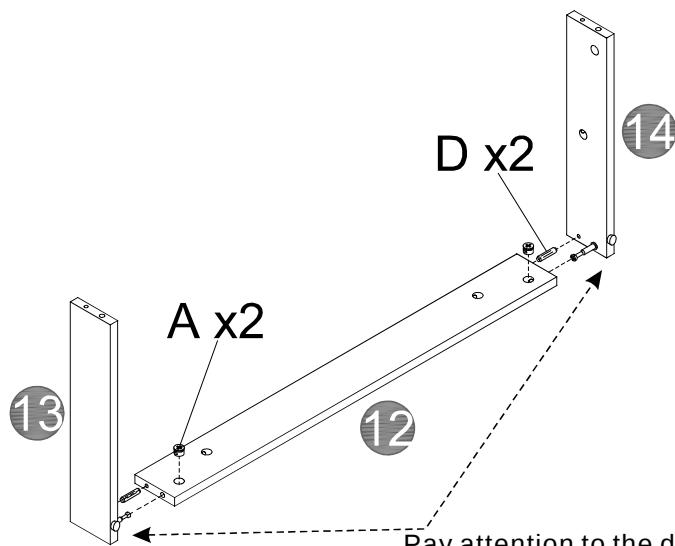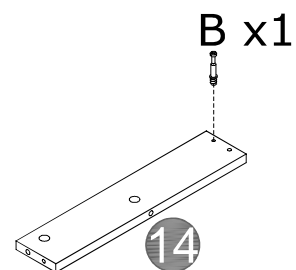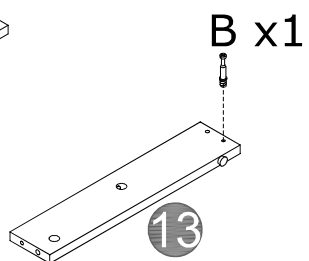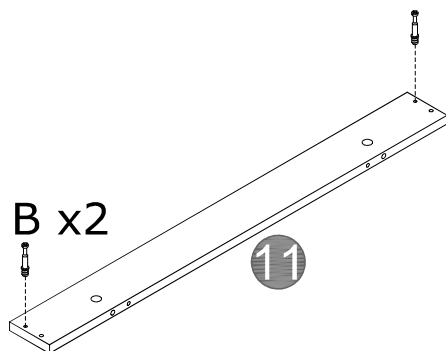


Pay attention to the direction of the foot nails.

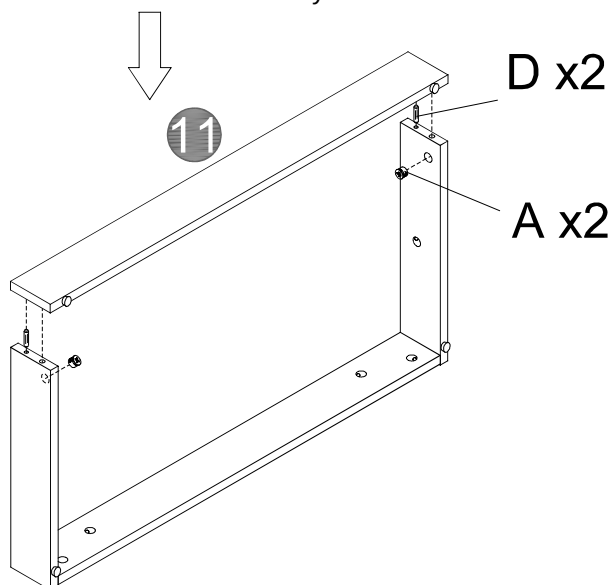



12

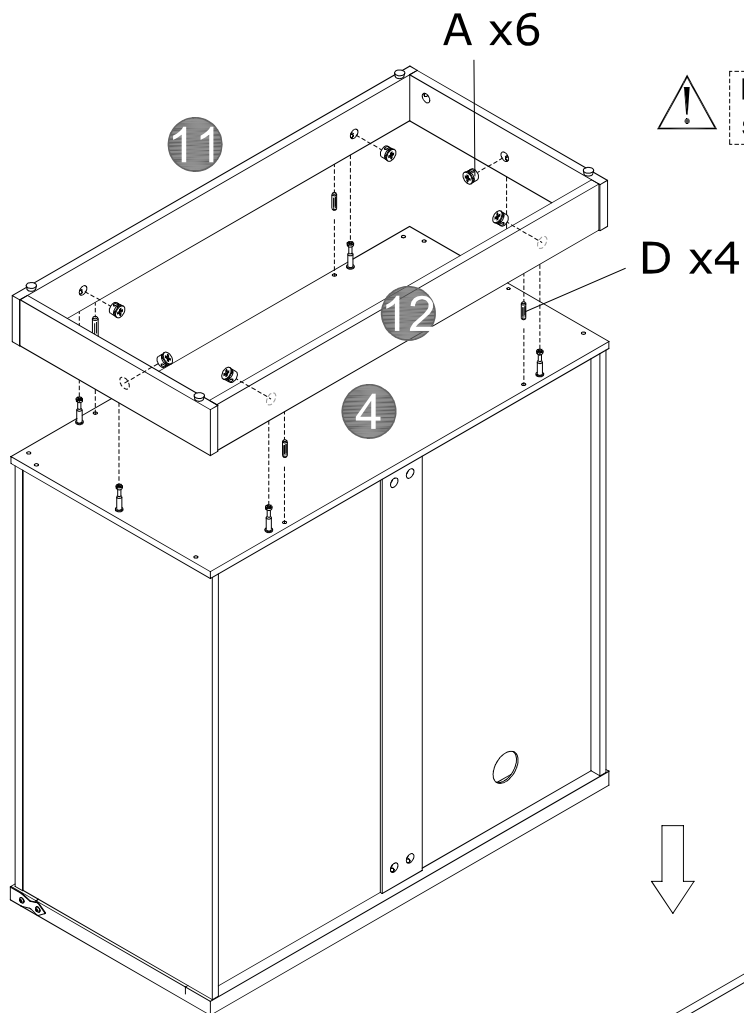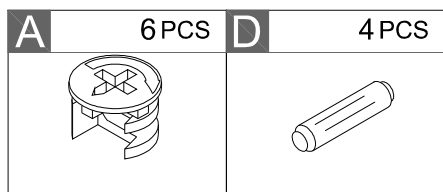


Note the front and rear sides of the bottom frame.



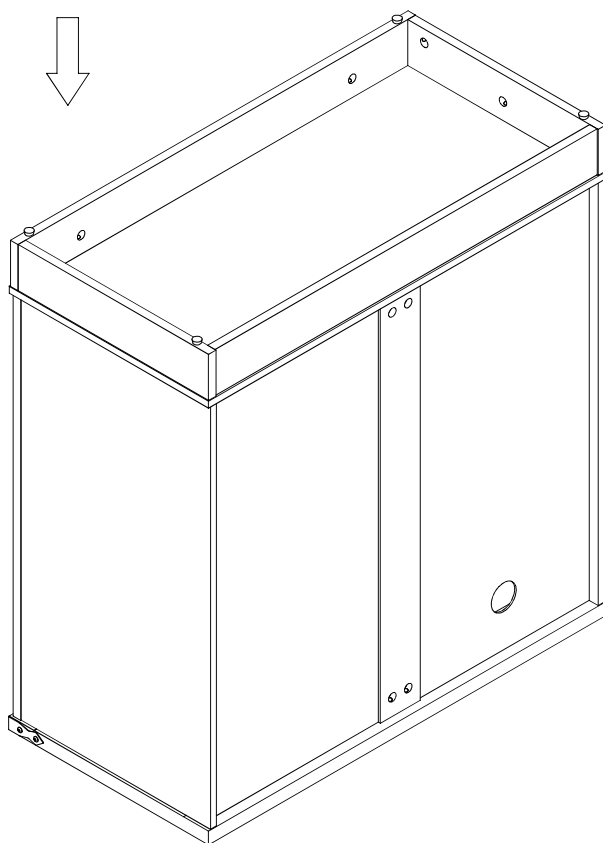


13


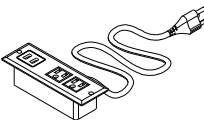
B	6 PCS	R	1 PC	L	2 PCS
					

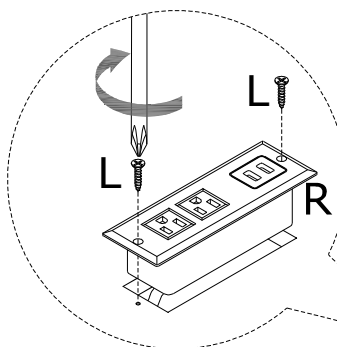

Align the screw with the pilot hole, then tighten it.

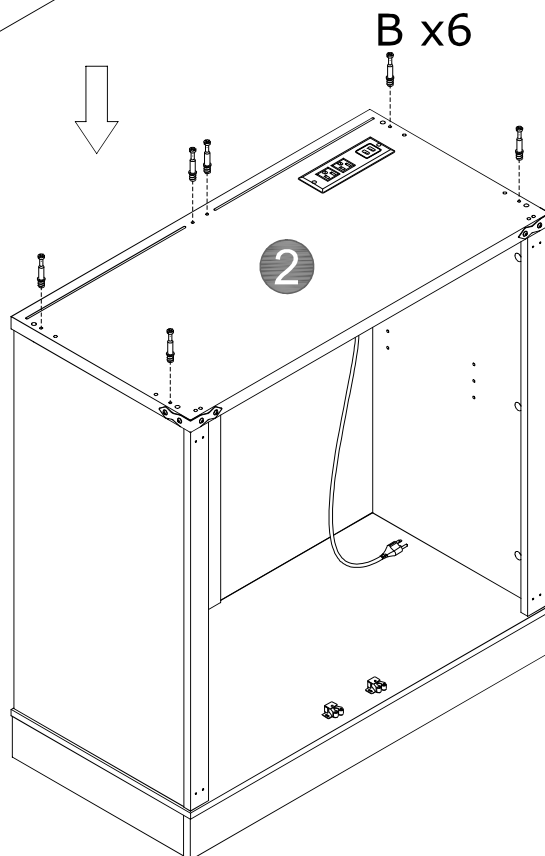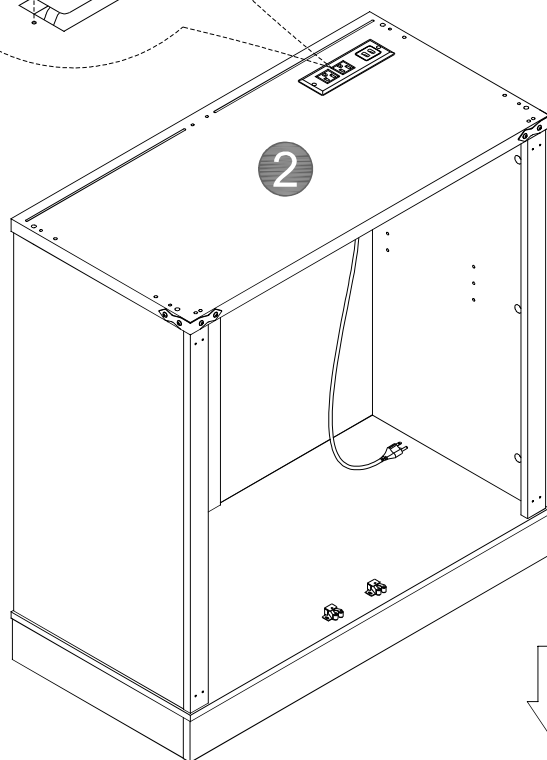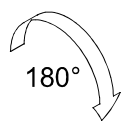


14

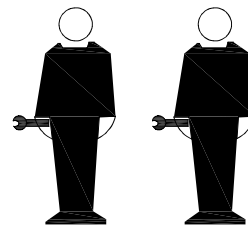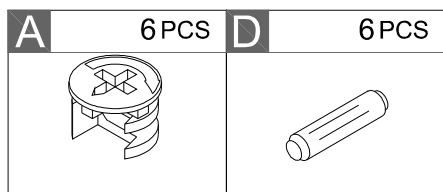

This step is difficult to install.
Note: Make sure that board **17** is inserted into the groove of board **2** and then fasten A.

This step requires two people to complete

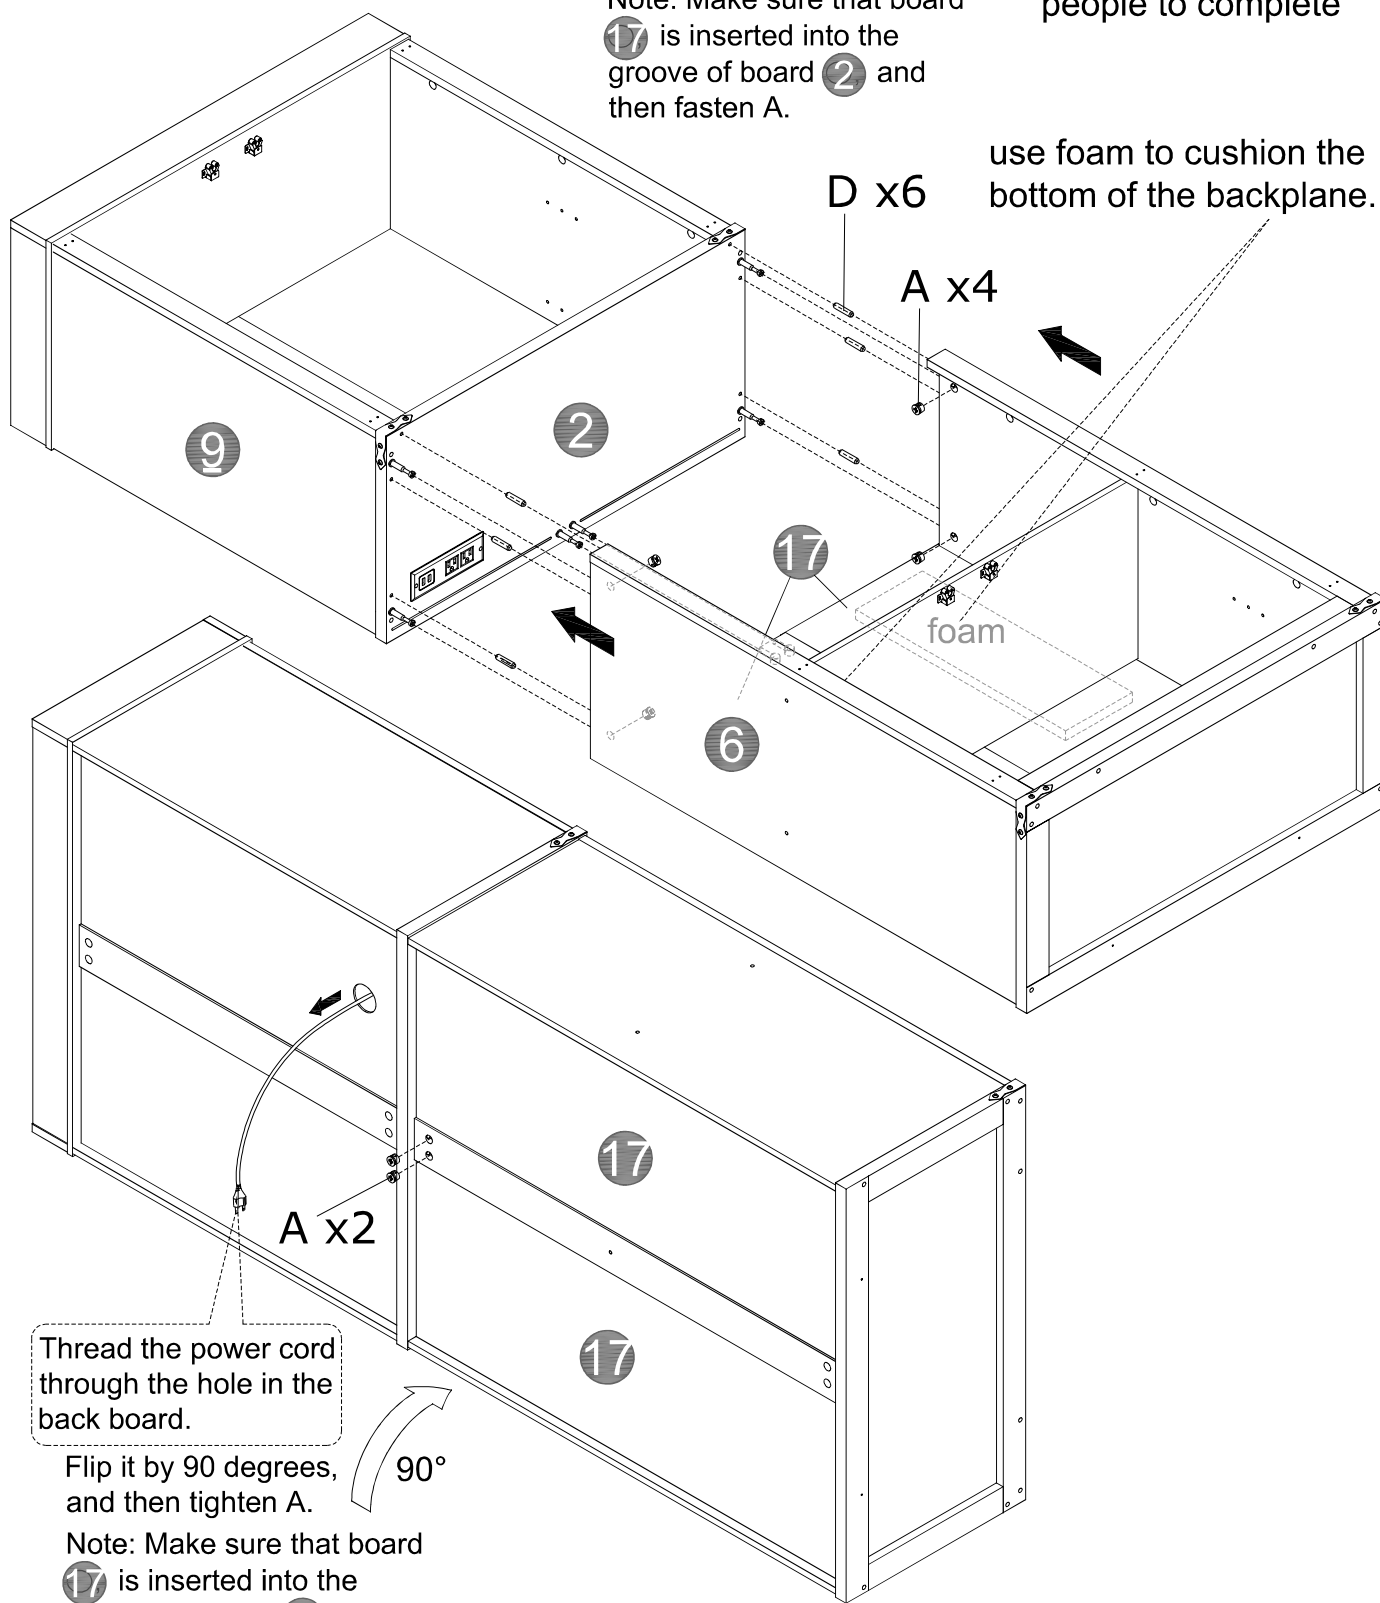

use foam to cushion the bottom of the backplane.

Thread the power cord through the hole in the back board.




Flip it by 90 degrees, and then tighten A.

Note: Make sure that board **17** is inserted into the groove of board **2** and then fasten A.




15

K	8 PCS	N	8 PCS
			

Align the screw with the pilot hole, then tighten it.

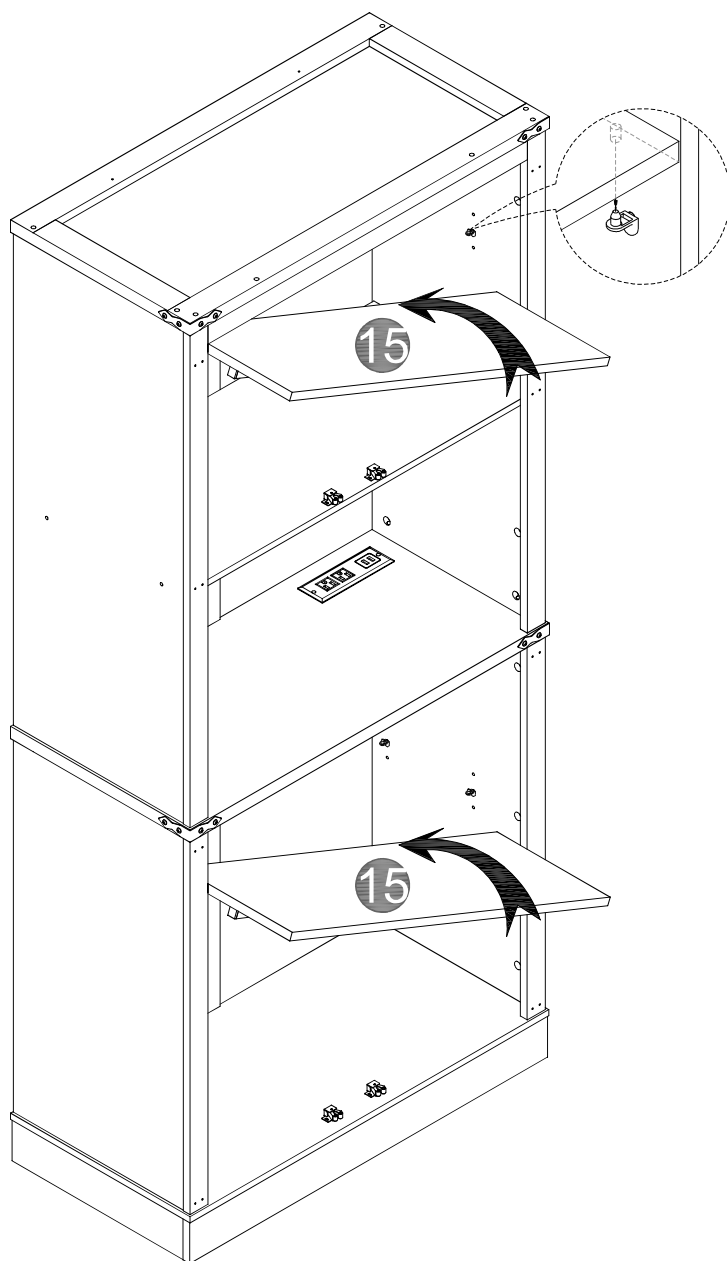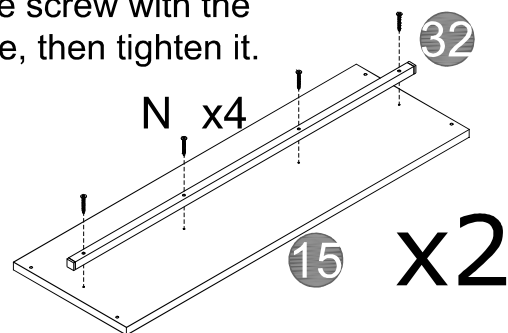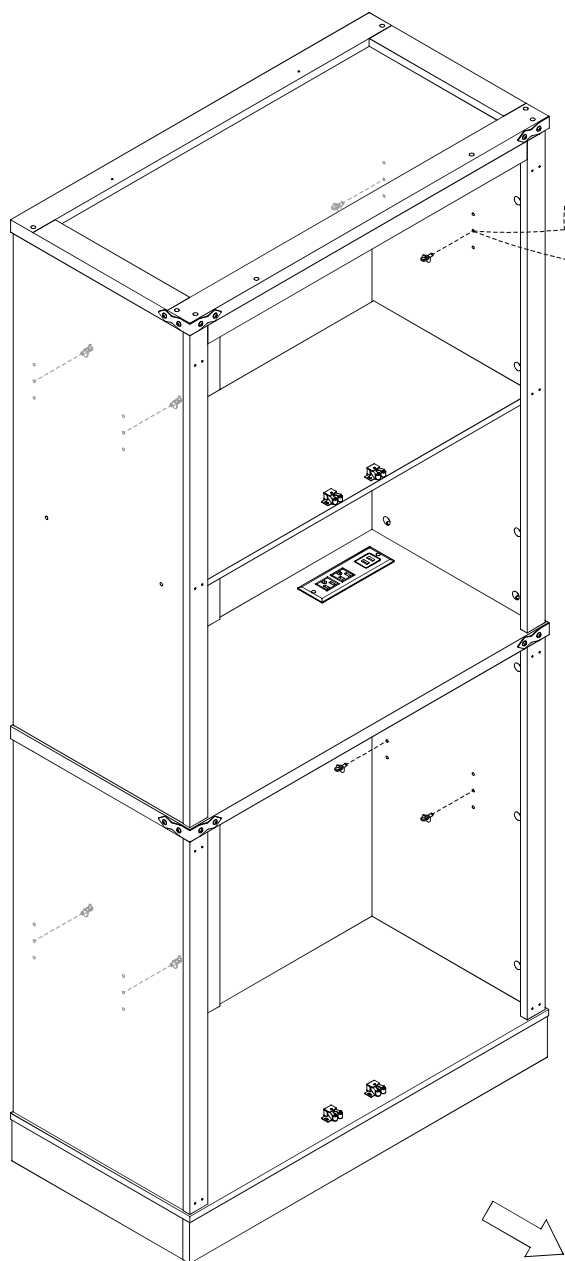


16




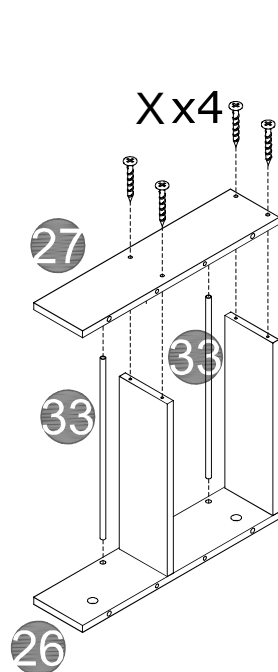
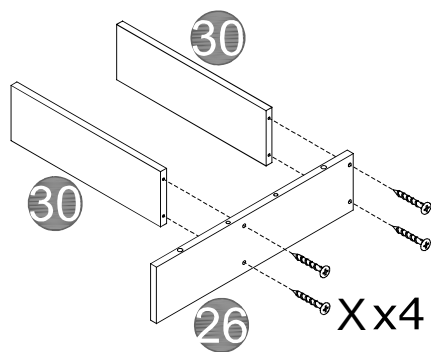
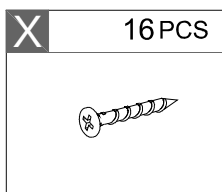


Ensure that the iron pipe is inserted into the holes of the upper and lower boards, then tighten the screws.



x2

17


B	8 PCS	I	2 PCS	J	4 PCS	L	4 PCS	U	2 PCS
									

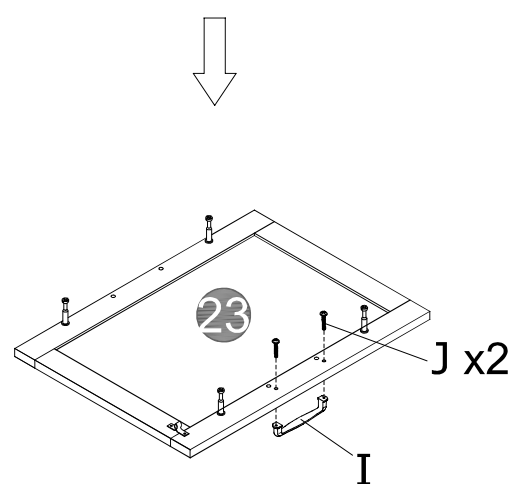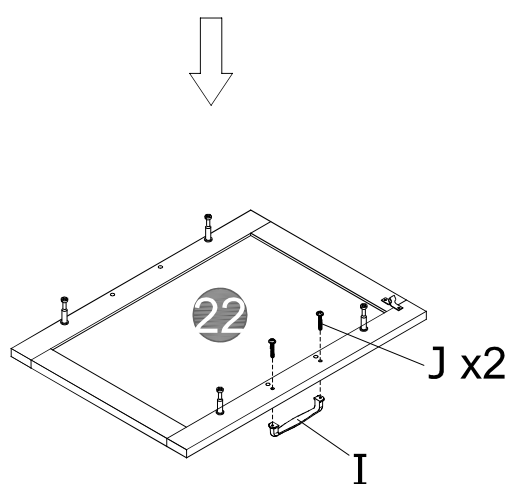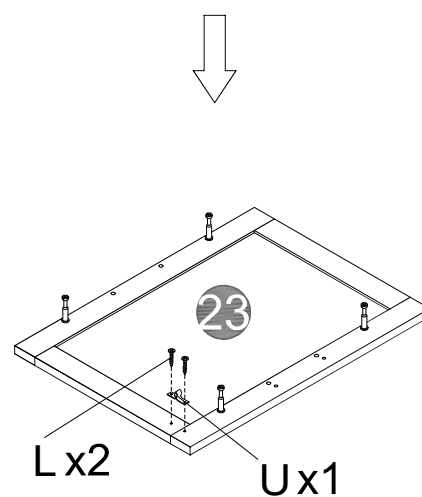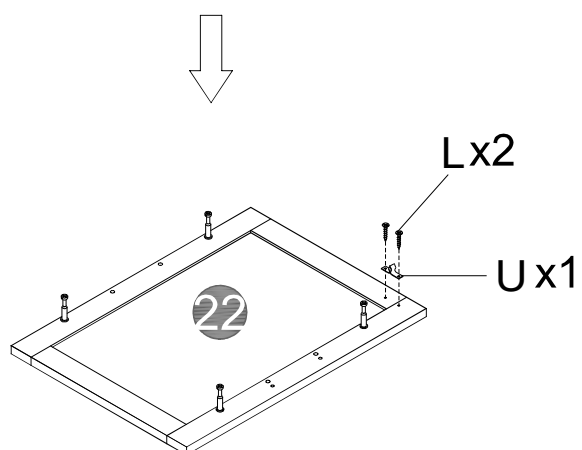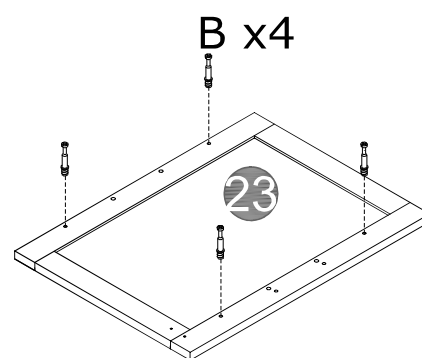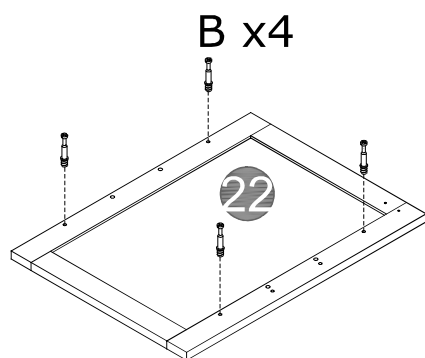


18

A	8 PCS	D	8 PCS
			




Note: Board 27 and the door board handle must be on the same side.

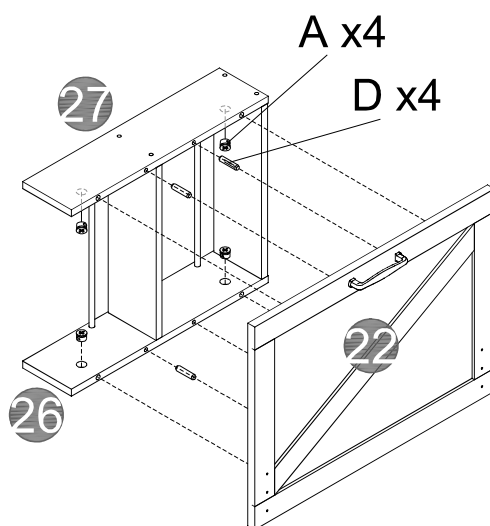

Note: Board 26 and the door board handle must be on the same side.

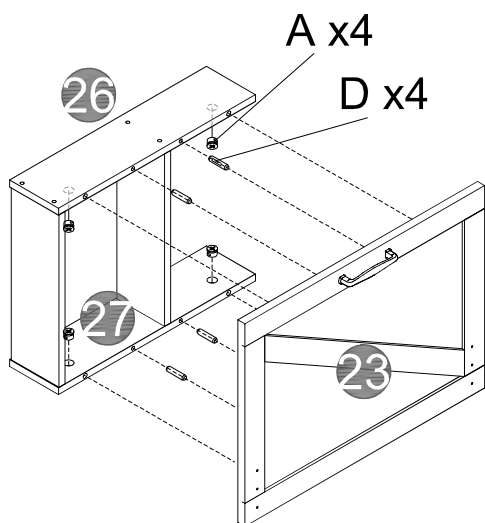


19




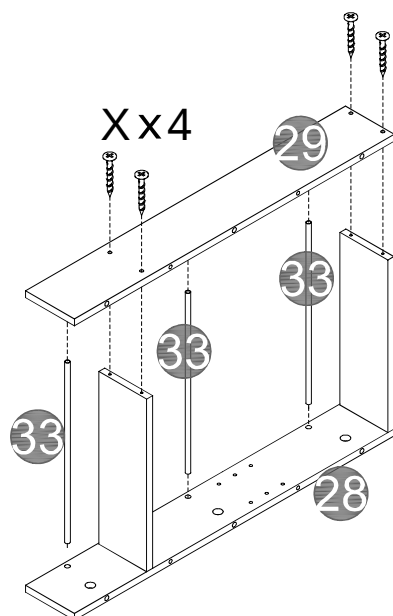
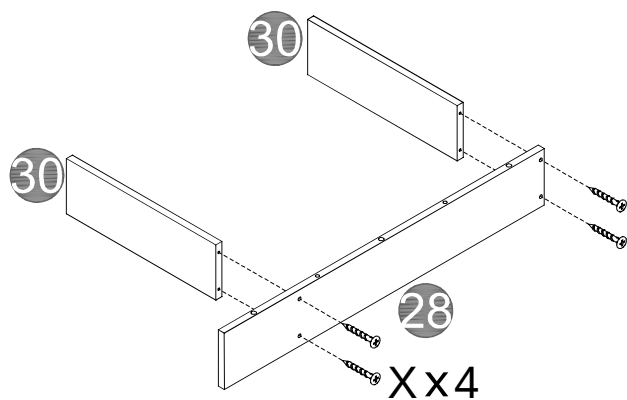
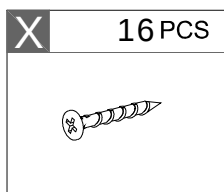


Ensure that the iron pipe is inserted into the holes of the upper and lower boards, then tighten the screws.



x2

20


B	12 PCS	I	2 PCS	J	4 PCS	L	4 PCS	U	2 PCS
									

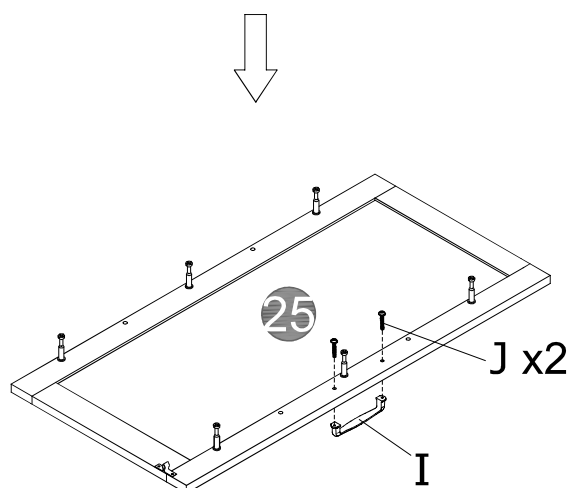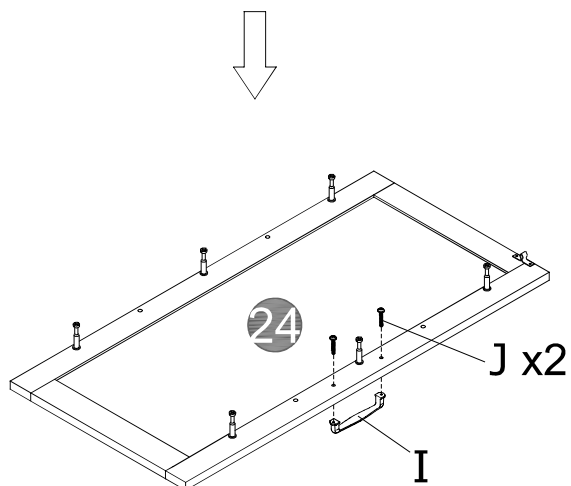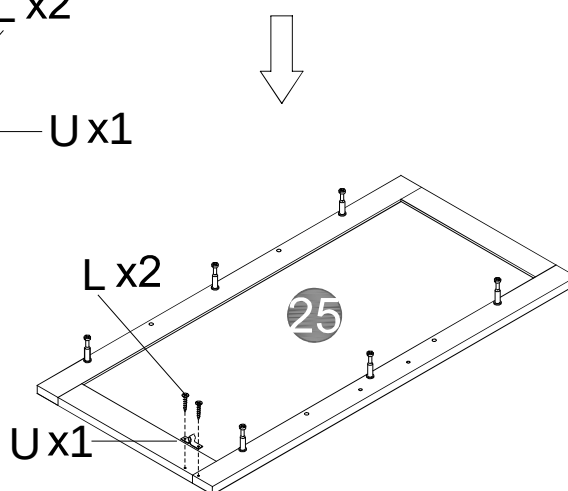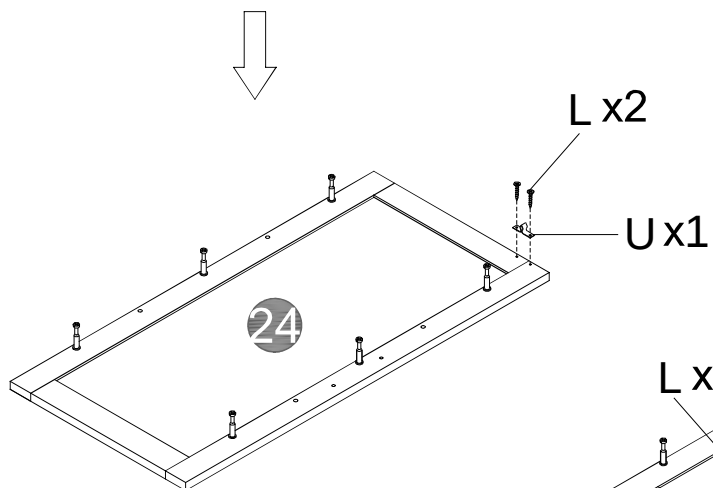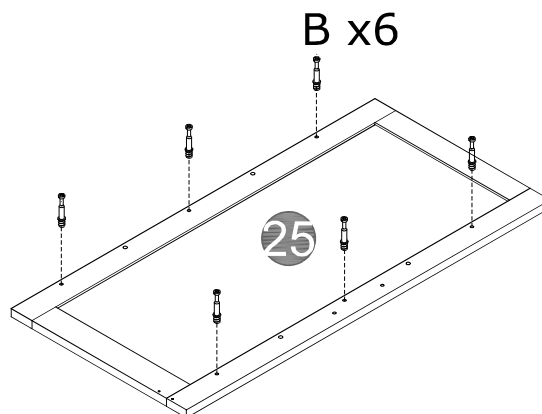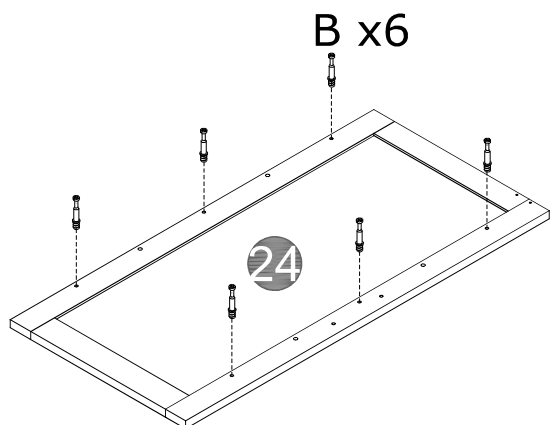


21

A	12 PCS	D	8 PCS
			

Note: Board 29 and the door board handle must be on the same side.

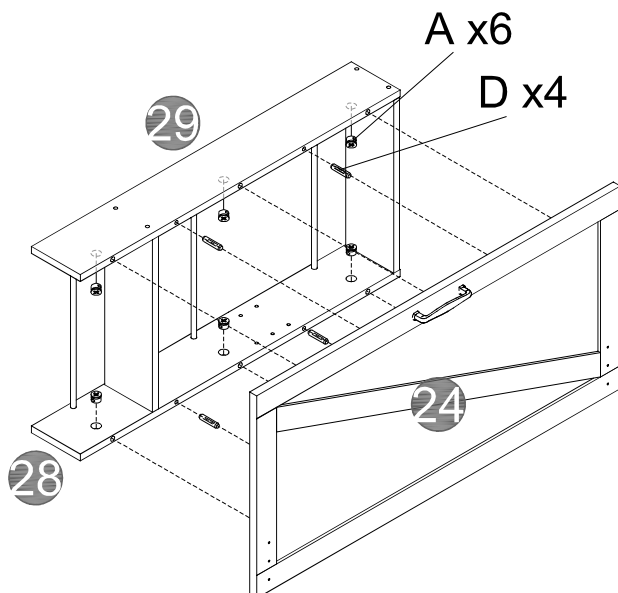

Note: Board 28 and the door board handle must be on the same side.




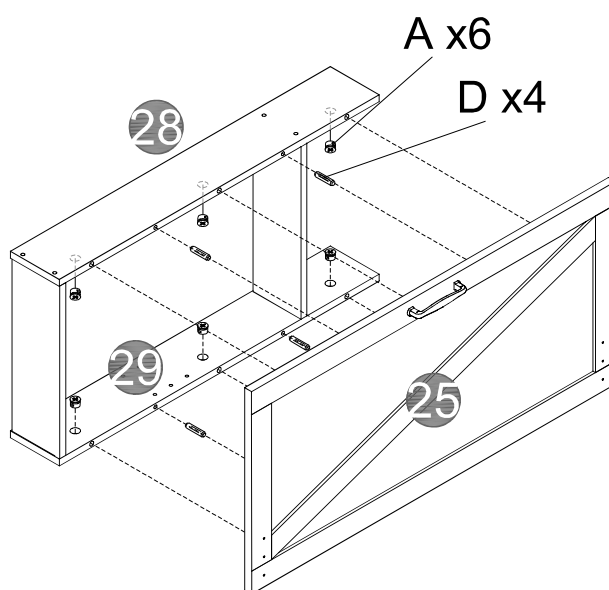


22



F	8 PCS	S	24 PCS

Align the screw with the pilot hole, then tighten it.



*NOTE:Hinge axis facing outward

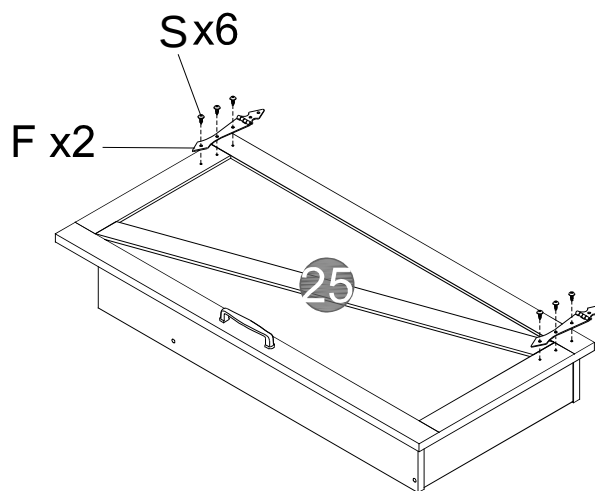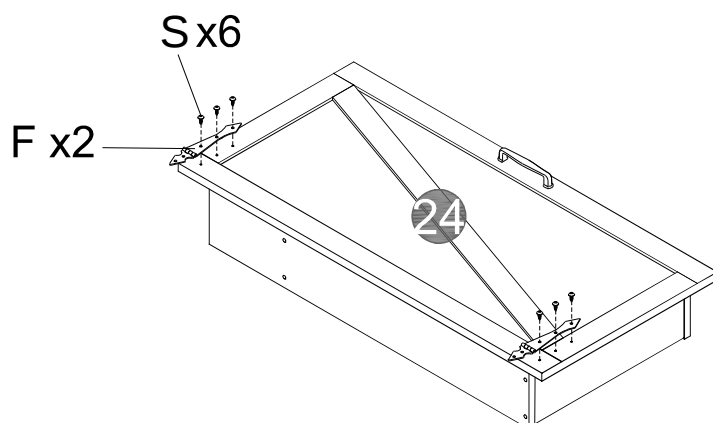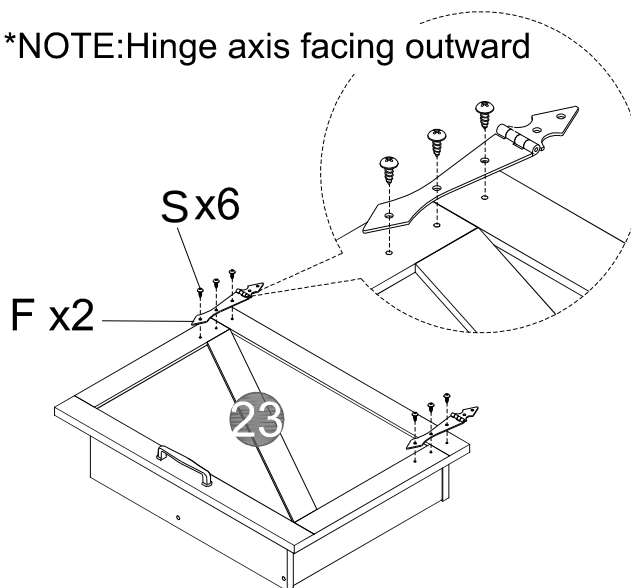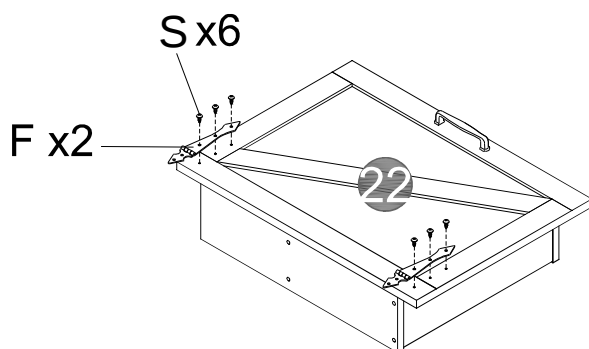

23


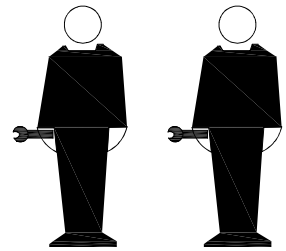
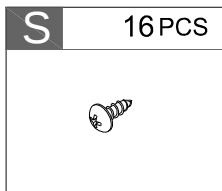


This step requires two people to complete

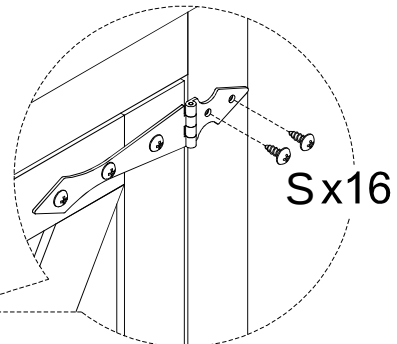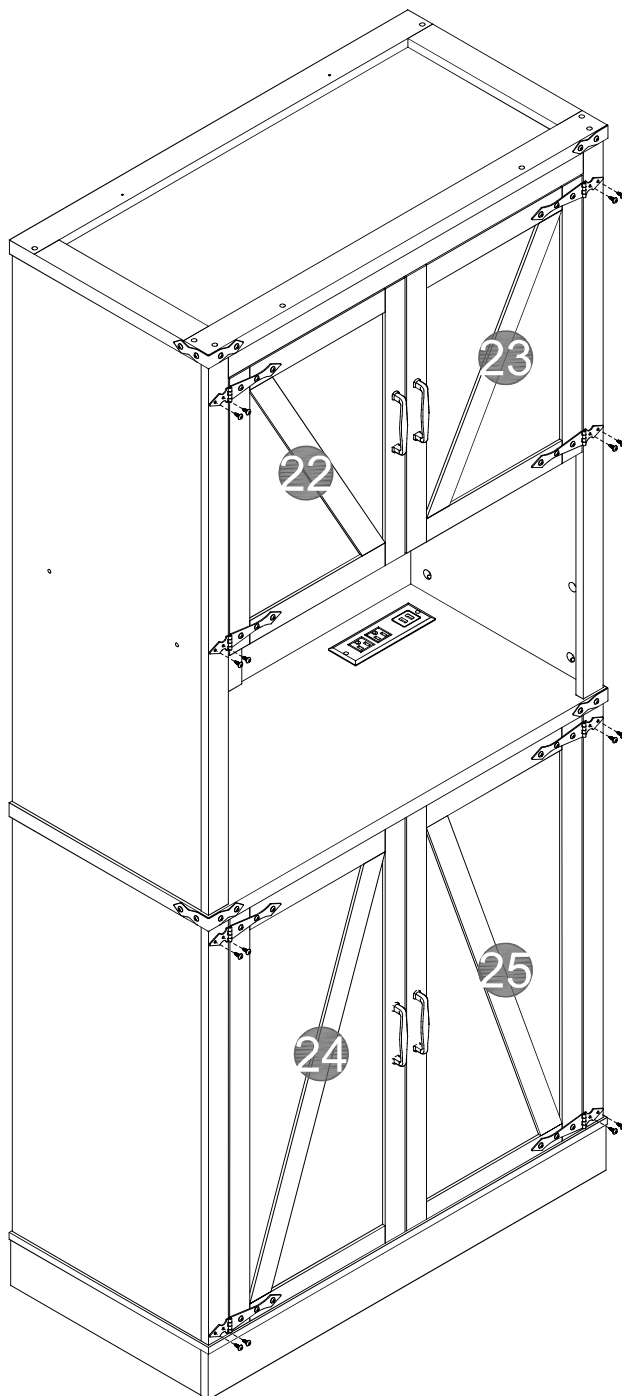


Align the screw with the pilot hole, then tighten it.


24

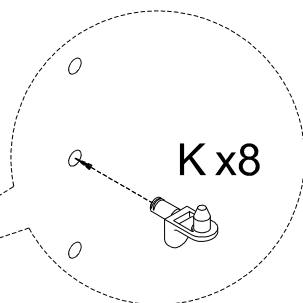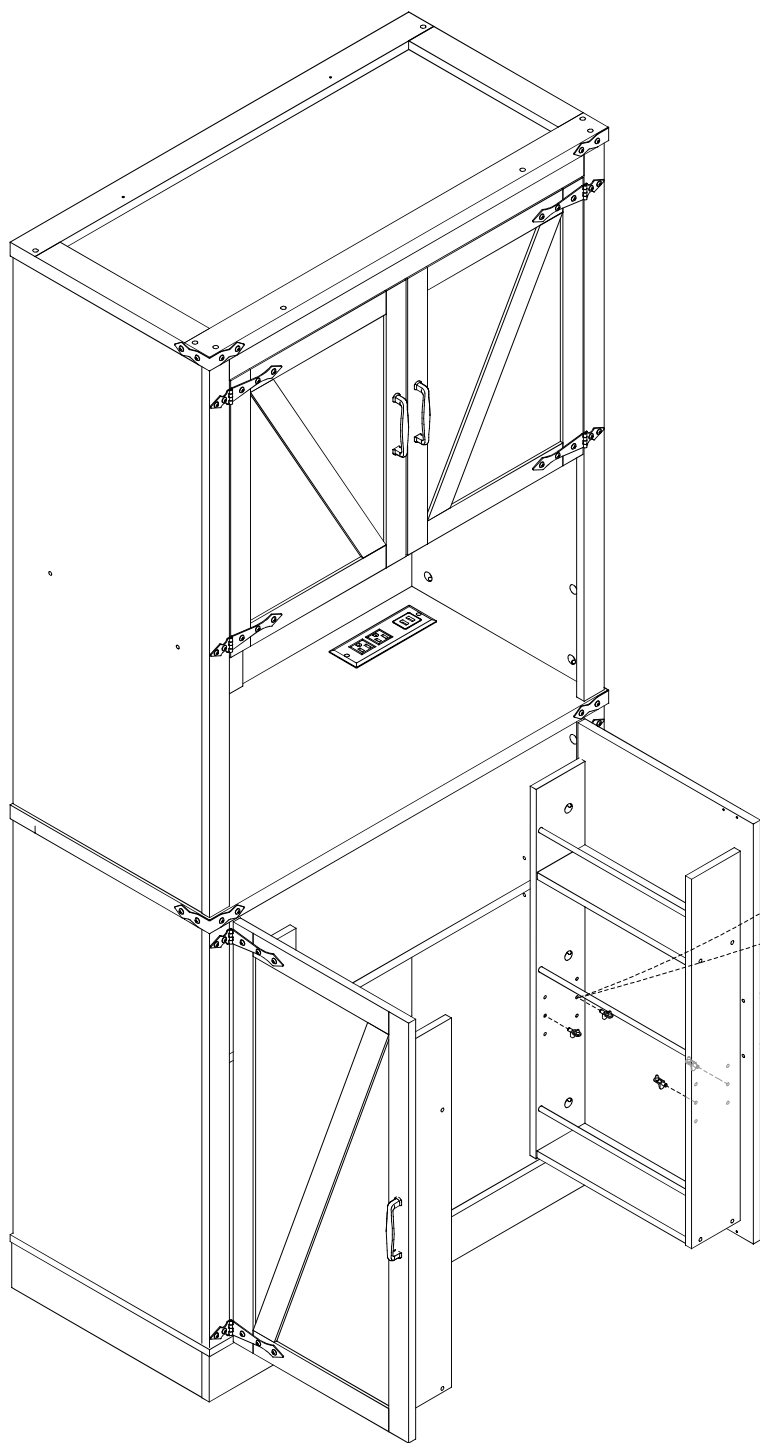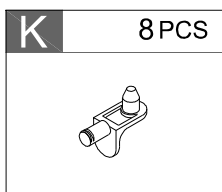

Open the door beneath
and install the shelf pins.

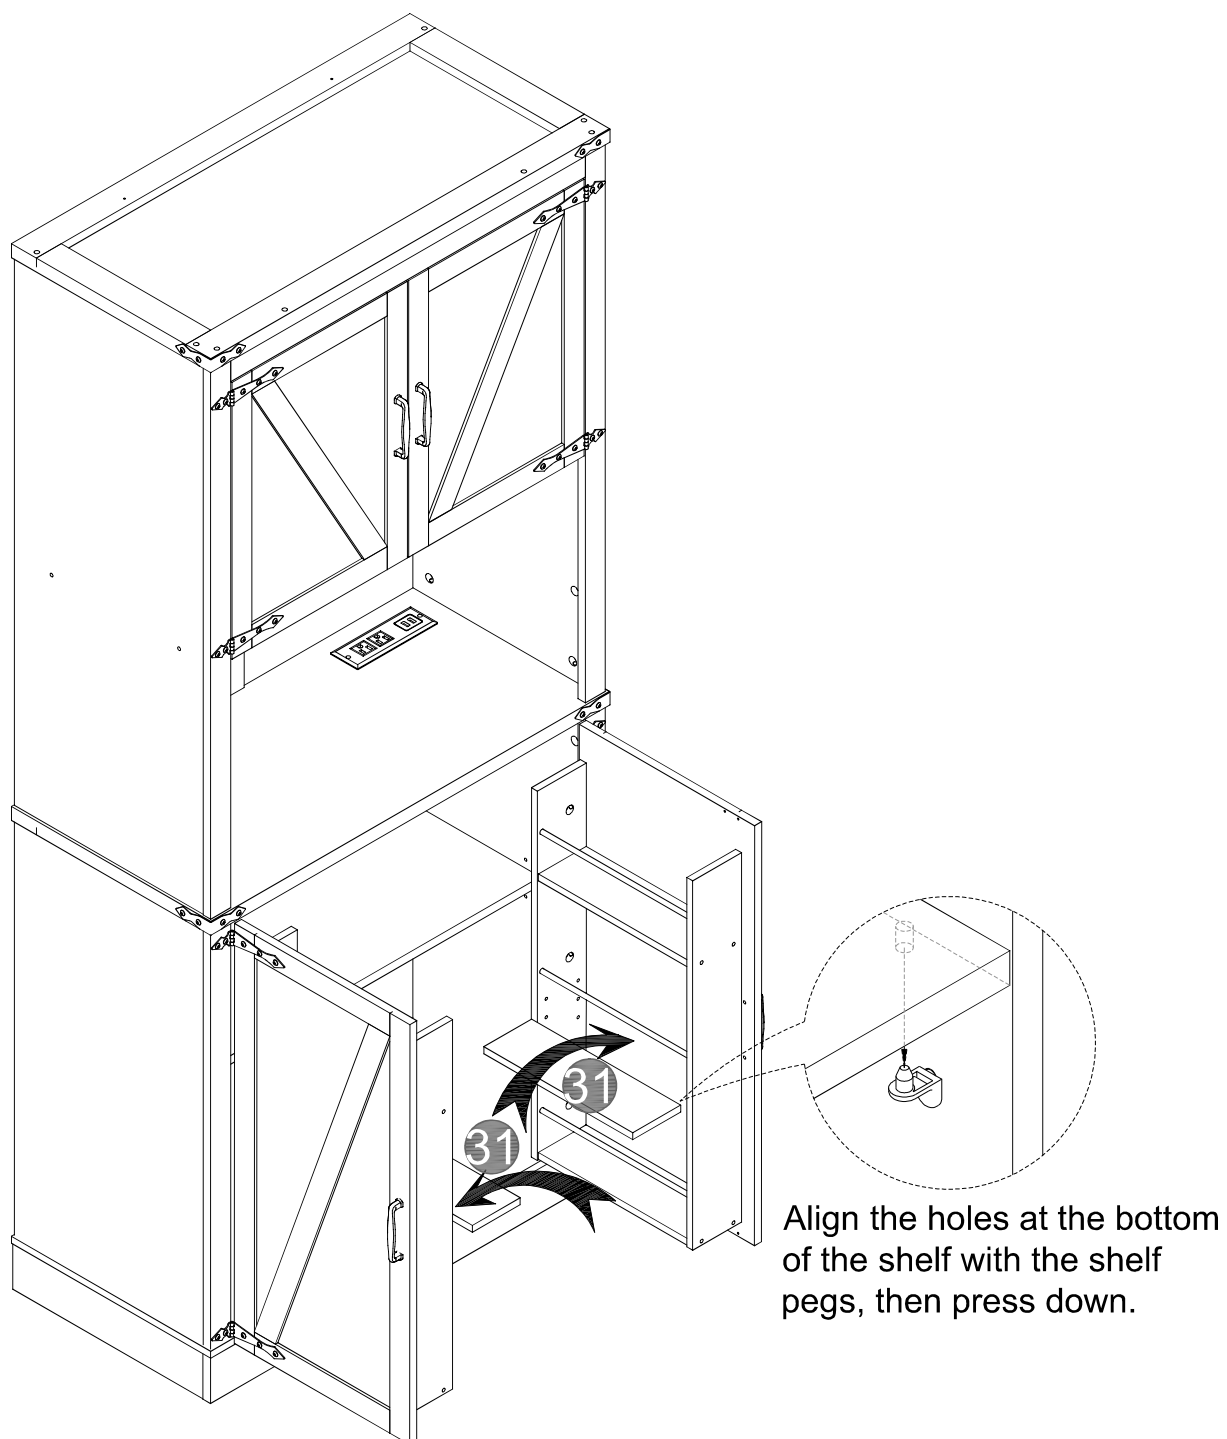


26


Q	20 PCS	M	20 PCS
			

Installing back board fasteners can improve the overall stability of the furniture. It ensures the verticality of the furniture and that the door boards are level, so that the gaps are uniform.

Also, you can adjust the level of the cabinet by using the adjustable feet at the bottom of the furniture to make the gaps between the cabinet door boards even.


During the adjustment process, you should first place the furniture in the position where it is needed. Otherwise, when you move it to that position after adjustment, you may encounter an uneven floor.

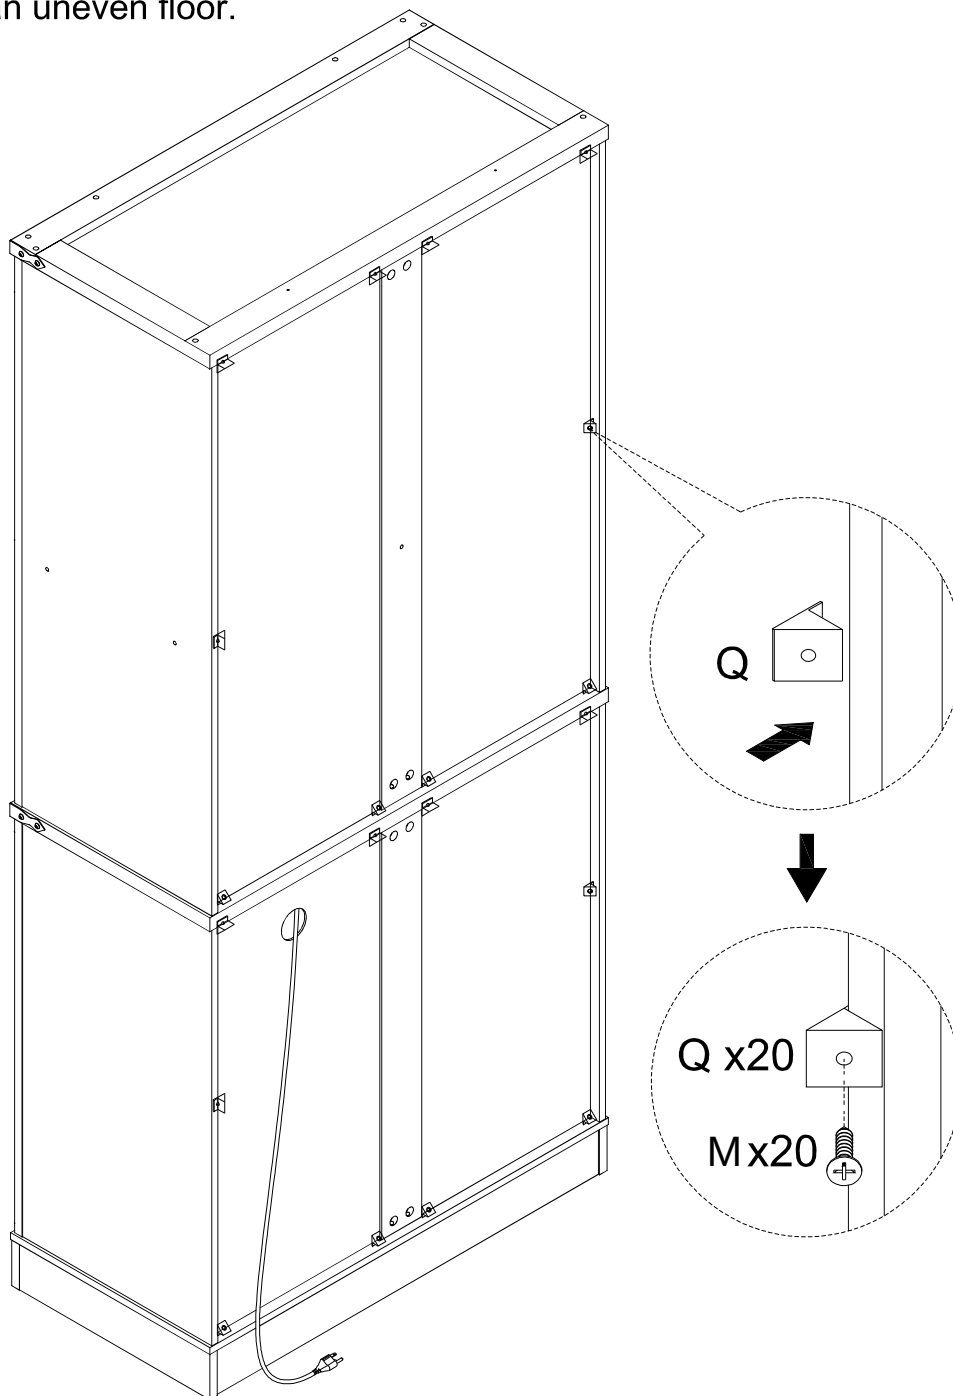

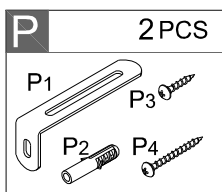27

Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

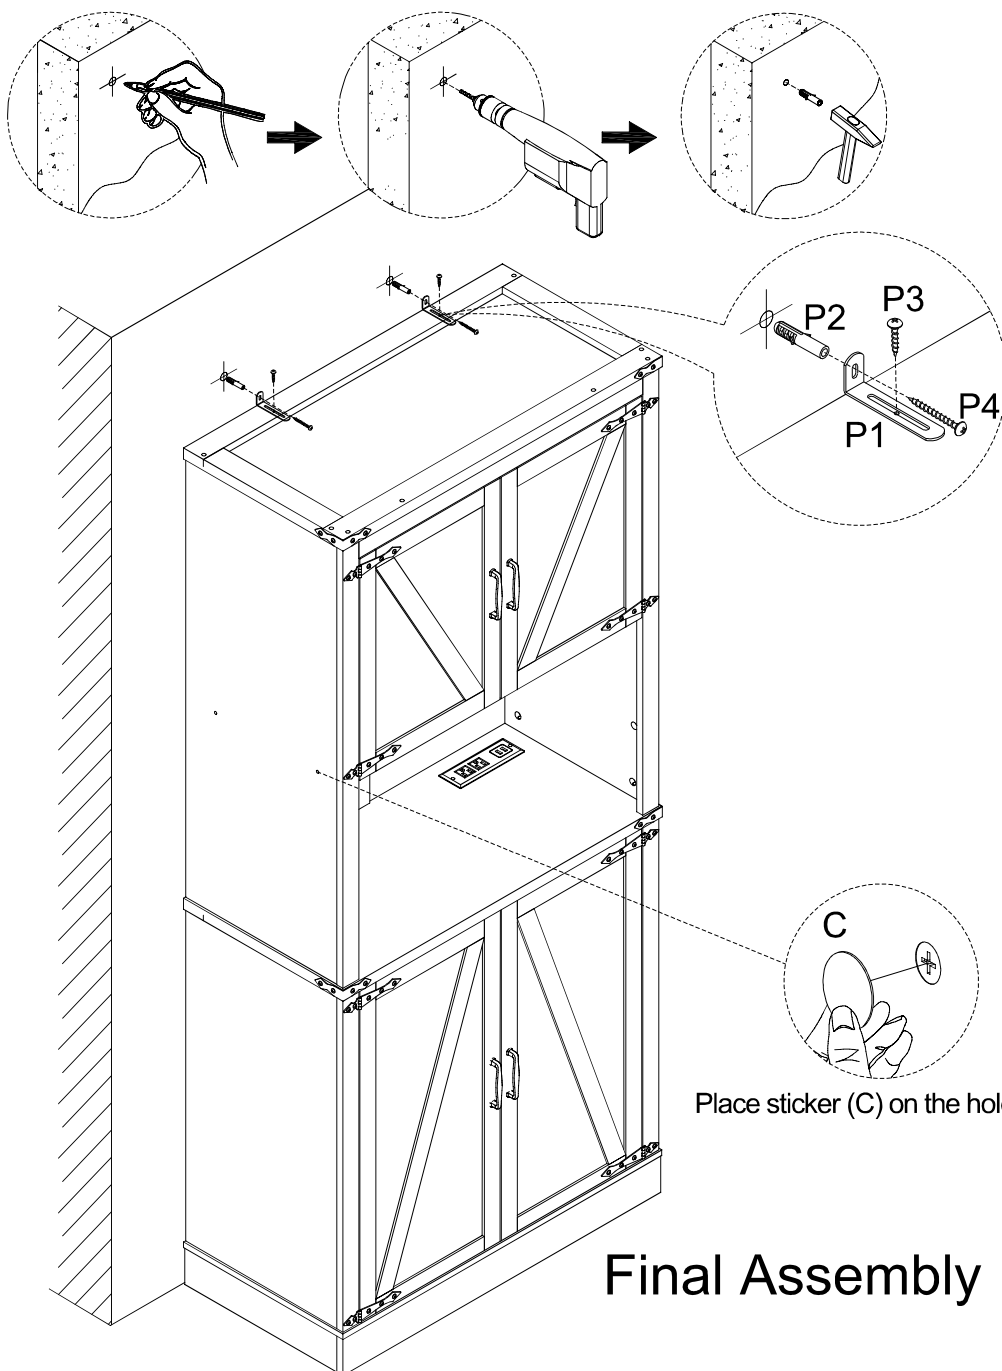

Place sticker (C) on the hole.

Final Assembly

a) The statement "Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."

b) The statement "Even used batteries may cause severe injury or death."

c) The statement "Call a local poison control center for treatment information."

d) A statement indicating the compatible battery type (CR2025).

e) A statement indicating the nominal battery voltage (3~5V).

f) The statement "Non-rechargeable batteries are not to be recharged."

g) The statement "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."

a) The statement "Ensure the batteries are installed correctly according to polarity (+ and -)."

b) The statement "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."

c) The statement "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."

d) The statement "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."