


ASSEMBLY INSTRUCTIONS


DJ0985BK-120CM
DJ0985WT-120CM

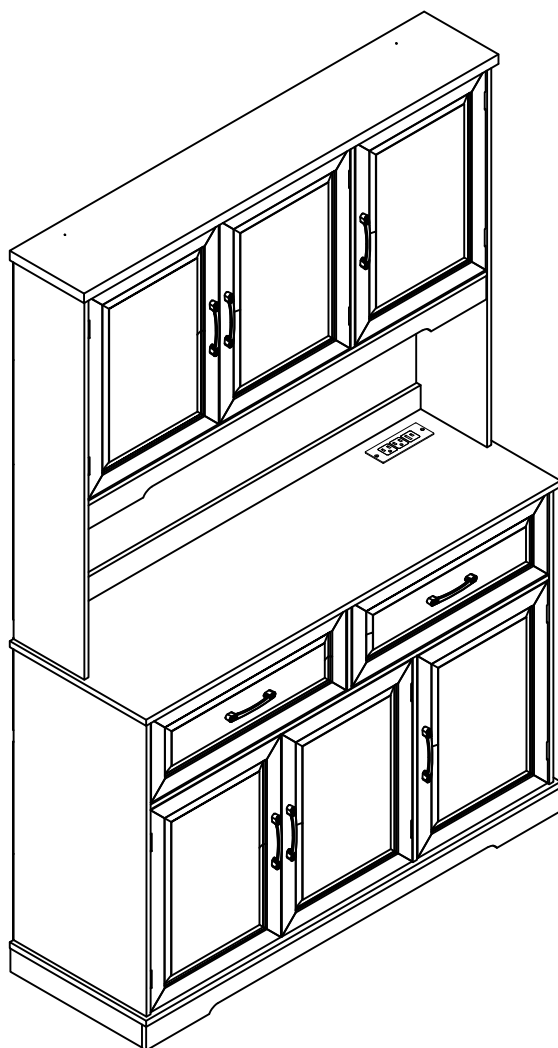

SAFETY TIPS:

Static charge may cause dust on foam-clean with a dry or damp cloth. Small foam strands may be present-handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guideline.

Installation Video QR

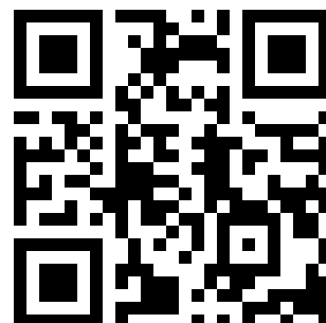

DJ0985

<https://vimeo.com/1093085391>


Have an assembly question or need a replacement part?
Please contact with our customer service.

Warnings

Important reminder:


- ⚠ Please sort and check all accessories before assembly.
- ⚠ Place the product on an empty cardboard box or on carpet to prevent scratches.
- ⚠ Please use proper tools for assembly. Using an electric screwdriver can accelerate the assembly speed, but please do not overtighten the screws.
- ⚠ Please follow the assembly steps and do not skip any of them.
- ⚠ If possible, please find a partner to help you with assembly, which can accelerate assembly.
- ⚠ Keep all small parts of this product away from children. They may cause serious injury.
- ⚠ We hope you can retighten the screws 2 weeks after assembly, and check the tightening procedure of the screws every 3 months.

If you meet any difficulty, our friendly customer team are always ready to help you.






















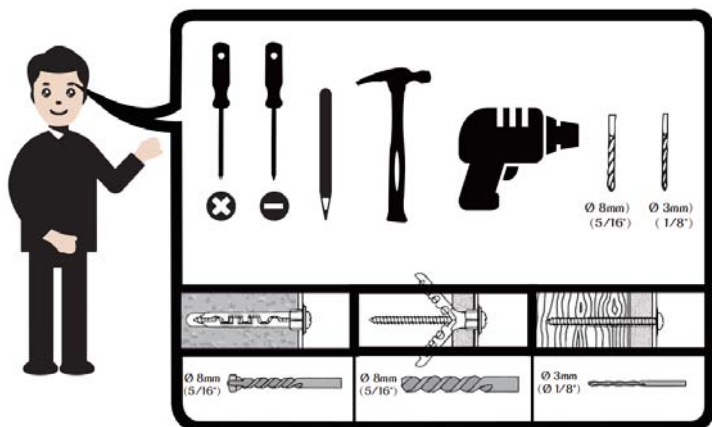


Warning: Overturning the product can cause serious crushing injuries. We have a wall connection device attached, please use it to hold the furniture following assembly instructions. Do not change the structure of this product in way. Our products have been tested and meet any 1 sales specific security measures. We won't be responsible for any modifications, which may cause significant security risks.


Explosion Diagram

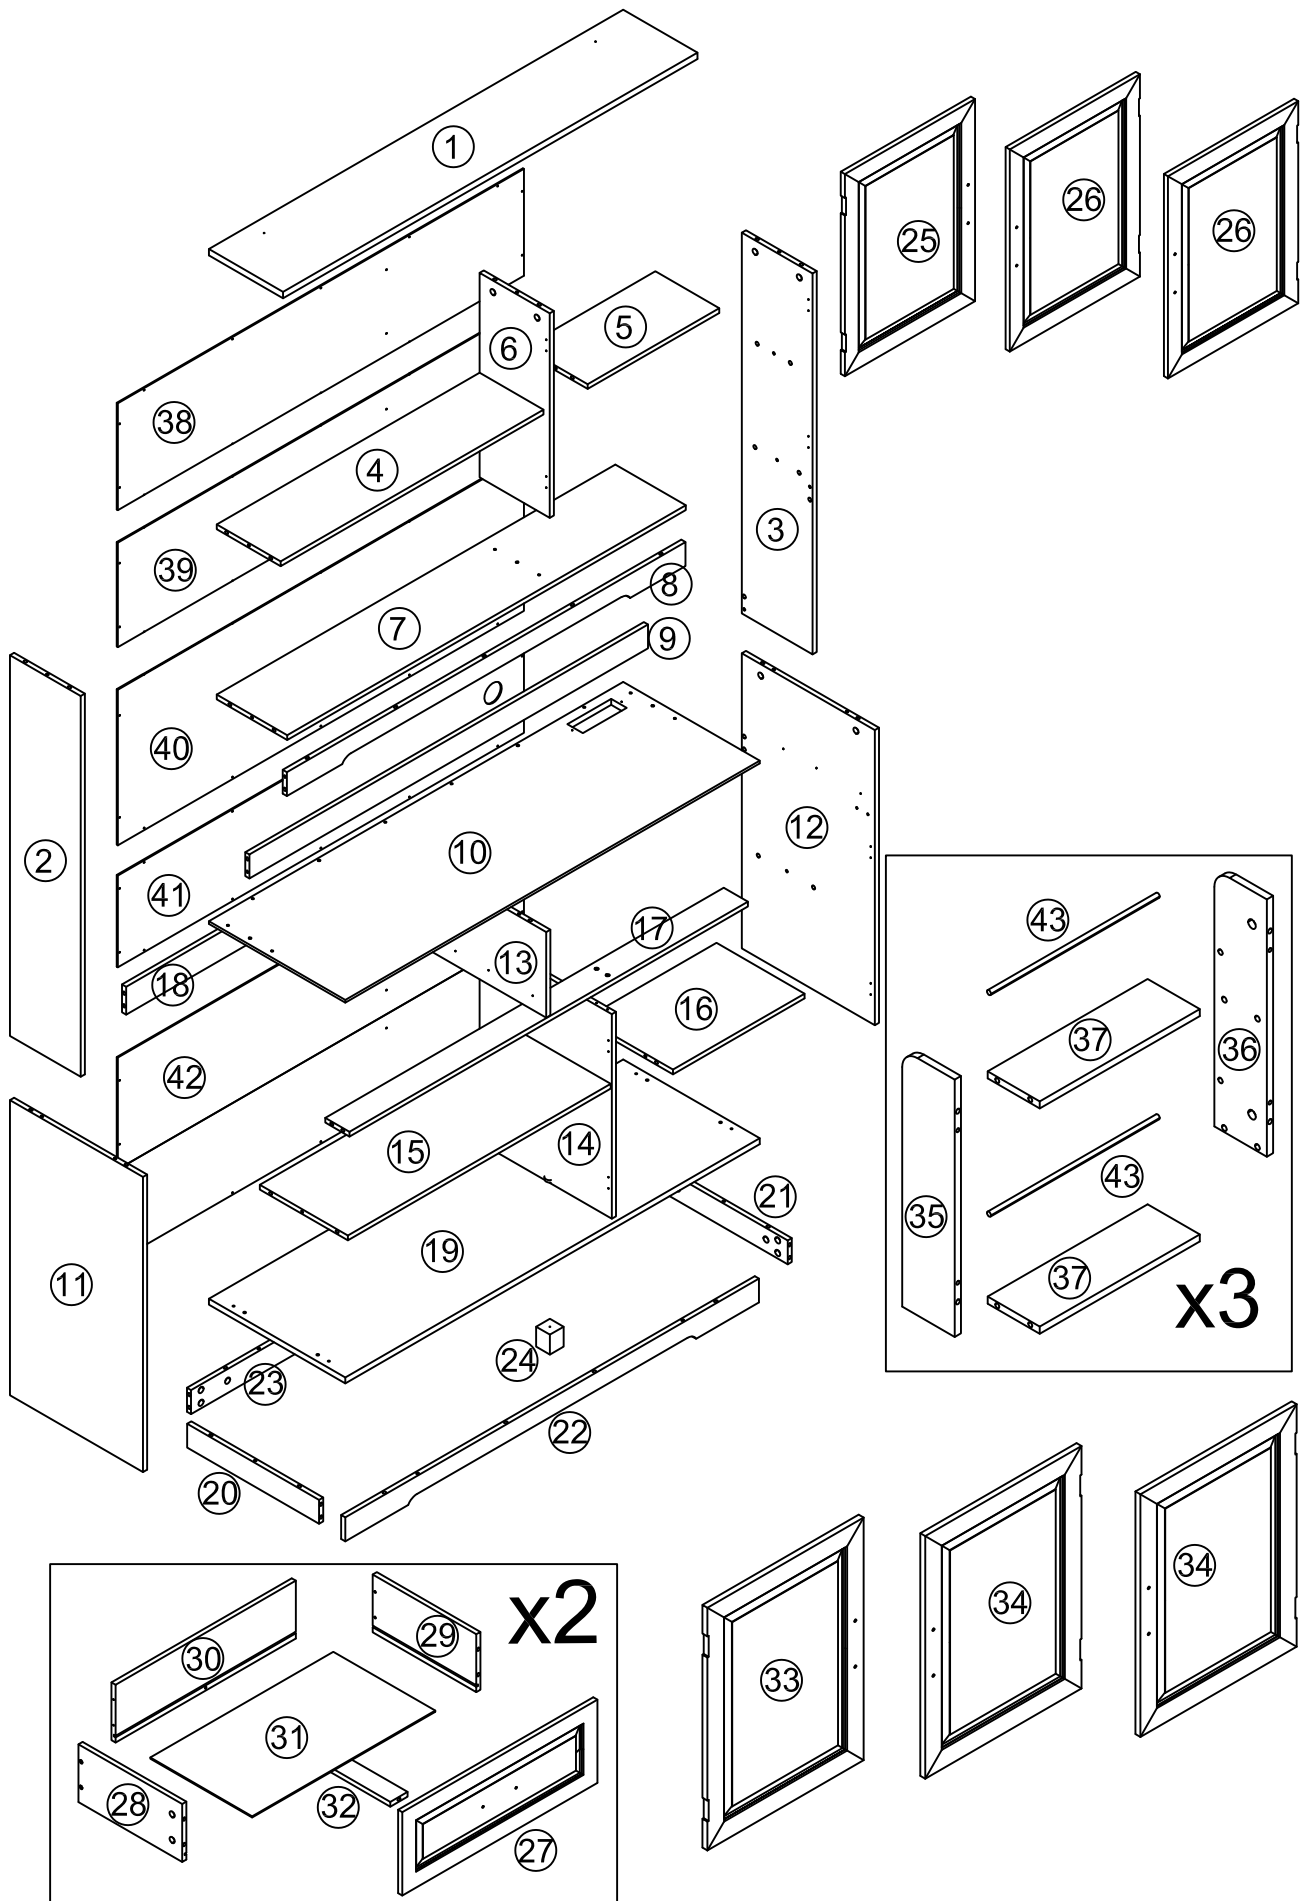


Parts List

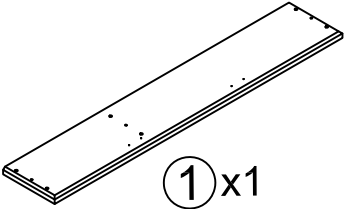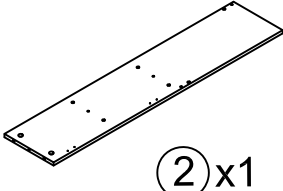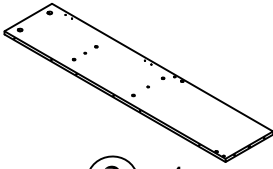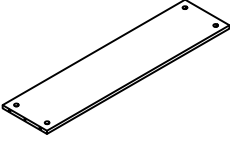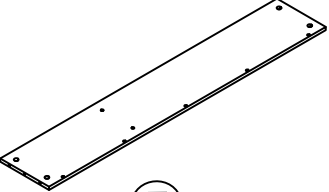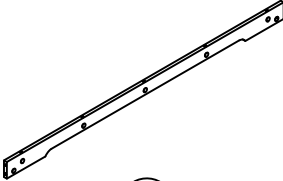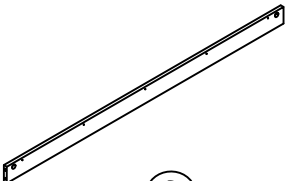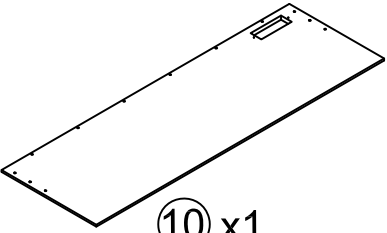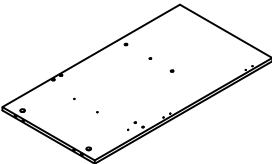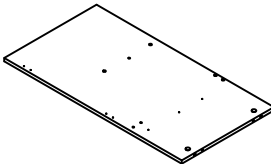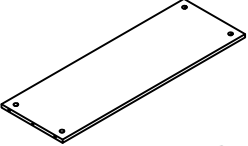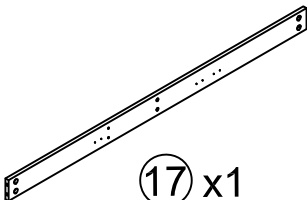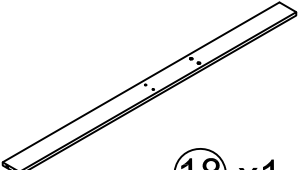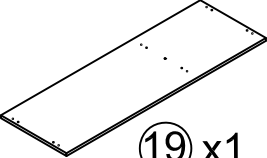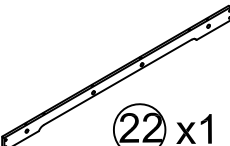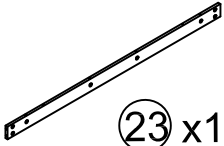 ① x1	 ② x1	 ③ x1
 ④ x1	 ⑤ x1	 ⑥ x1
 ⑦ x1	 ⑧ x1	 ⑨ x1
 ⑩ x1	 ⑪ x1	 ⑫ x1
 ⑬ x1	 ⑭ x1	 ⑮ x1
 ⑯ x1	 ⑰ x1	 ⑱ x1
 ⑲ x1	 ⑳ x1	 ㉑ x1
 ㉒ x1	 ㉓ x1	 ㉔ x1


Parts List

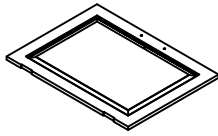

②5x1

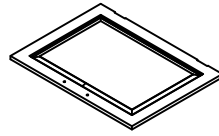

②6x2




②7x2




②8x2



②9x2




③0x2

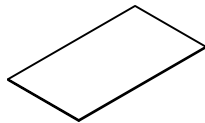


③1x2




③2x2

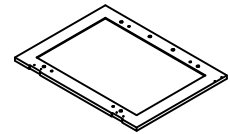


③3x1

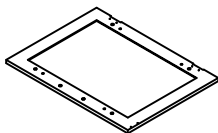


③4x2




③5x3




③6x3




③7x6

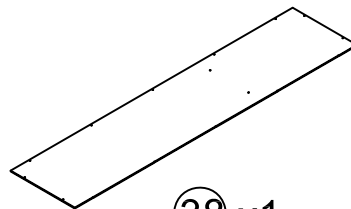


③8x1

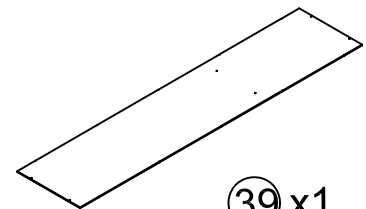


③9x1

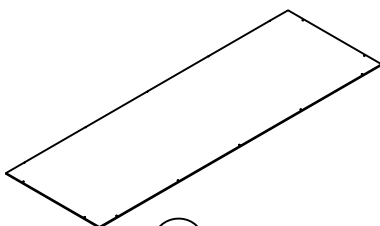


④0x1

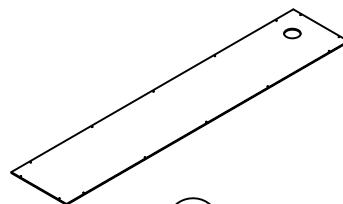

④1x1

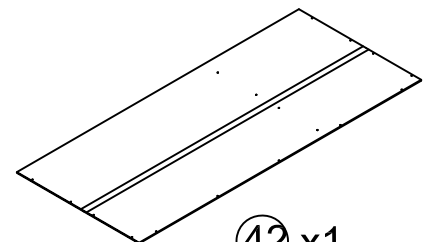


④2x1

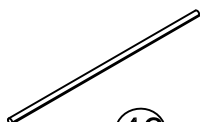




④3x6

Hardware List

No.	Code	Diagram	Description	Quantity	Spare
1	A1			115	2
2	A2		Ø15 x 9.5 mm	115	2
3	B1		M3 x 10 mm	53	2
4	B2		Ø3 x 12 mm	72	2
5	B3		M3 x 10 mm	12	2
6	B4		M3.5 x 10 mm	24	2
7	B5		Ø4 x 35 mm	1	
8	B6		Ø4x40mm	32	2
9	C1		Ø6x30mm	54	2
10	C2			12	
11	C3			1	
12	C4		Ø20mm	113	2
13	C5		Ø6 x 50mm	2	
15	D1			2	
			M4 x 12 mm	2	
			M4 x 35 mm	2	
				2	
16	D2			3	
				3	

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING


Hardware List



No.	Code	Diagram	Description	Quantity	Spare
17	D3			6	
			Ø4 x 14 mm	12	2
18	D4			2	
			M3 x 14 mm	4	
19	D5			3	
20	D6			10	2
21	D7			2	
			Ø4 x 10 mm	4	
22	PC		M3.5 x 12 mm	2	
				1	
23	LED			1	
				2	
24	CR		12" Slide (CR)	2	
	CL		12" Slide (CL)	2	
	DR		12" Slide (DR)	2	
	DL		12" Slide (DL)	2	
25		 SPARE BAG	Please put the hardware of +2 in the self sealing bag		

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING


Assemble



Step 1

			
A1	16PCS		

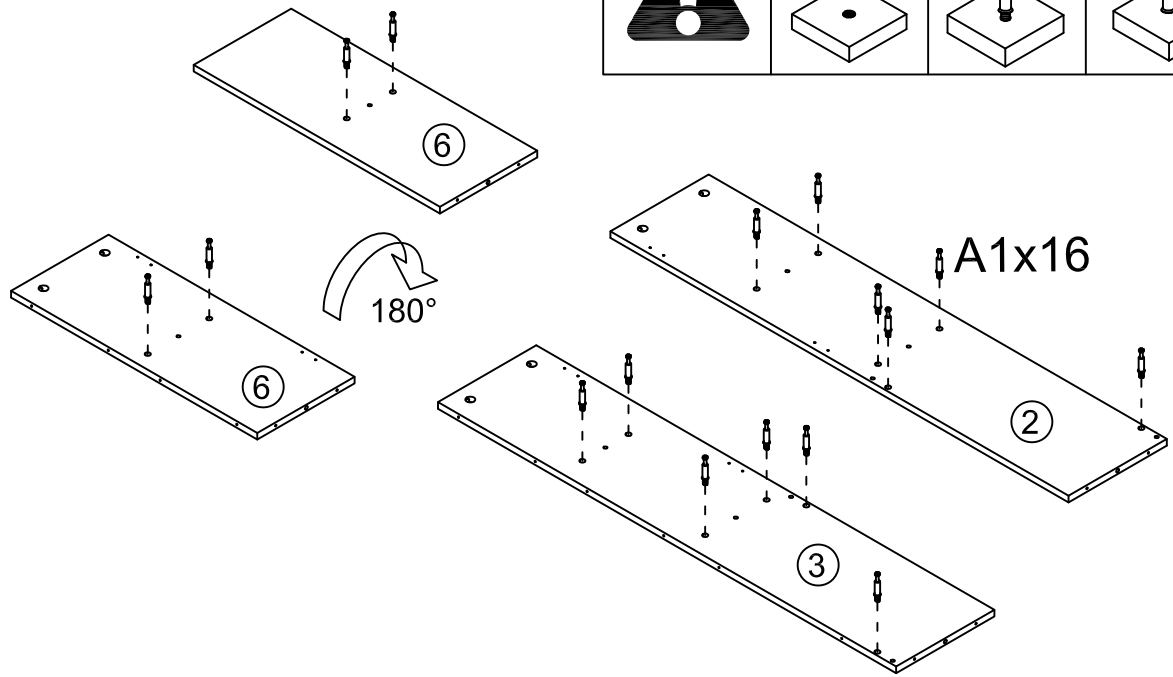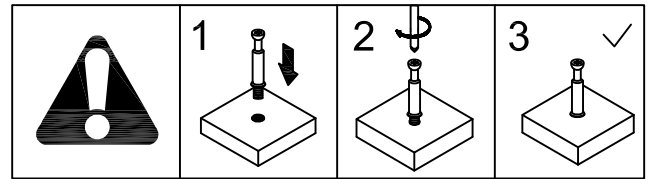


Step 2


					
A2	5PCS	A1	5PCS		

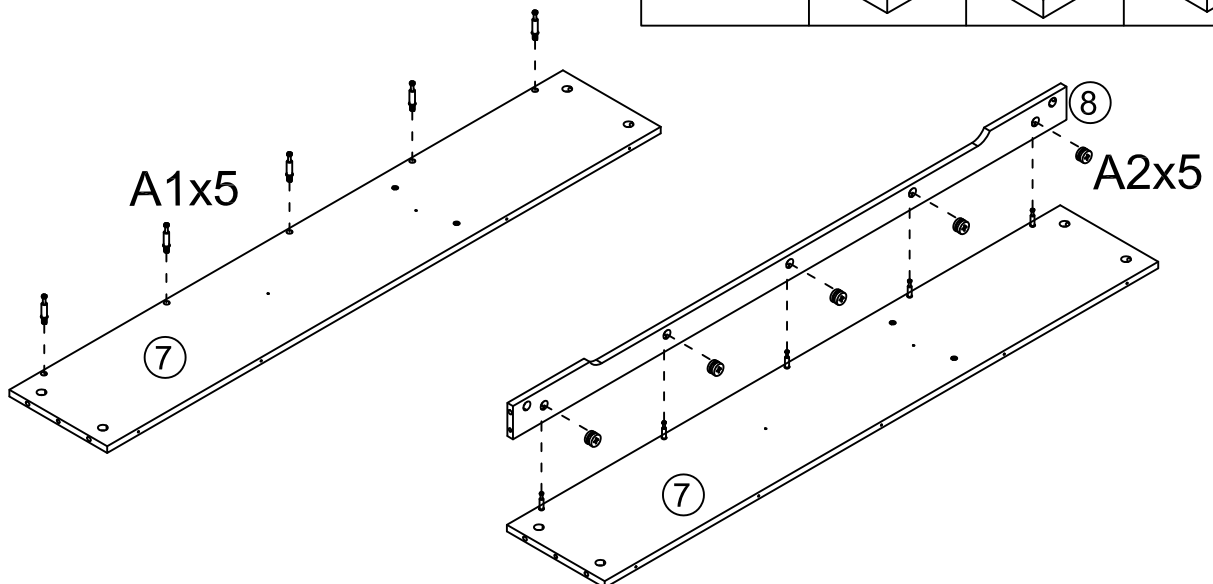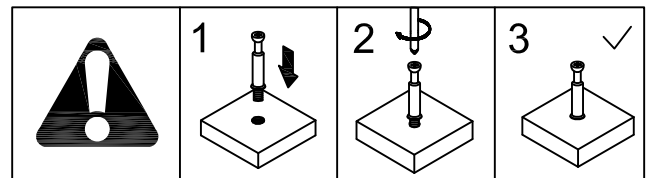

Assemble


Step 3


						
LED	1PC	LED	2PCS	B1	2PCS	

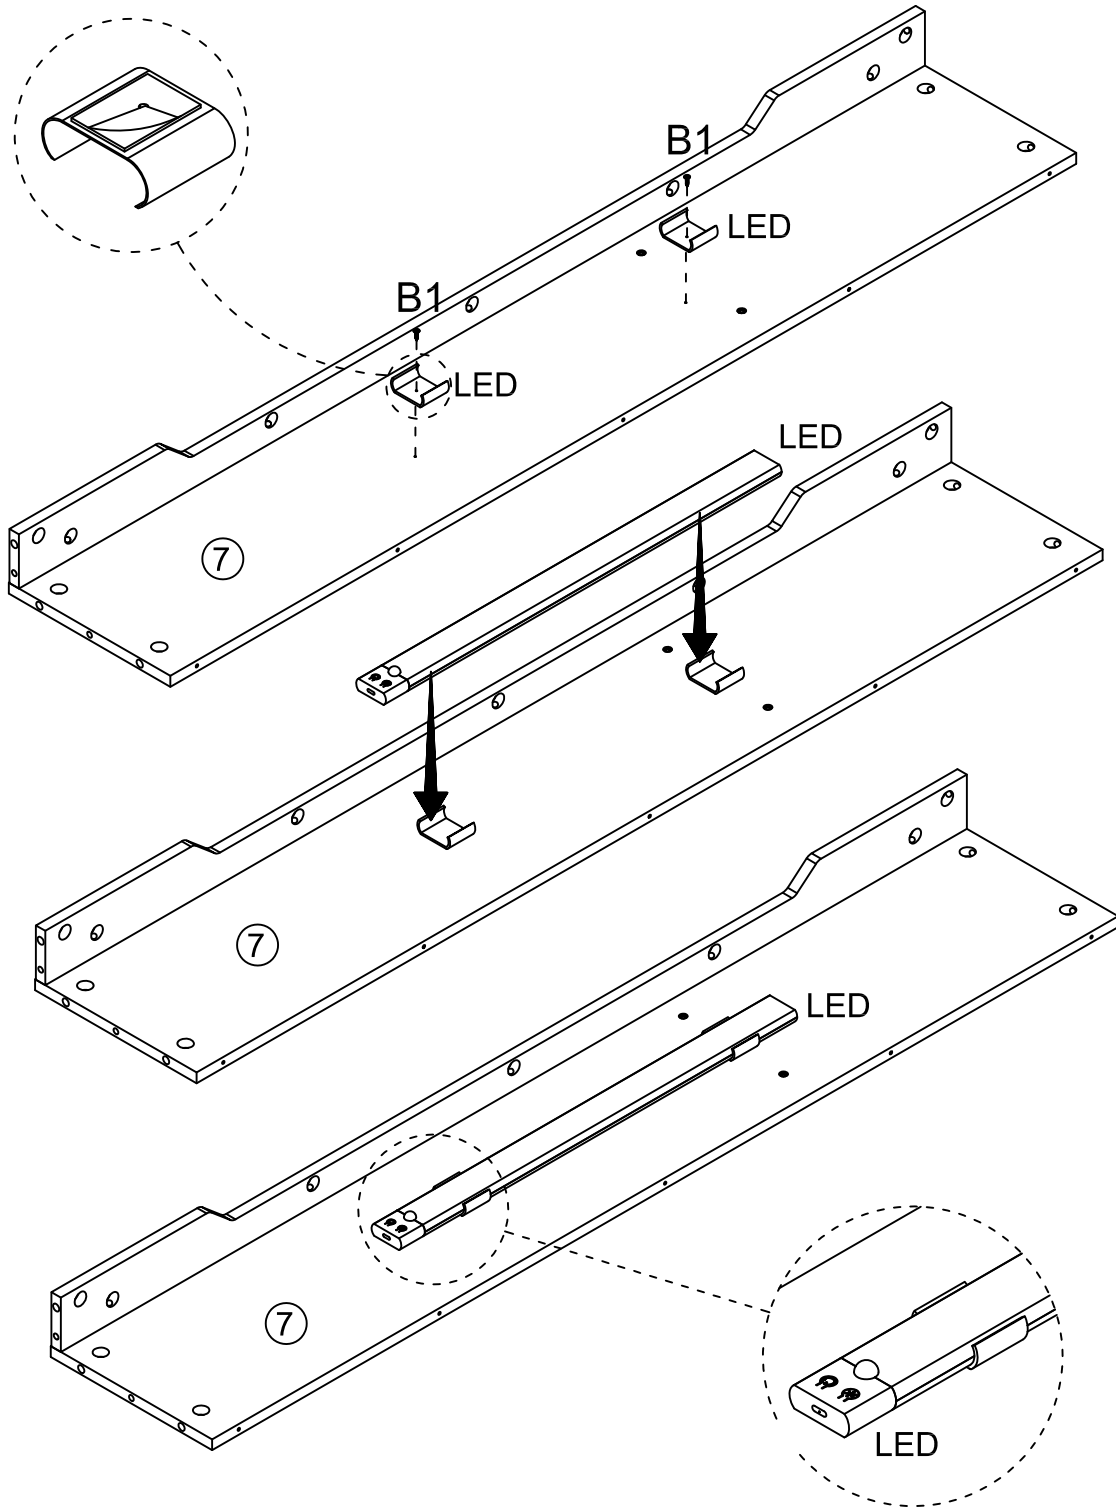


Assemble


Step 4

				
C5	1PC	A2	4PCS	

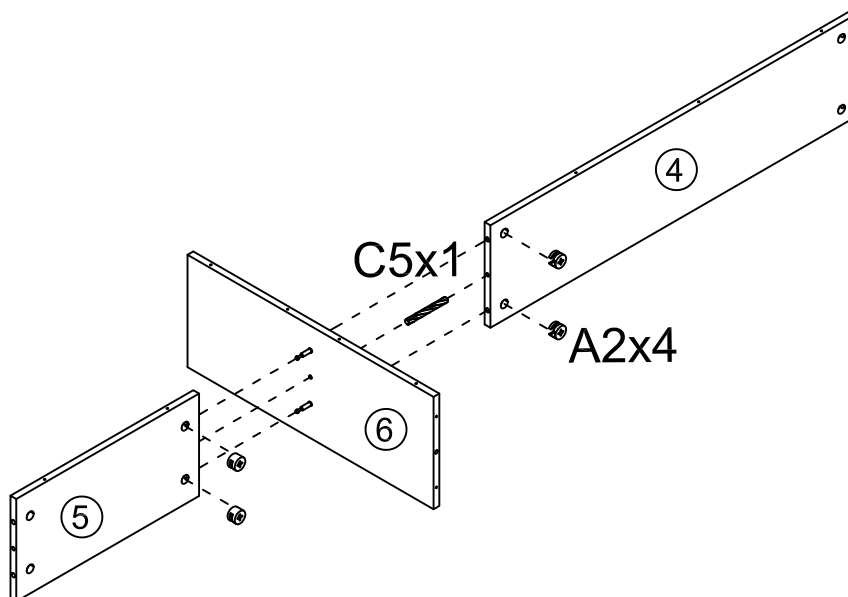


Step 5


				
C1	1PC	B6	2PCS	

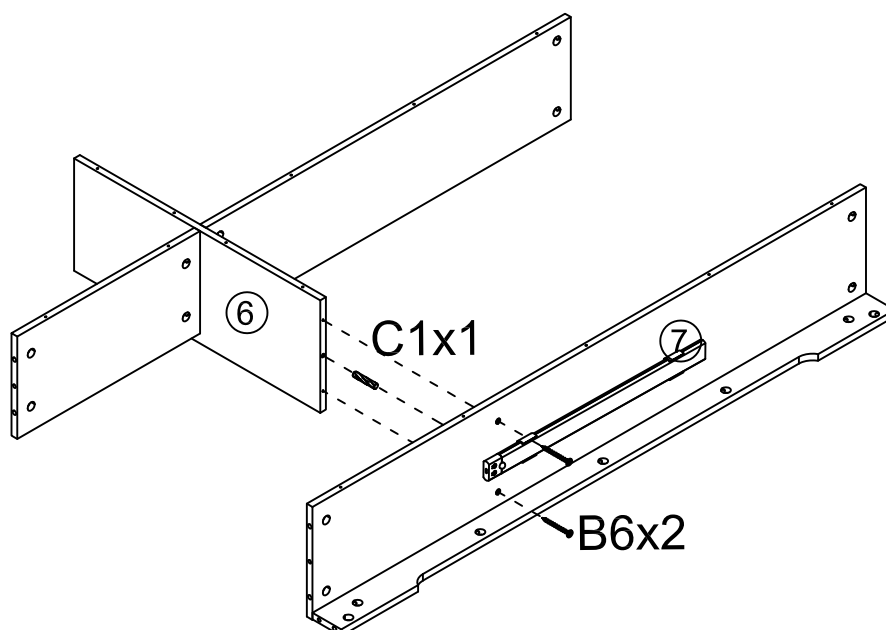


Assemble


Step 6

				
C1	3PCS	A2	5PCS	

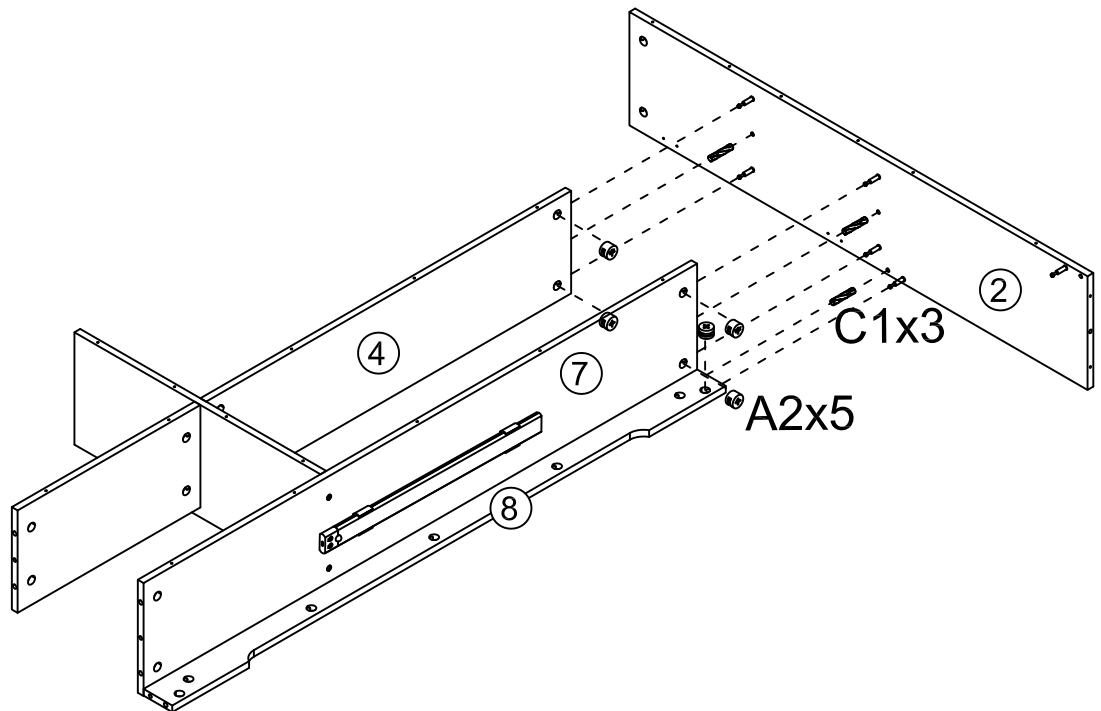


Step 7



				
C1	5PCS	A2	7PCS	

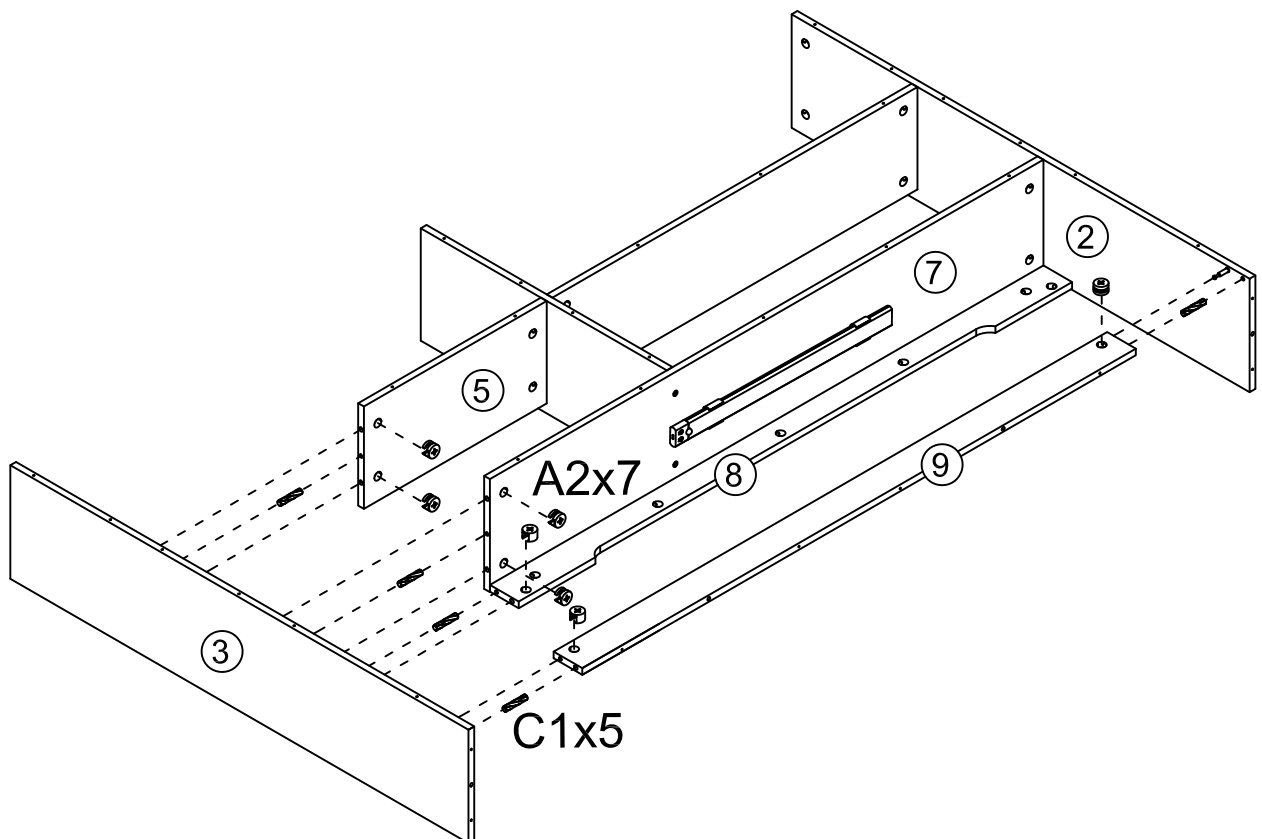


Assemble


Step 8

						
A1	6PCS	D4	2PCS	D4	4PCS	

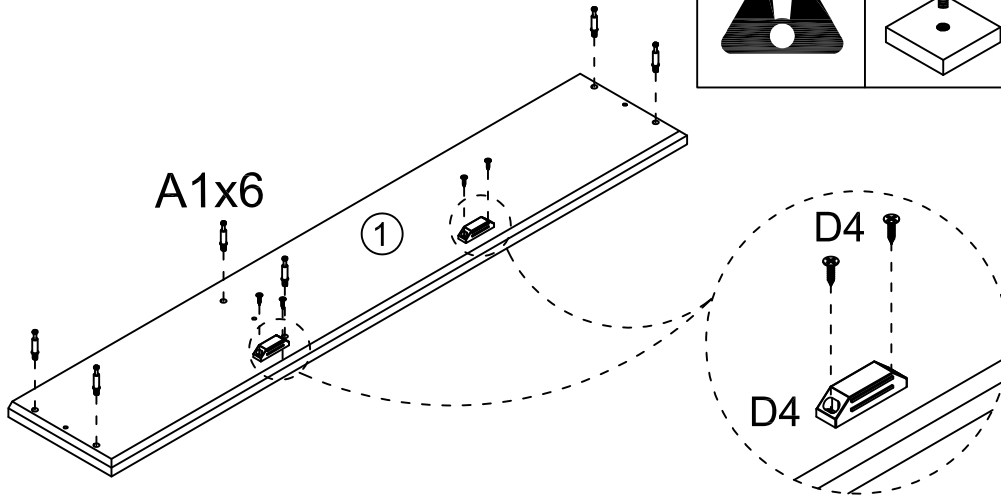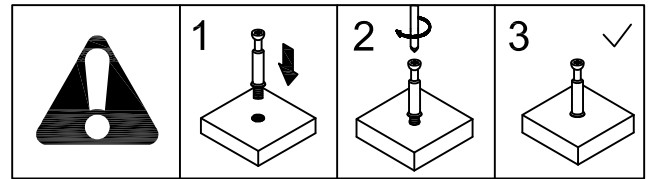


Step 9


				
A2	6PCS	C1	3PCS	

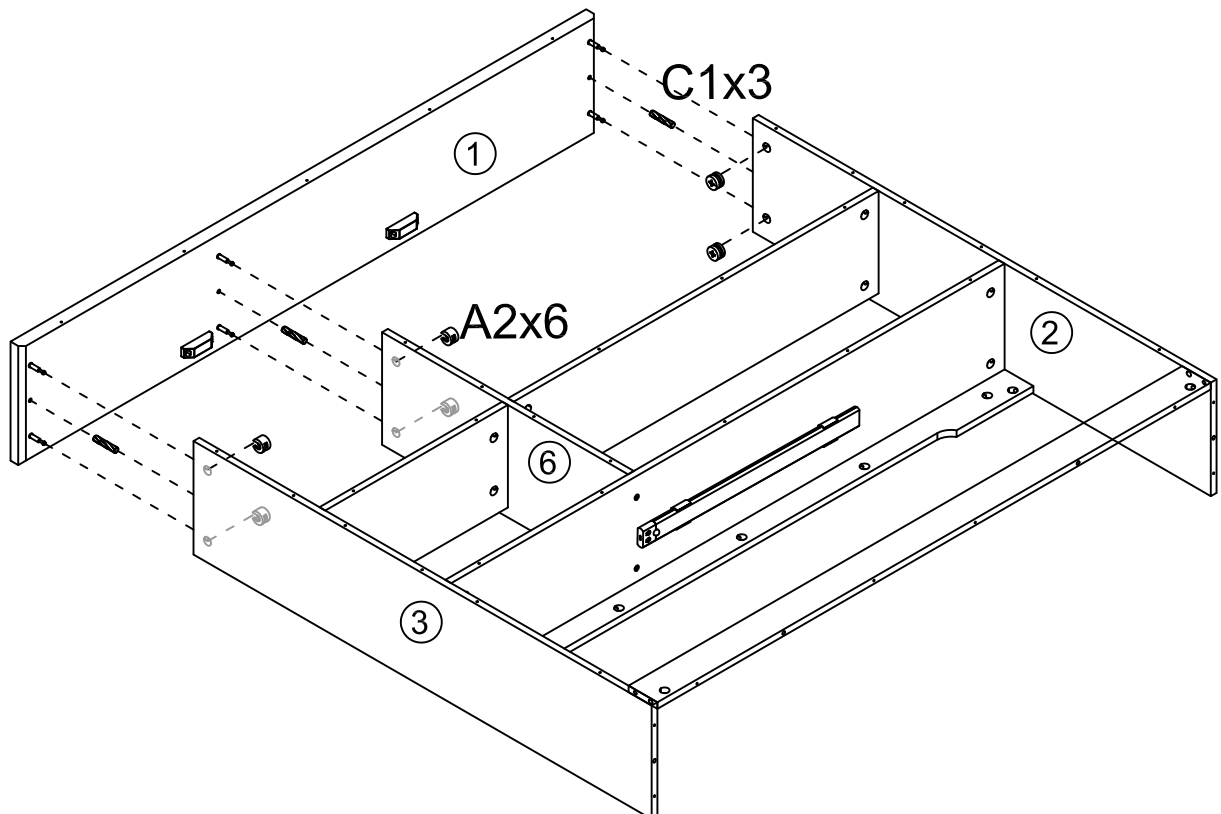


Assemble



Step 10

				
B2	36PCS	D6	10PCS	

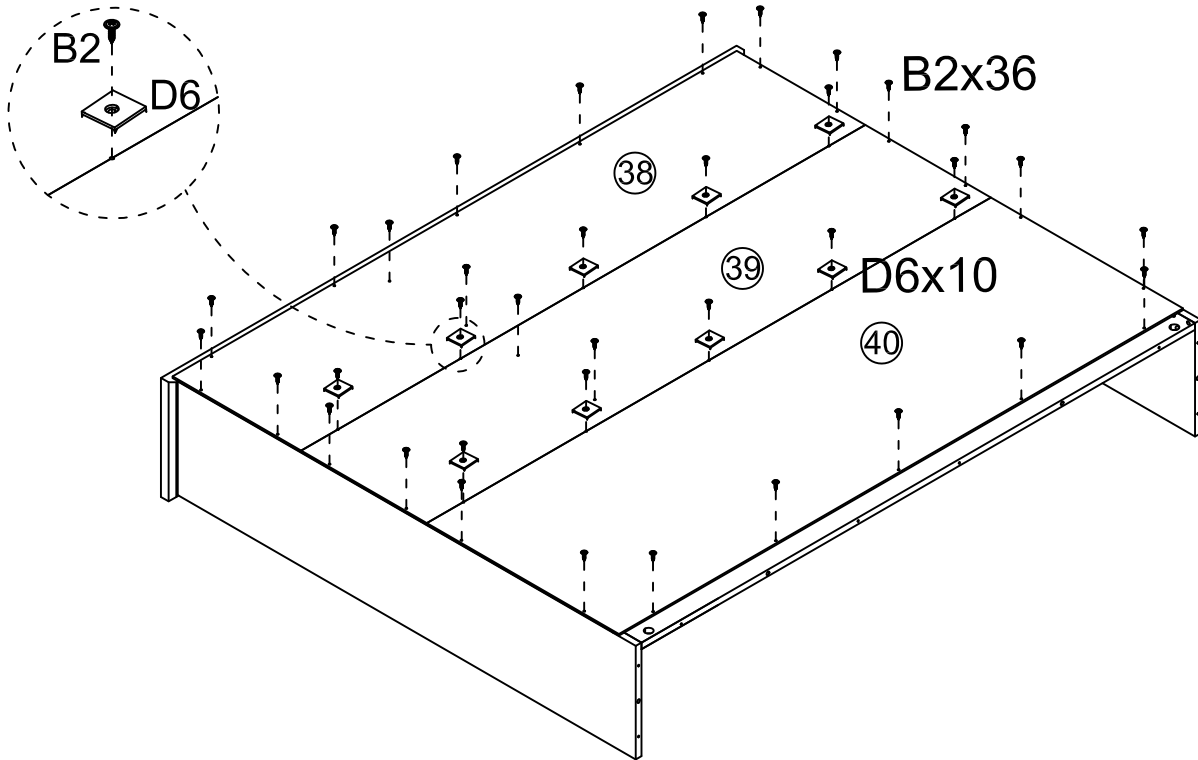


Step 11


		
A1	6PCS	

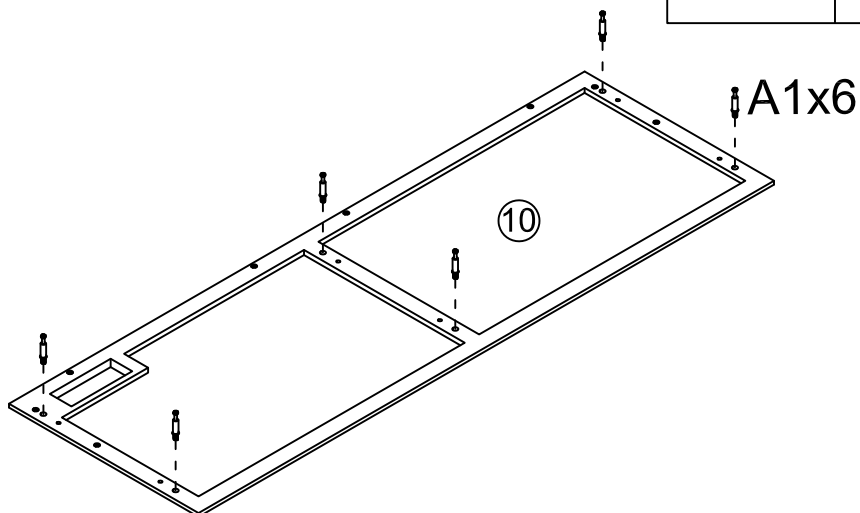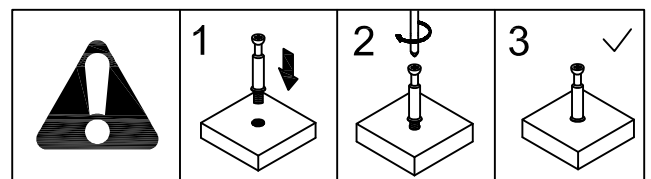


Assemble


Step 12

				
C1	4PCS	B6	8PCS	

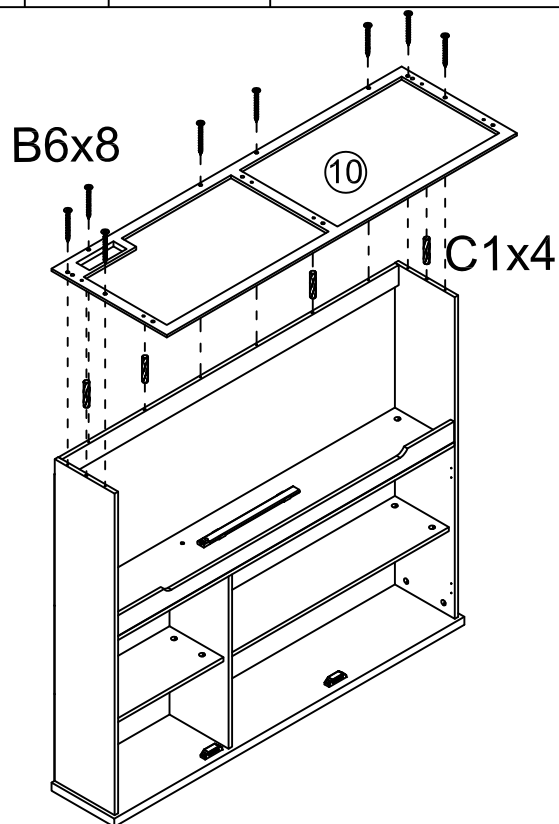


Step 13





				
D1	2PCS	D1	2PCS	

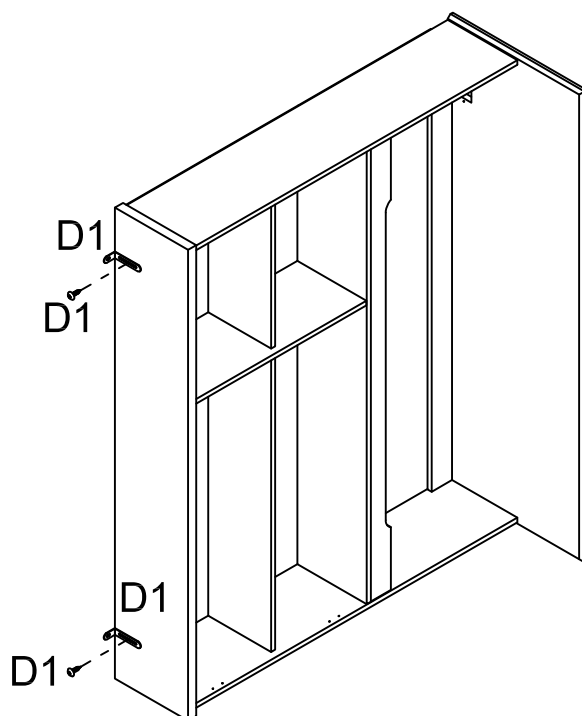


Assemble






Step 14

						
CL	1PC	CR	1PC	B4	6PCS	

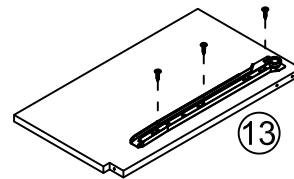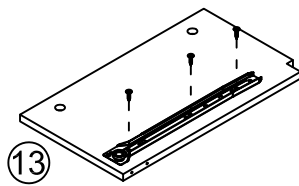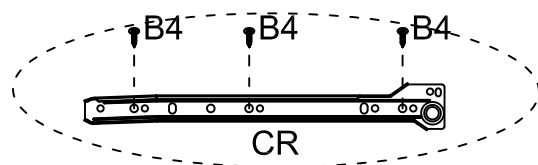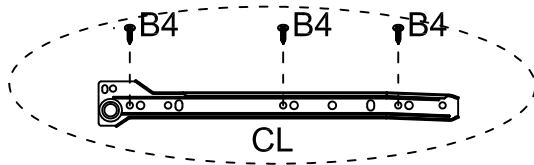


Step 15



								
A1	12PCS	CL	1PC	CR	1PC	B4	6PCS	

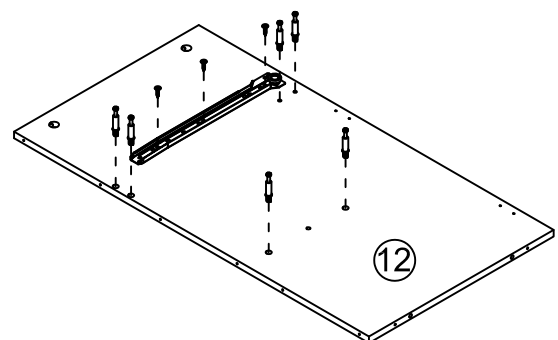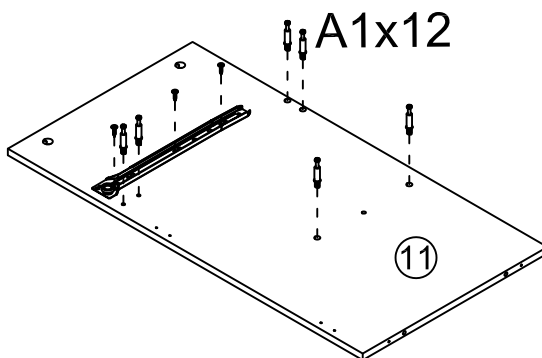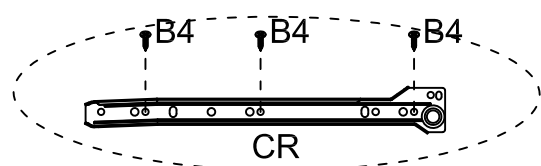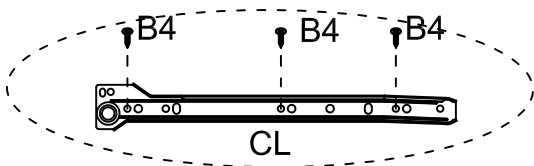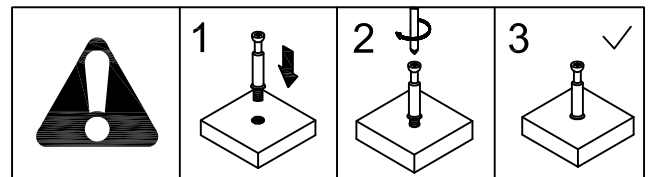

Assemble


Step 16

			
A1	4PCS		

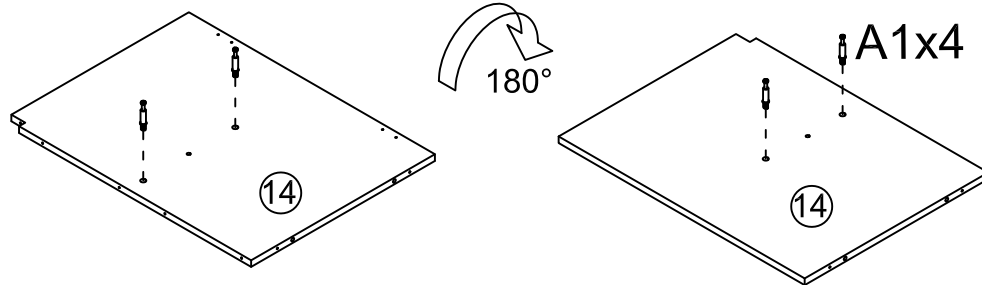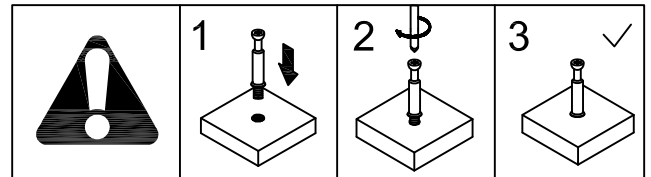



Step 17

						
B6	2PCS	D2	3PCS	B3	6PCS	

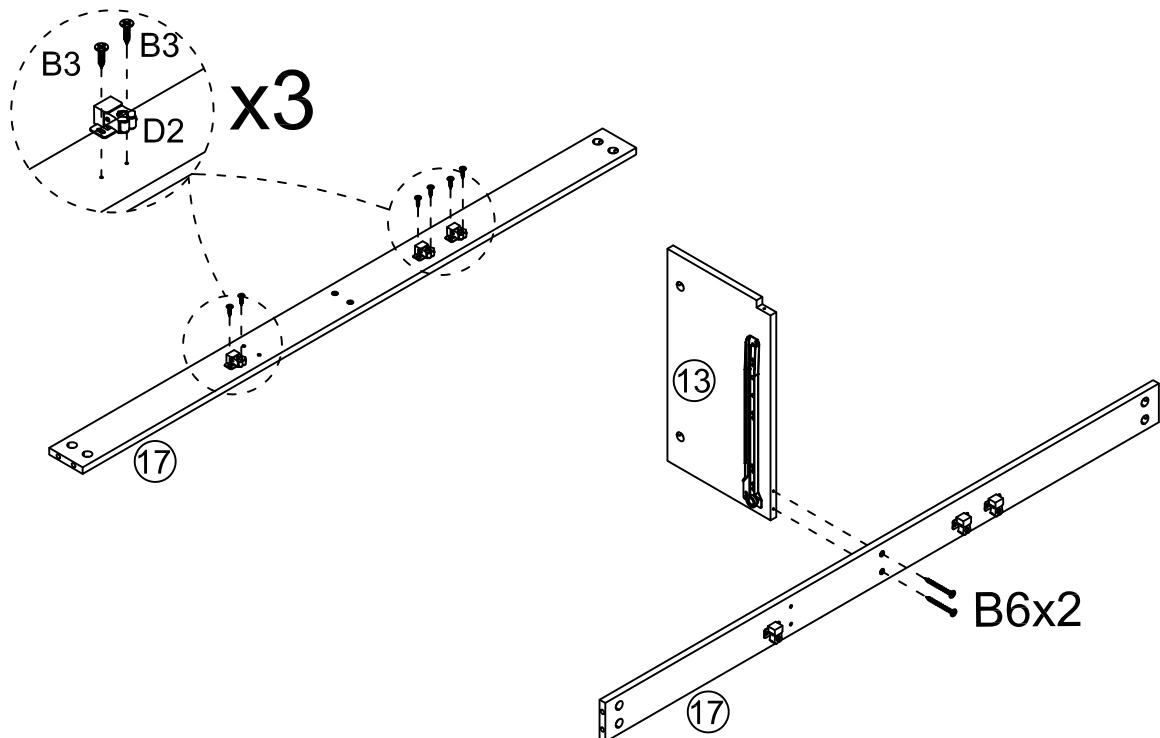


Assemble

Step 18

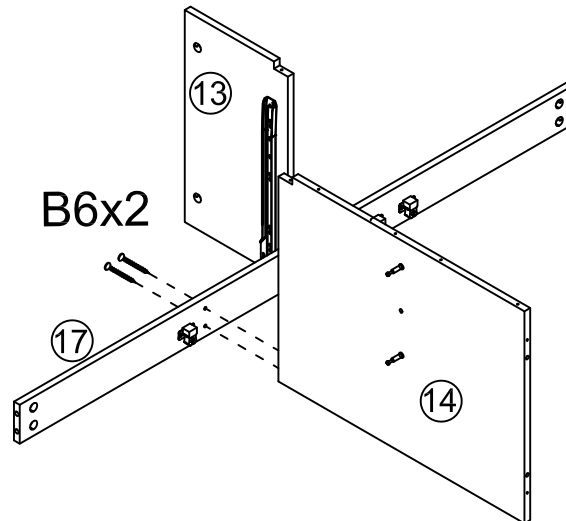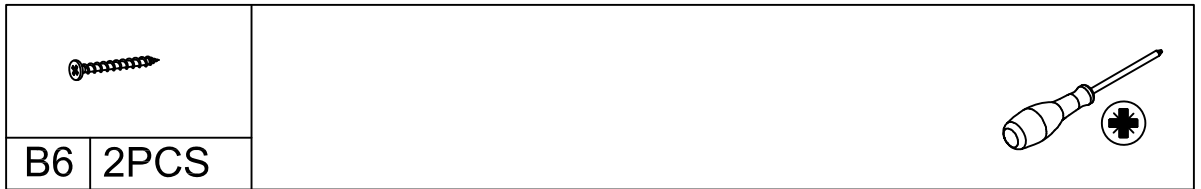



Step 19

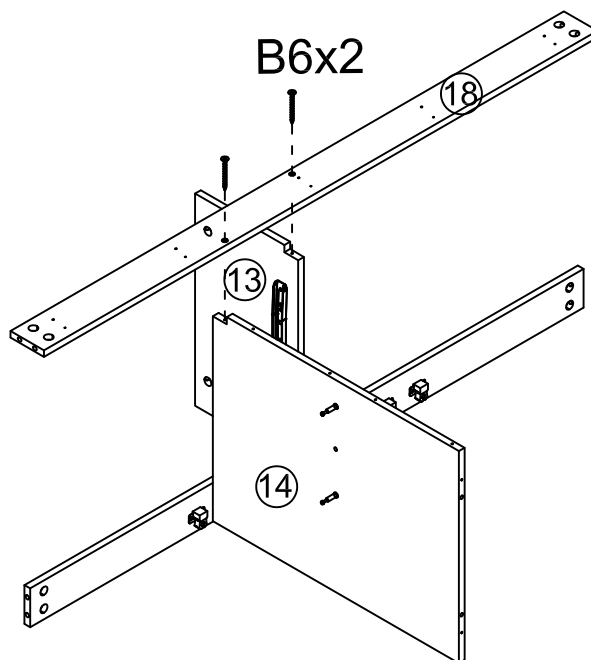


Assemble


Step 20

				
C5	1PC	A2	4PCS	

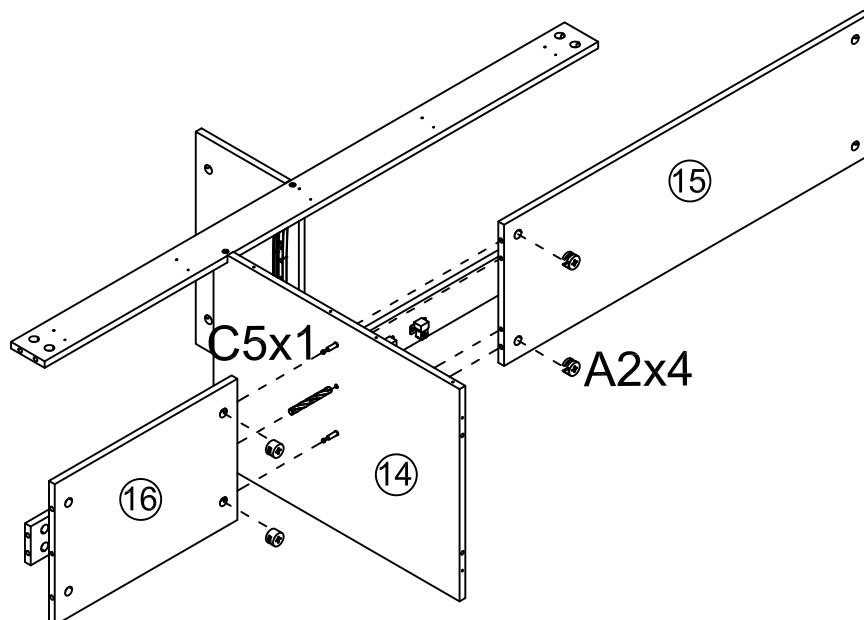


Step 21


				
C1	1PC	A2	6PCS	

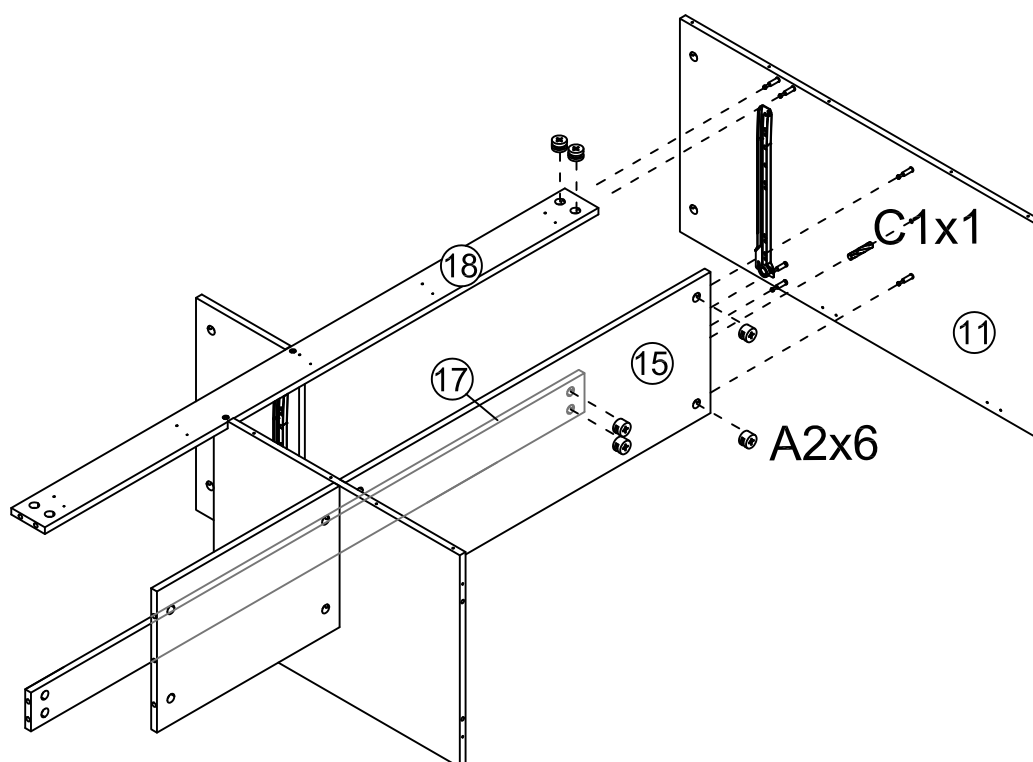


Assemble



Step 22

				
C1	1PC	A2	6PCS	

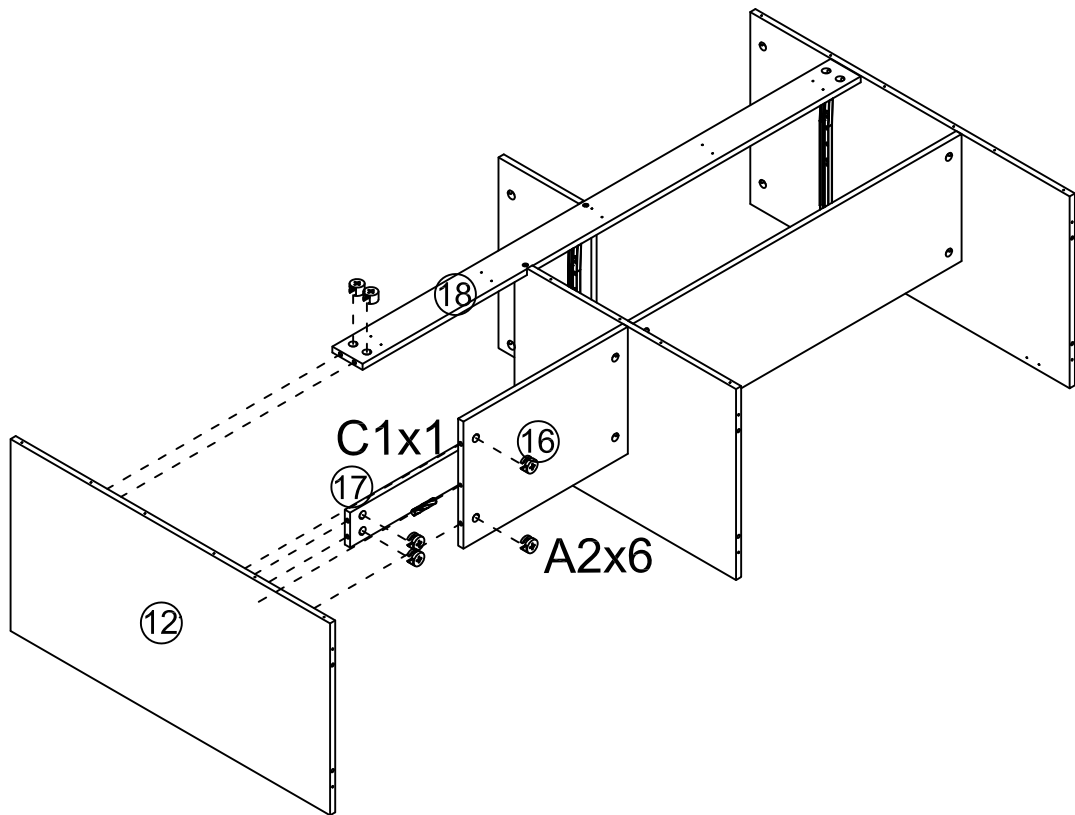


Step 23


						
B5	1PC	A1	12PCS	C3	1PC	

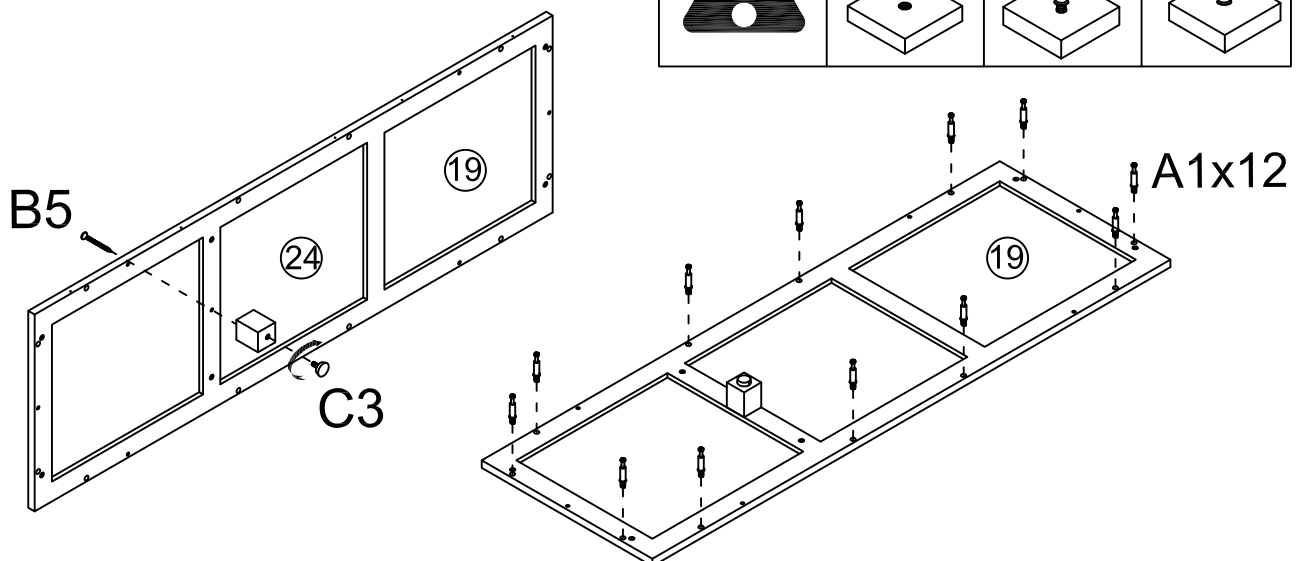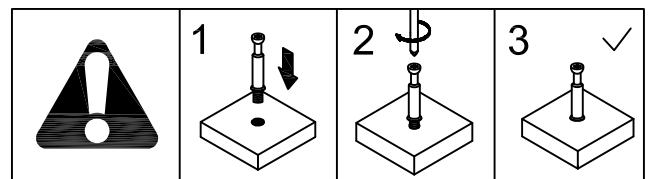

Assemble

Step 24



				
C1	6PCS	B6	6PCS	

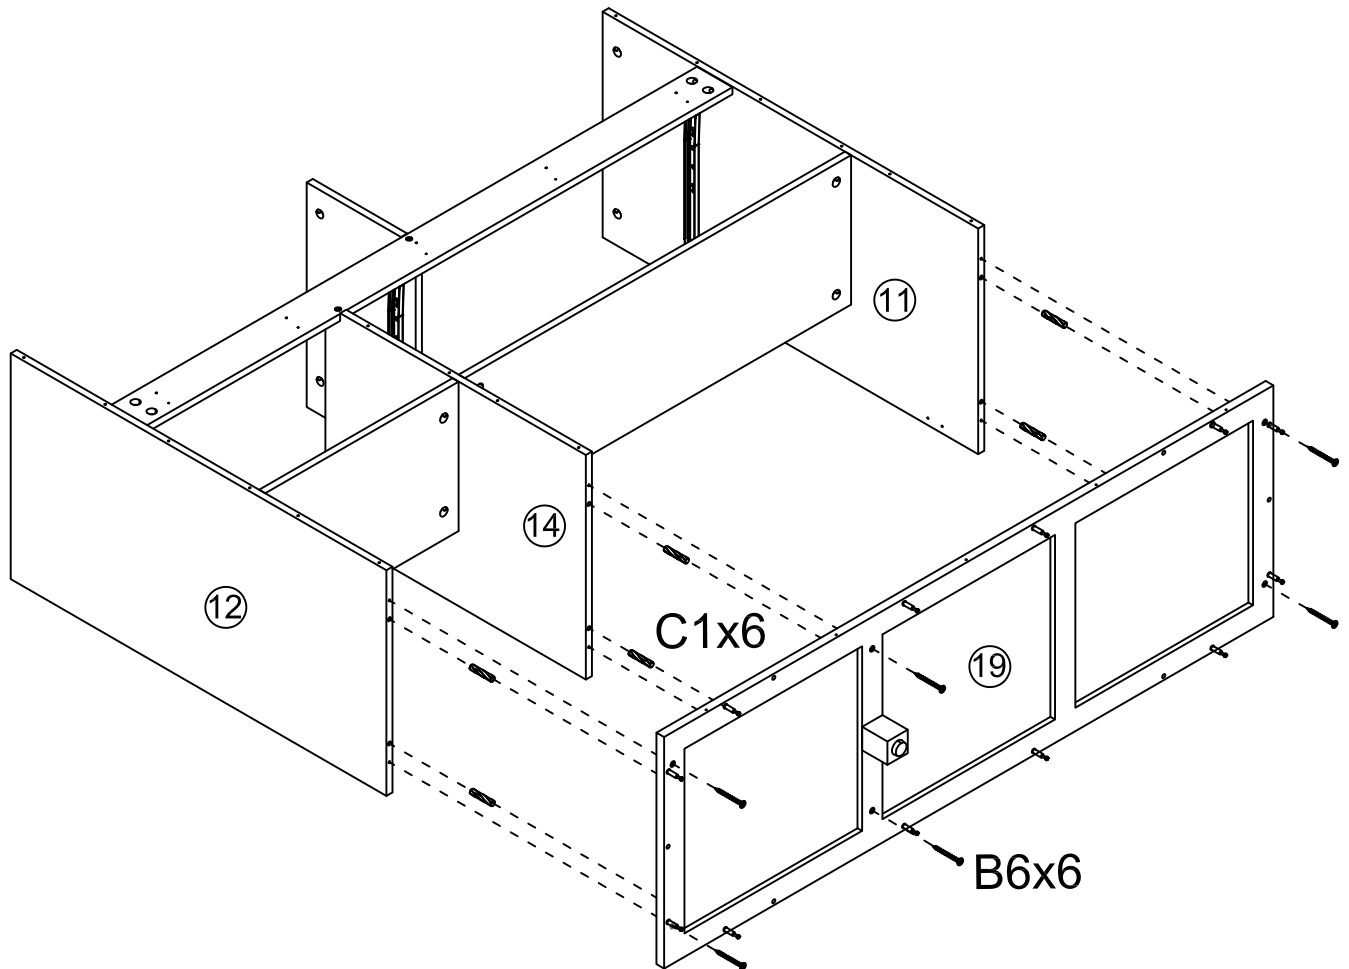




Assemble

Step 25

	
A1	8PCS

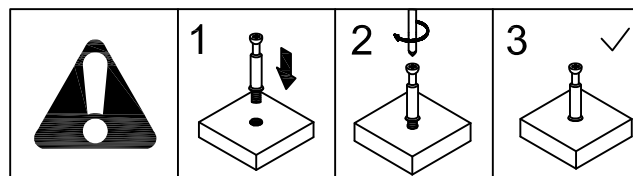



A1x8

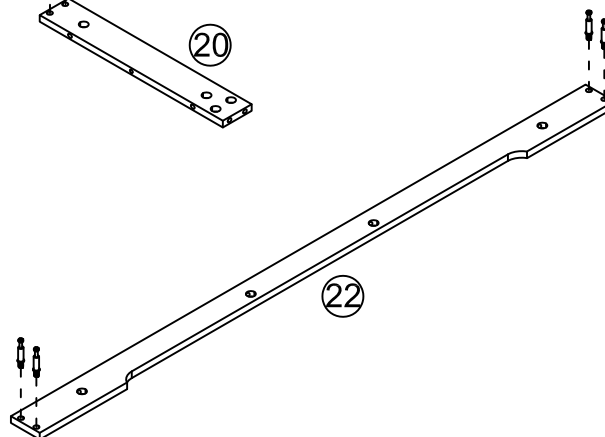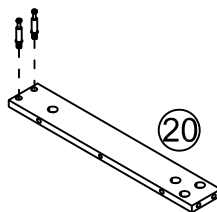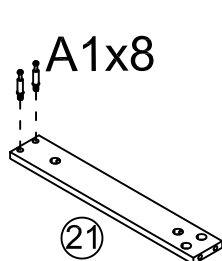


Step 26


	
A2	8PCS

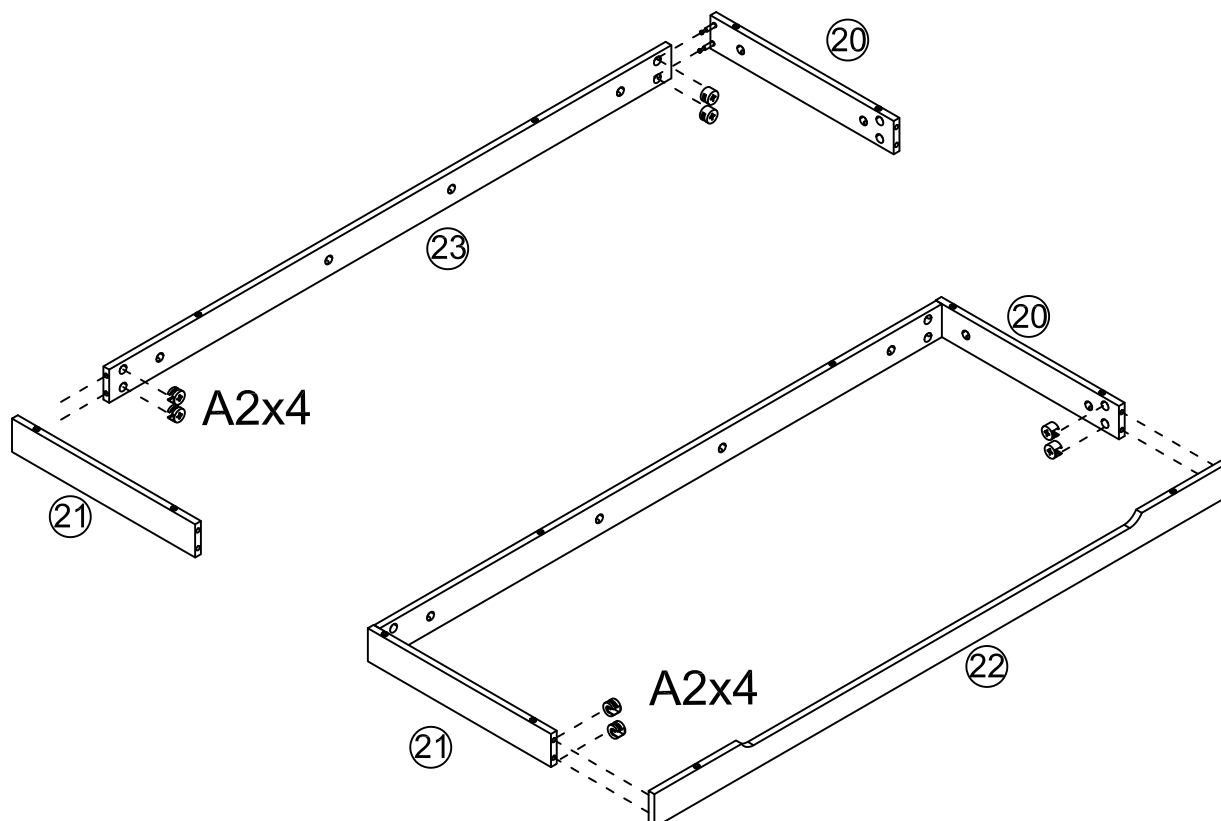


Assemble


Step 27

				
C1	6PCS	A2	12PCS	

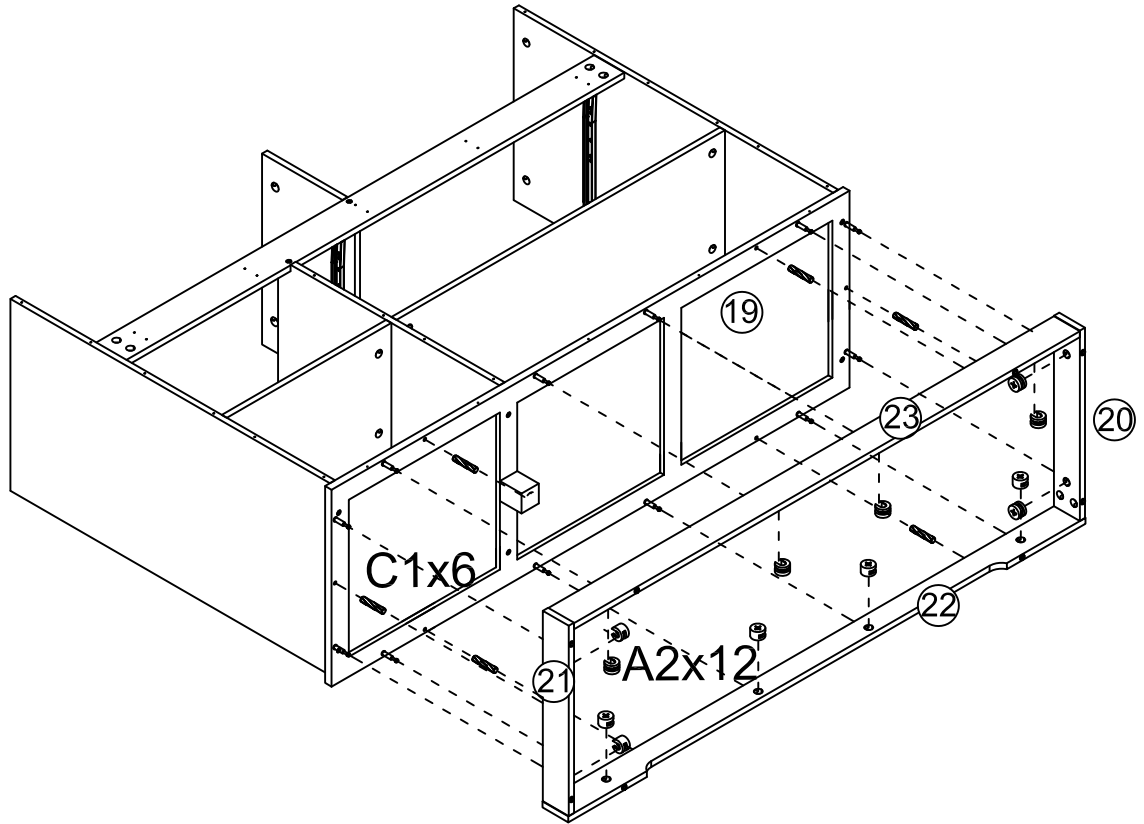


Step 28


		
B3	31PCS	

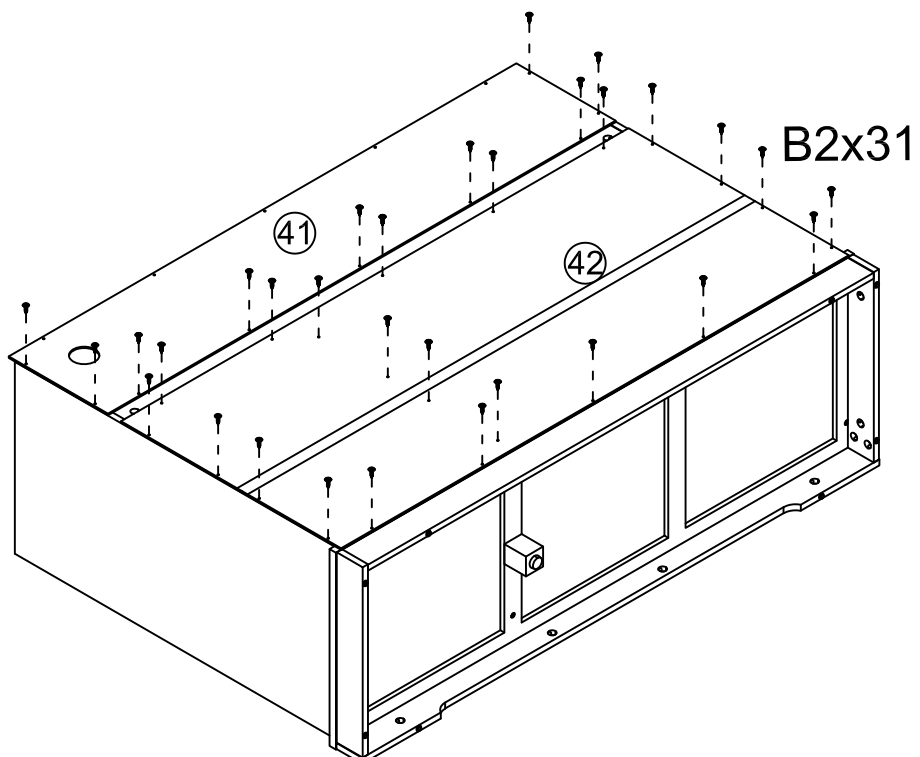

Assemble

Step 29

				
C1	6PCS	A2	6PCS	

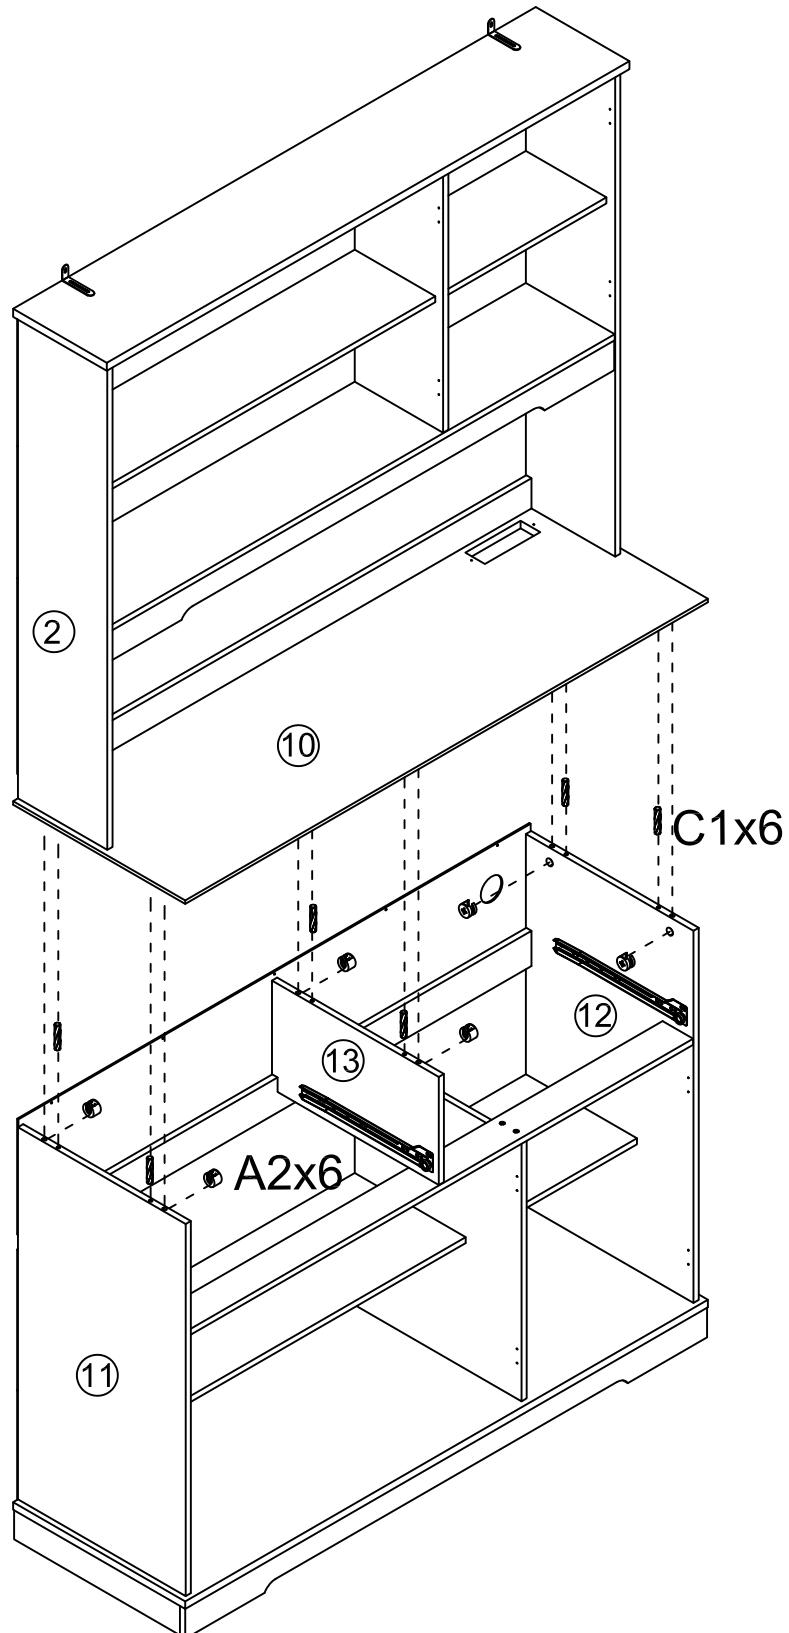



Assemble

Step 30




B2


5PCS

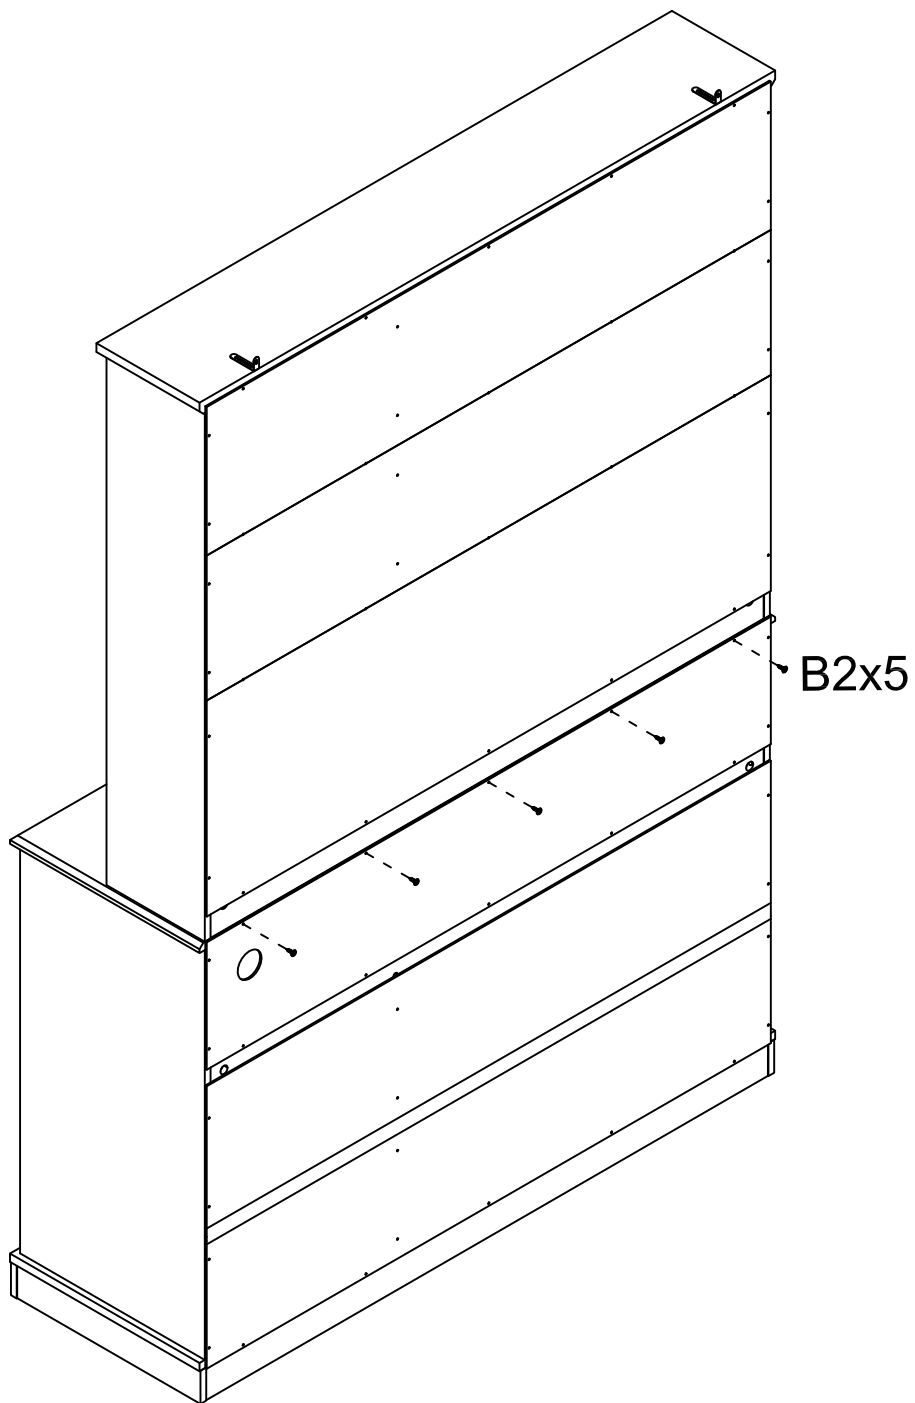





Assemble


Step 31

								
C2	6PCS	B1	13PCS	D3	3PCS	D3	6PCS	

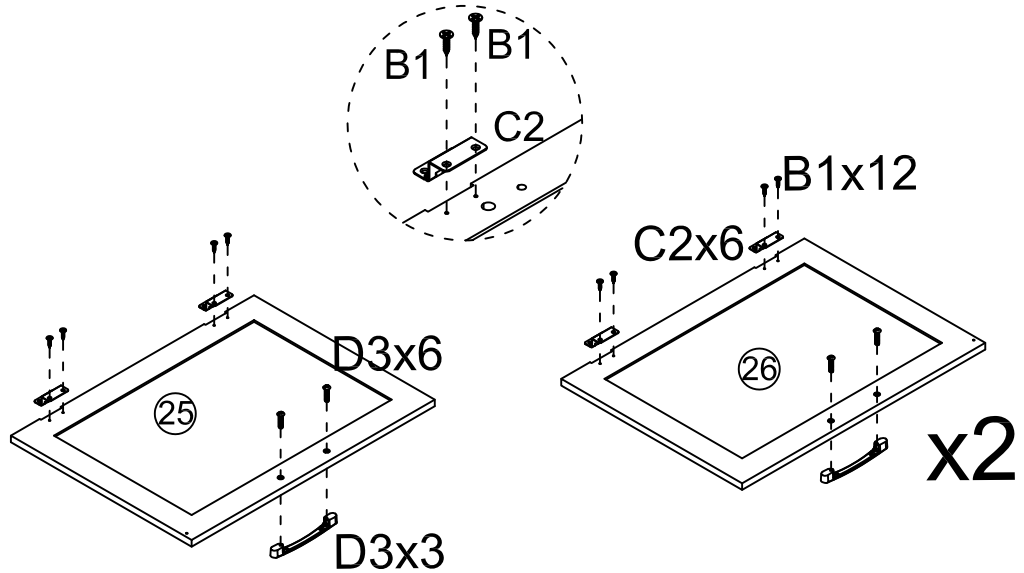


Step 32

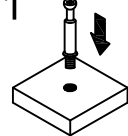
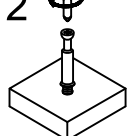
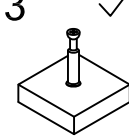
									
C2	6PCS	B1	12PCS	B3	6PCS	D2	3PCS		
				 1  2  3 					
D3	6PCS	D3	3PCS						

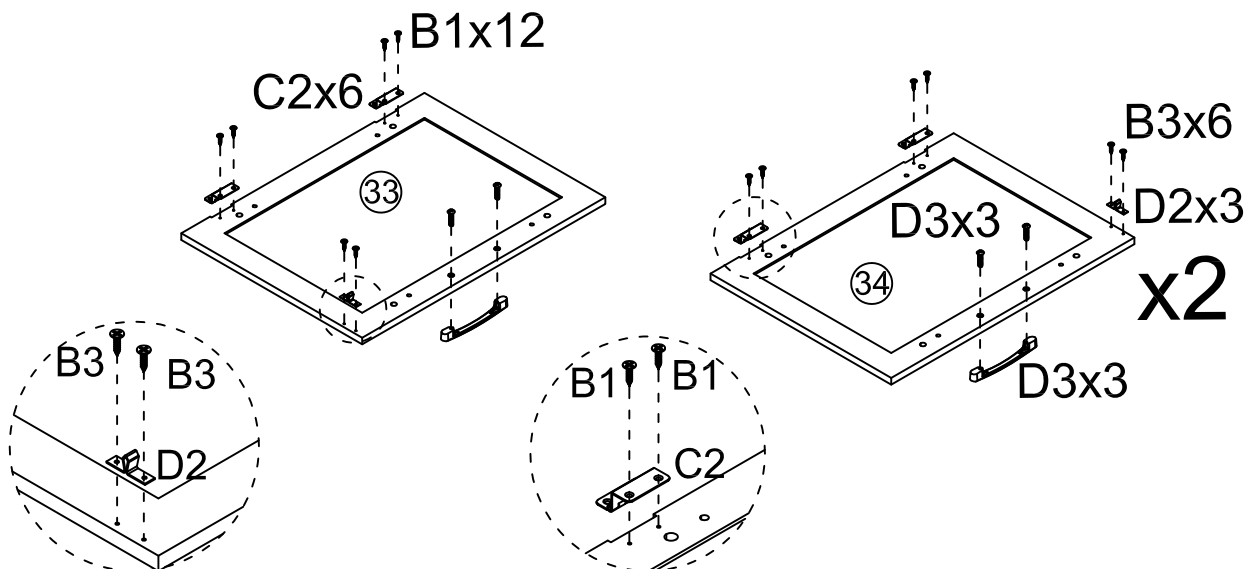


Assemble





Step 33

			
A1	12PCS		

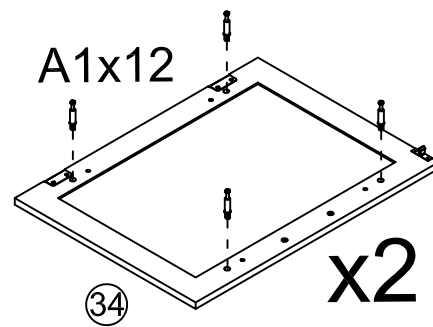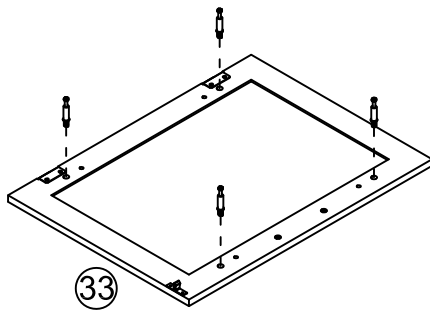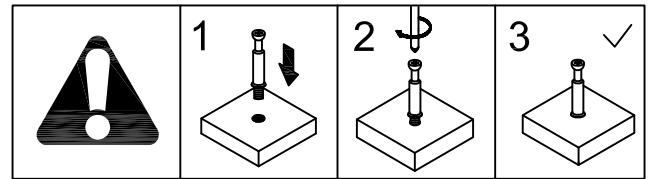


Step 34



					
A1	24PCS	A2	12PCS		

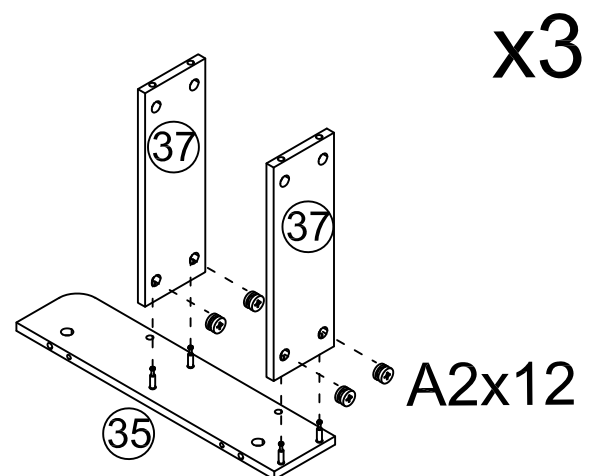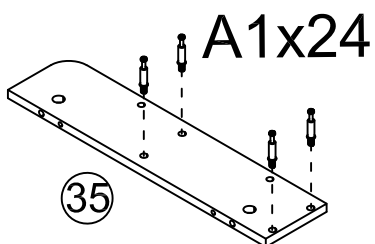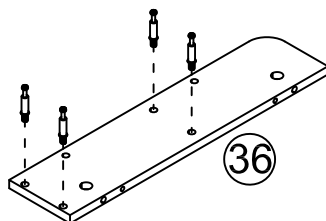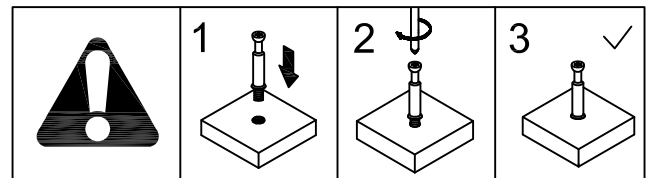


Assemble



Step 35

				
A2	12PCS			

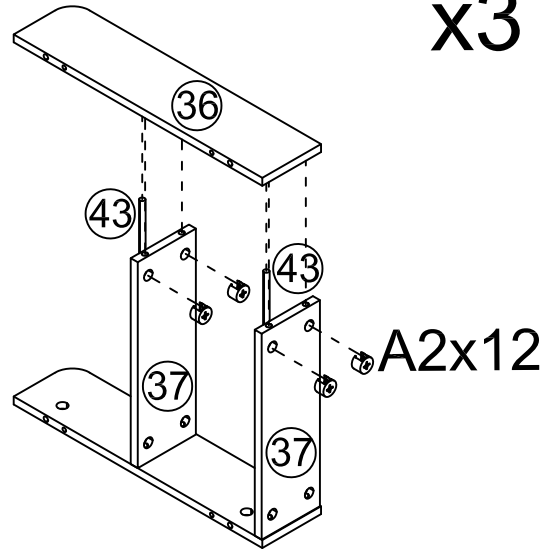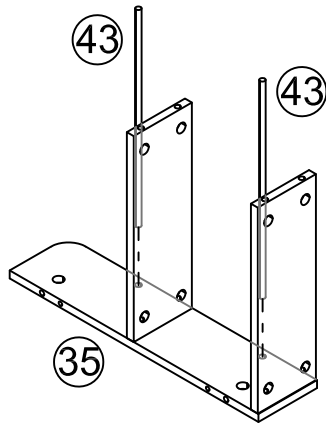


Step 36


				
C1	12PCS	A2	12PCS	

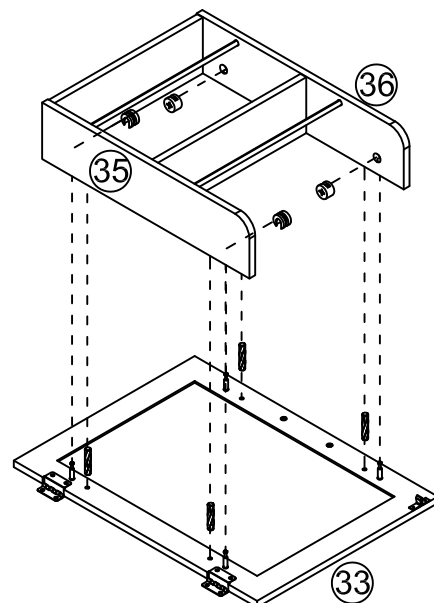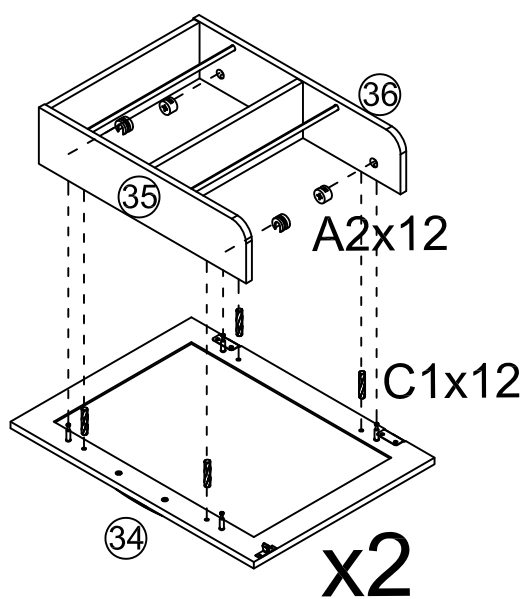

Assemble


Step 37


				
B1	27PCS	D5	3PCS	

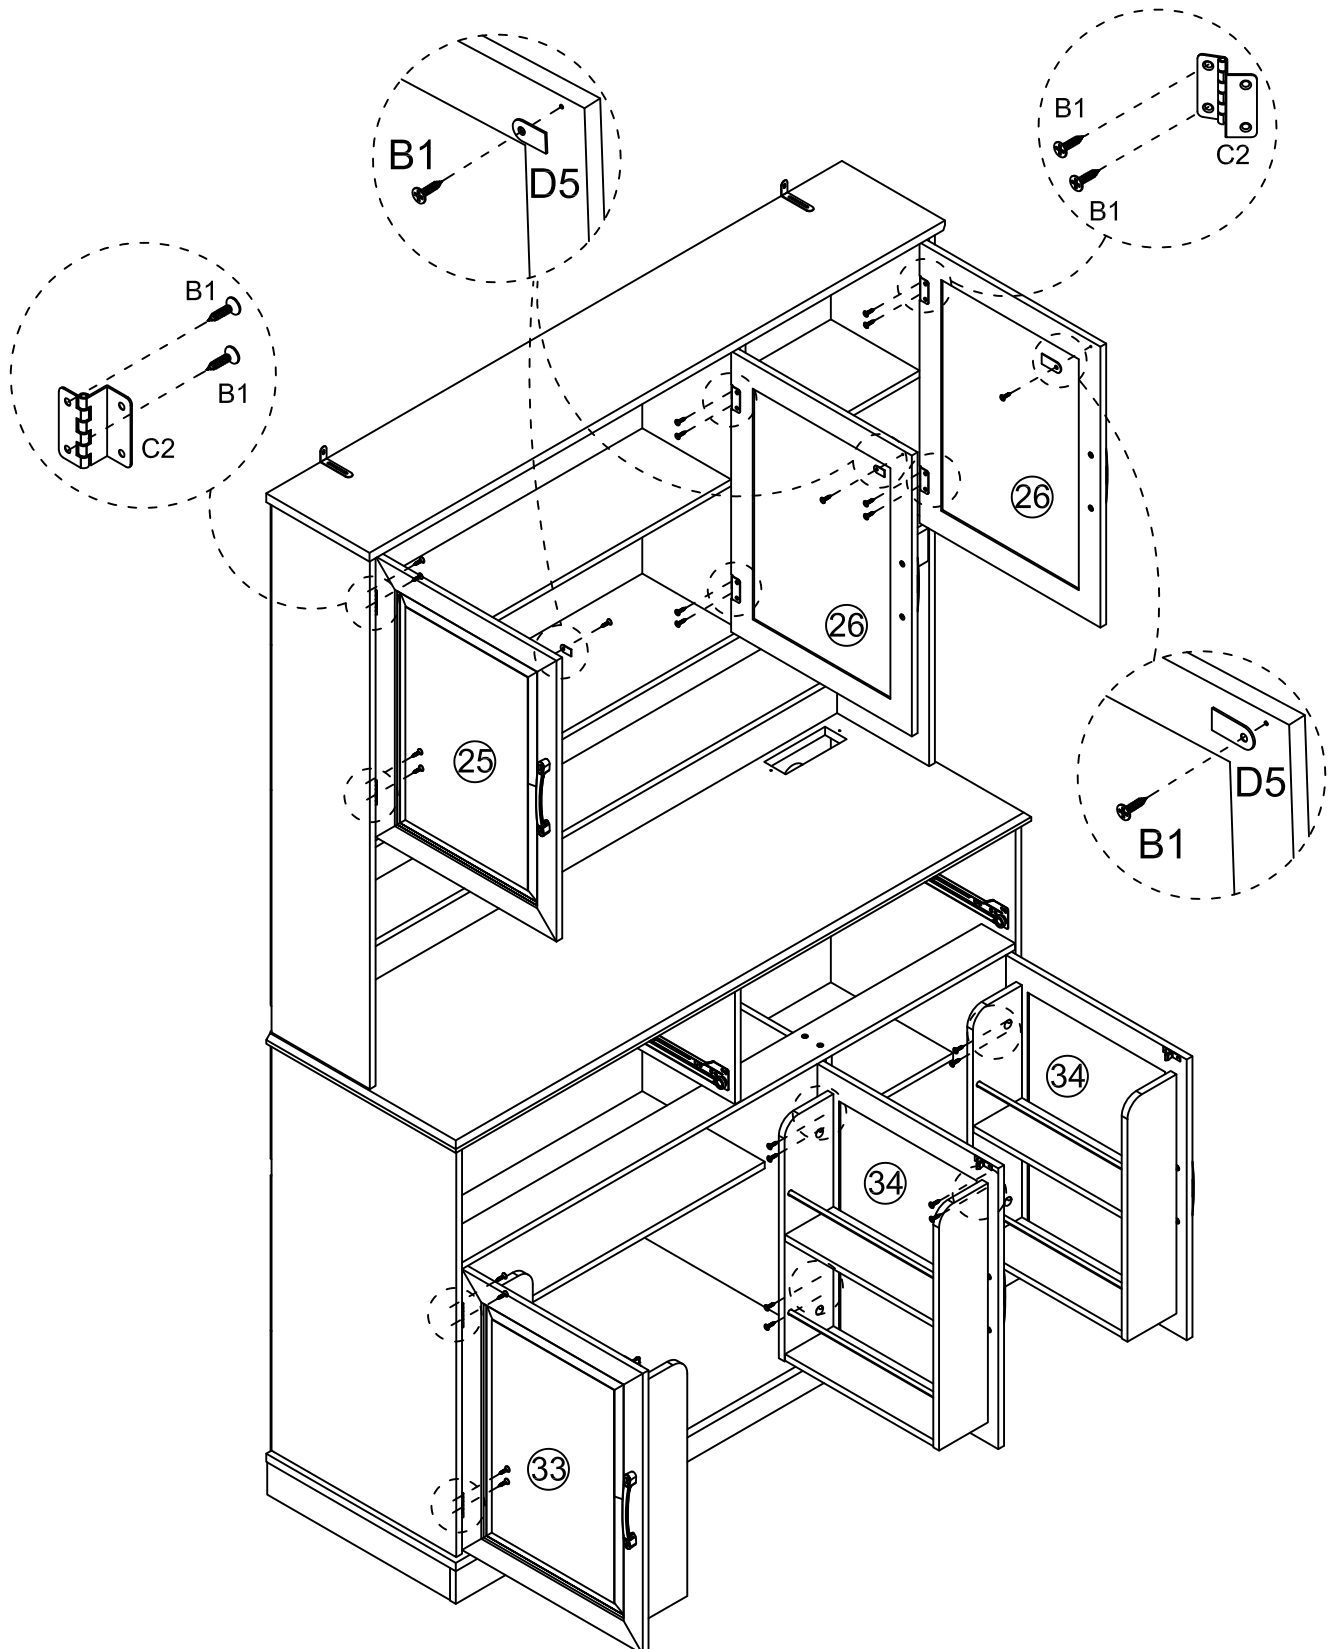

Assemble


Step 38

				 
PC	2PCS	PC	1PC	

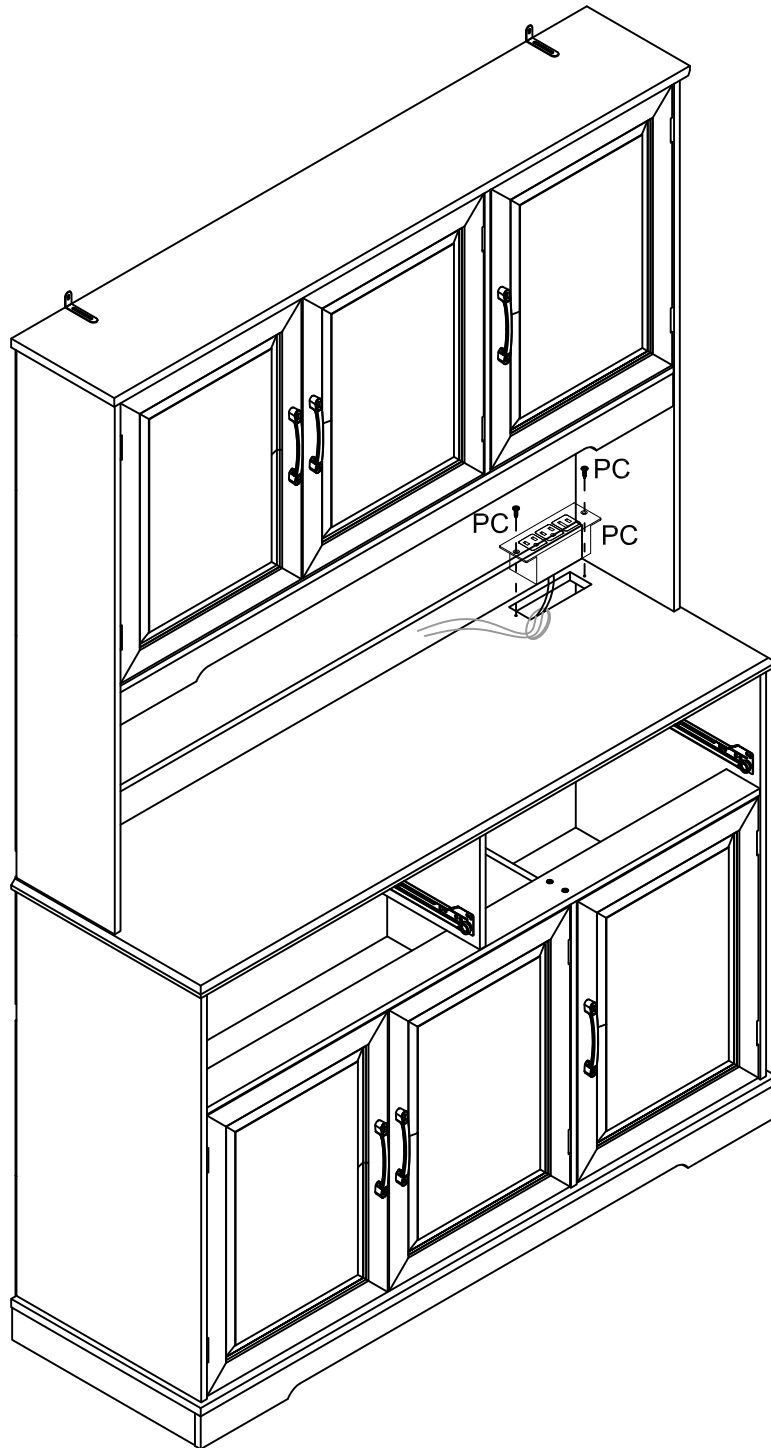


Assemble


Step 39

				
B6	10PCS			



x2

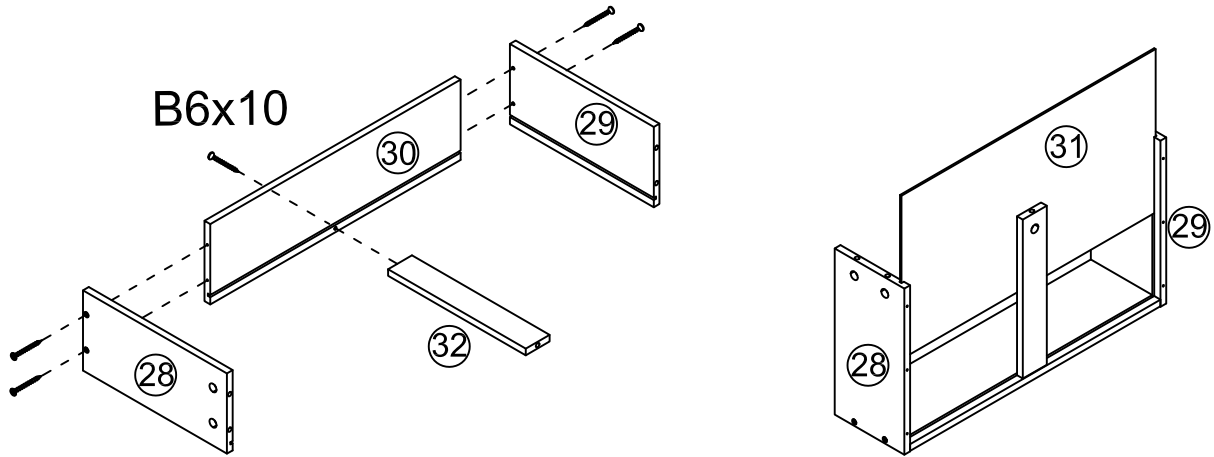

Step 40


								
A1	10PCS	D7	4PCS	D7	2PCS	A2	10PCS	

x2

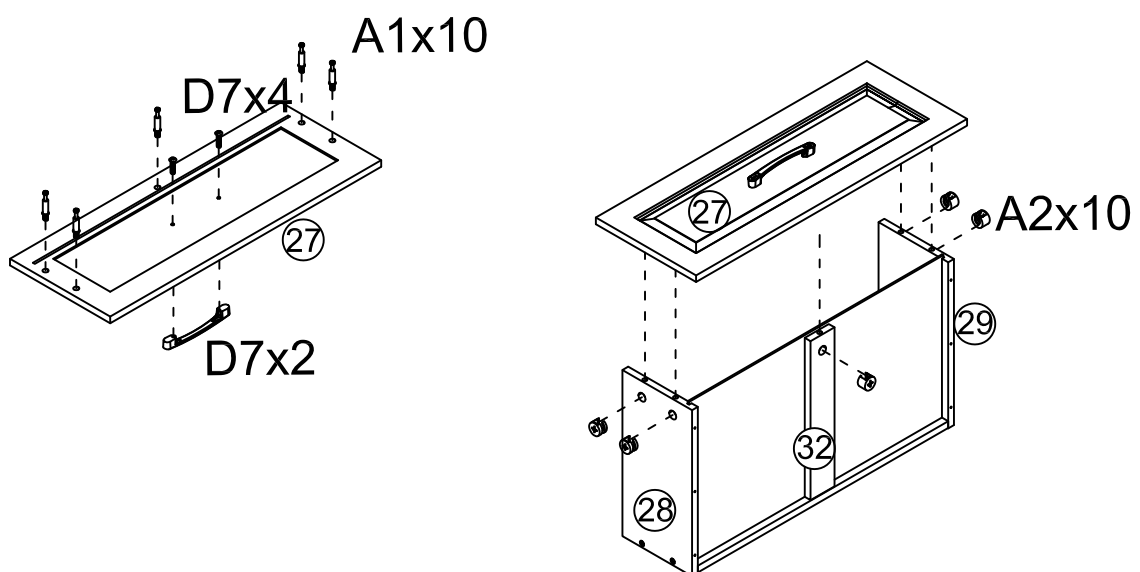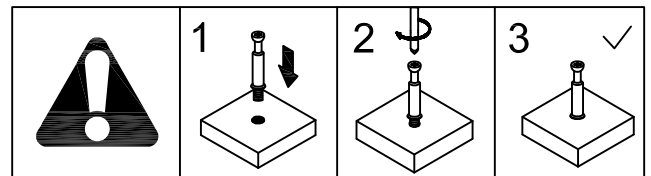


Assemble



Step 41

						
DL	2PCS	DR	2PCS	B4	12PCS	

x2

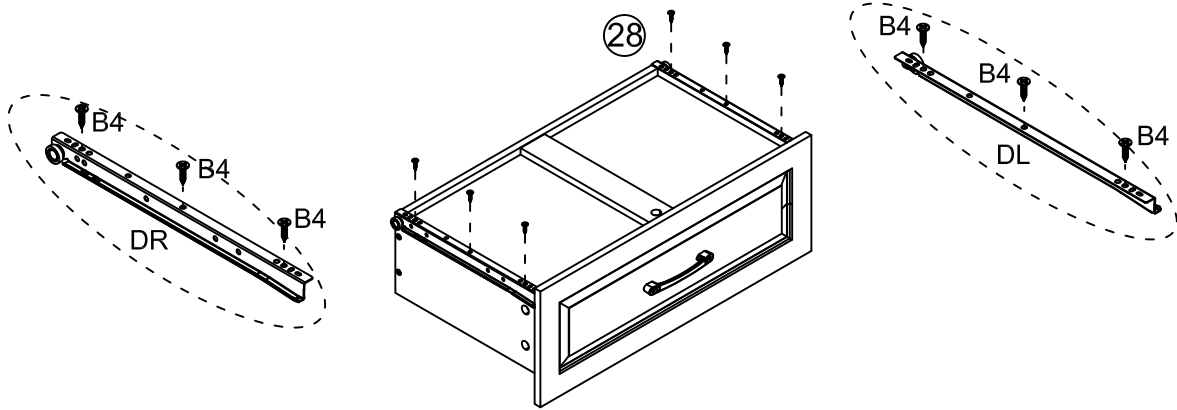



Step 42

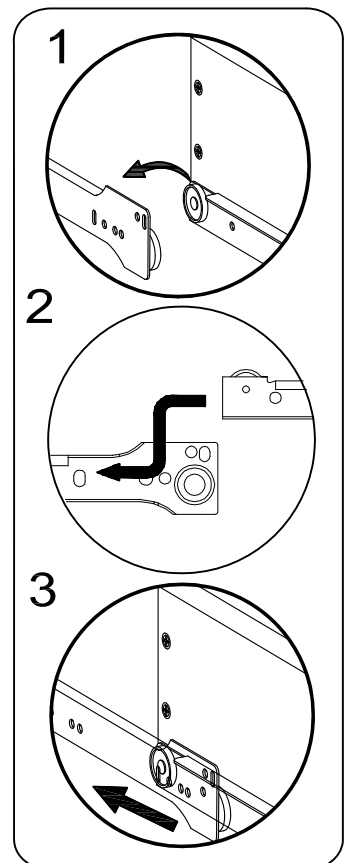
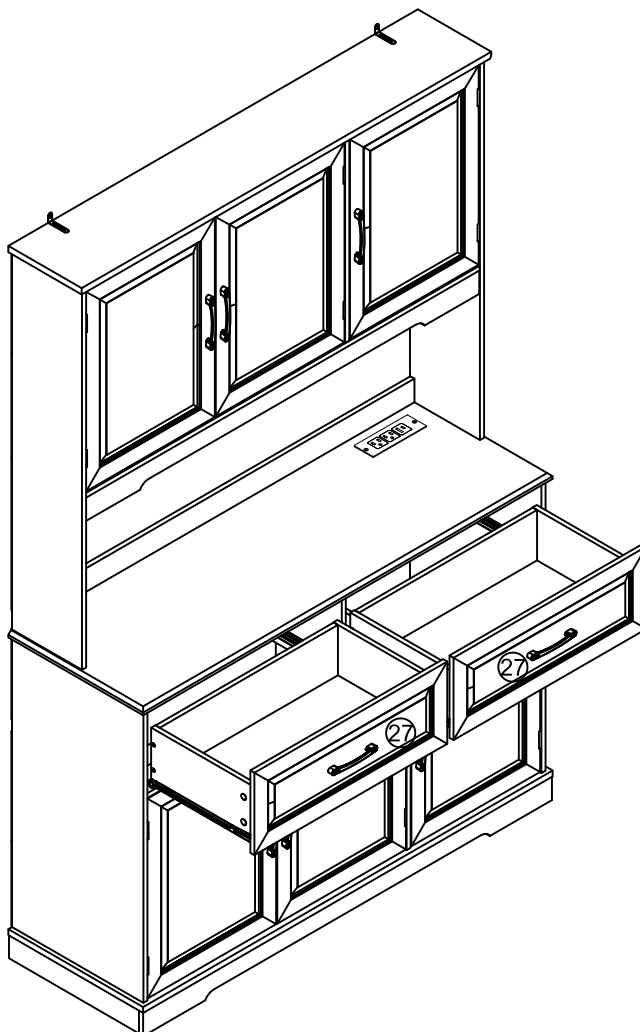


Assemble

Step 43

						
D1	2PCS	D1	2PCS	C4	113PCS	


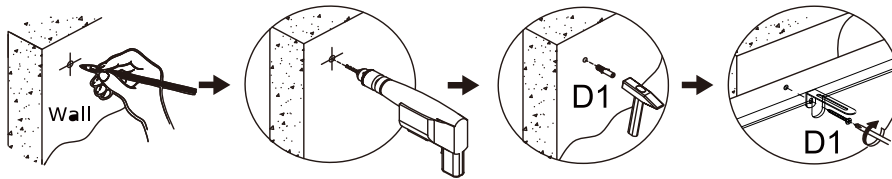


A solid wall	B cavity wall	C solid wood
		
Φ6mm (1/4") 	Φ6mm (1/4") 	Φ3mm (1/8") 



Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipe
3. Knock the expansion pipes into the wall hole
4. Place the furniture in the corresponding position and tighten the waconnection device with screws.

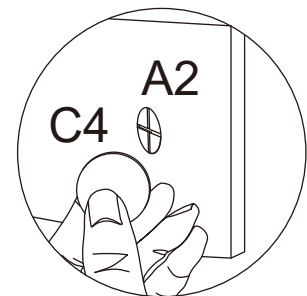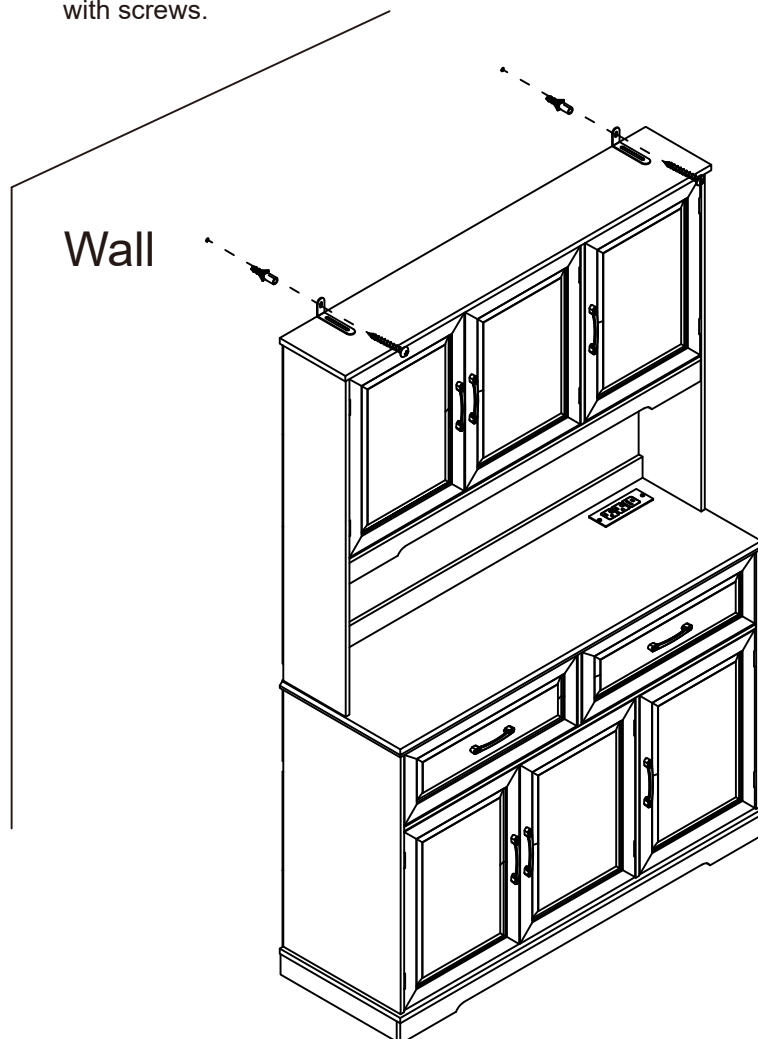

Use the stickers I
to cover the holes